



Nikon Coolpix L810 Flash Replacement

Replace the flash from your Nikon Coolpix L810.

Written By: Emilio Mena



INTRODUCTION

Is your flash not lighting up? This guide will show you how to replace the flash from your camera.



TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Soldering Iron](#) (1)
-

Step 1 — Flash



- Remove two 5 mm Phillips #000 screws below the flash component.
- ⓘ In order to complete this step the flash must be open. To open the flash press the button located above the lens on the leftward side of the camera.

Step 2



- Use blue plastic opening tool to pry open the casing for the flash.

Step 3



- Remove the plastic casing surrounding the flash.

Step 4



- Pull the wires connecting the flash out of the camera.

Step 5



- Unsolder the wires that connect the flash component.

To reassemble your device, follow these instructions in reverse order.