



Nikon Coolpix L810 Battery Replacement

If your camera is not turning on or reacting to...

Written By: Emilio Mena



INTRODUCTION

If your camera is not turning on or reacting to anything you do, follow this guide on how to change the batteries.

⚙️ PARTS:


[AA Battery](#) (4)

Step 1 — Battery



- Orientate the camera so that the lens is pointing left. The battery door is located on the bottom of the camera.
- To unlock the battery door slide the switch on the battery door to the right.
- Slide the battery door towards you and lift to open.

Step 2

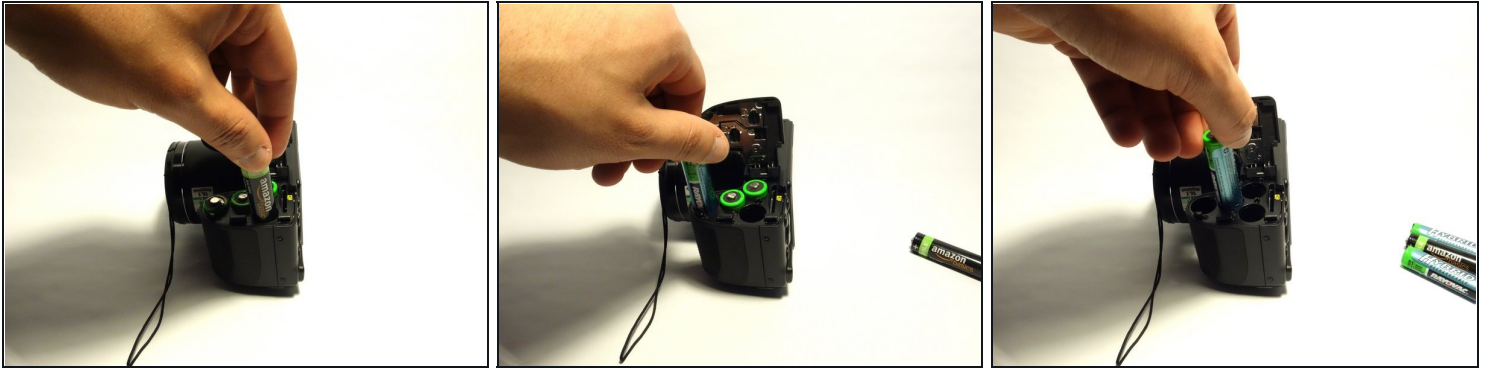

- Remove four AA batteries one by one from the camera, making note of the proper alignment.

To reassemble your device, follow these instructions in reverse order.