




# XQ-673H Power Cord Replacement

This guide will show the owner how to take apart the device and show the owner how to replace the power cord.

Written By: Sean Perry

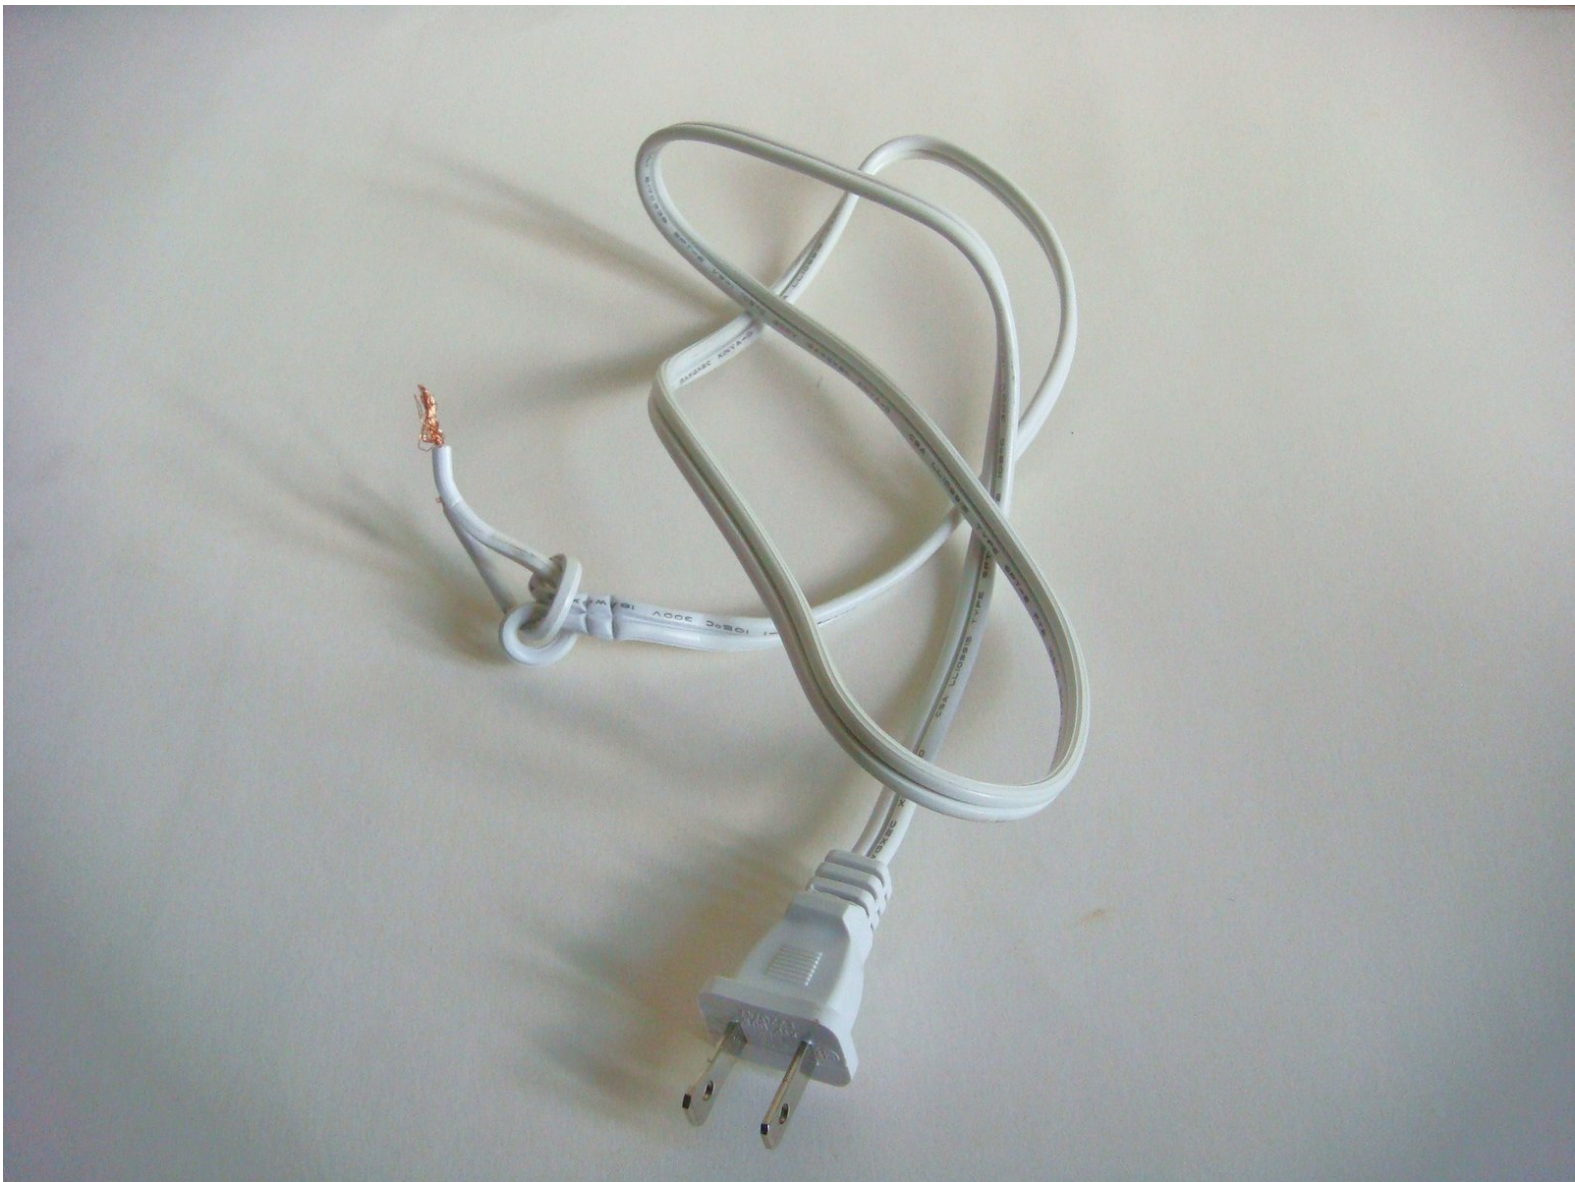

## INTRODUCTION

This guide will help the owner of a Kitchen Gourmet XQ-673H replace the power cord.



### TOOLS:


- [Phillips #1 Screwdriver](#) (1)
  - [Small Needle Nose Pliers](#) (1)
  - [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
  - [Utility Scissors](#) (1)
-

## Step 1 — Power Cord



- Turn the Kitchen Gourmet upside down.
- ⚠ Make sure the device is unplugged before continuing.


## Step 2

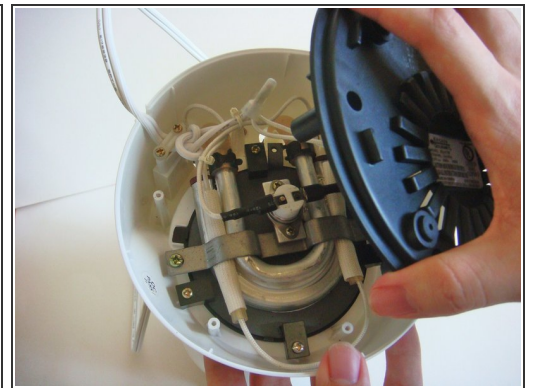

- Using a phillips #1 screwdriver, remove the six 10mm screws found on the bottom of the device.
- Remove the bottom cover.



### Step 3

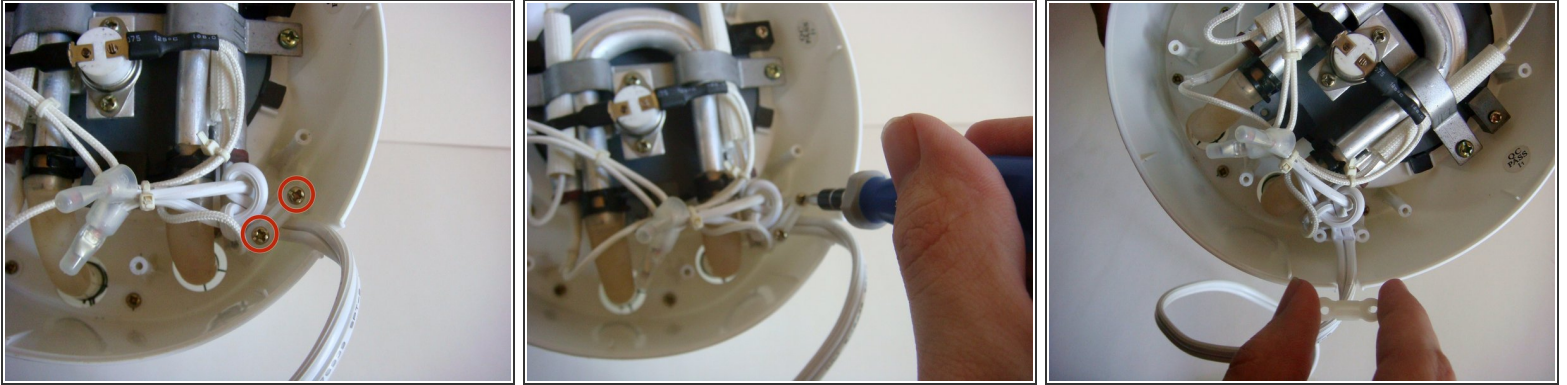

- Using a Phillips #1 screwdriver, unscrew the 11mm screws.
- Remove the plastic bar that is holding the Power Cord down.

### Step 4




- Using scissors, carefully cut the zip tie.
- Careful not to cut the Power Cord.

## Step 5



- Using small needle nose pliers, gently squeeze the side so it allows the metal clamp to open up.
- Gently pull off the plastic cover.
- Repeat this step with the other plastic cover.

## Step 6

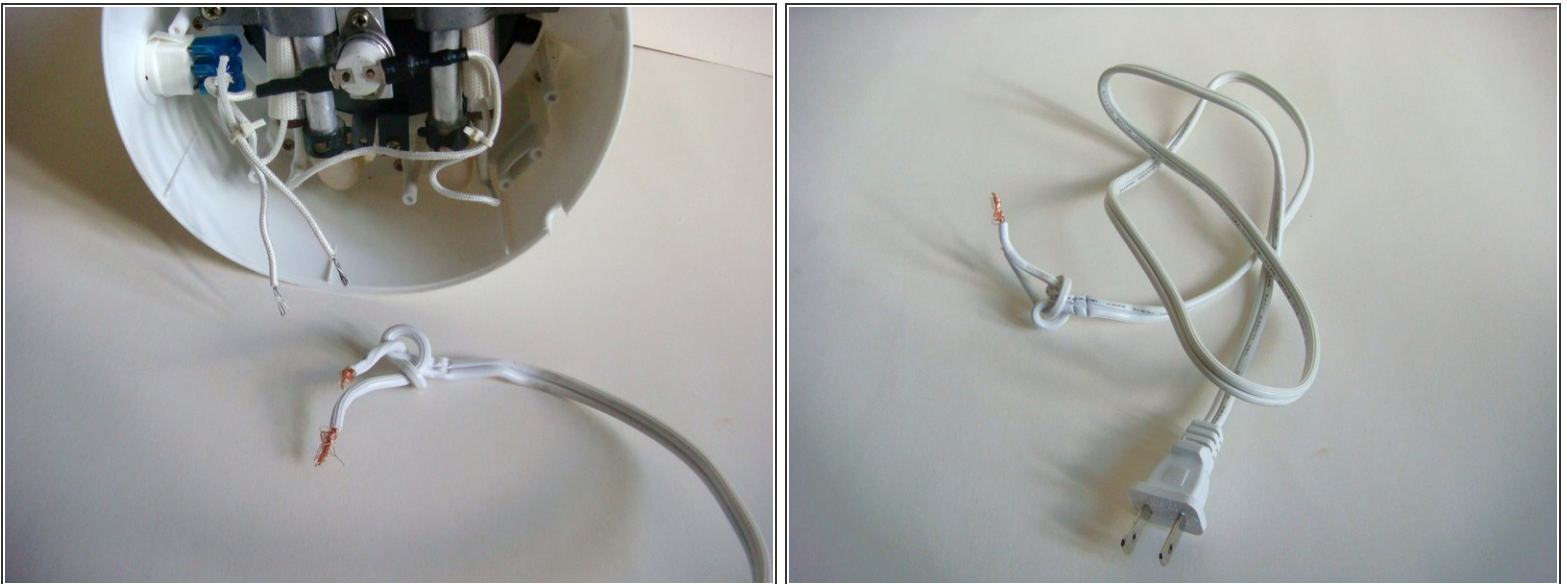

- Remove the Power Cord from the device.

To reassemble your device, follow these instructions in reverse order.