



# Olympus Tough TG-1 Clip Slip Replacement

Removing the clip slip will allow you to begin to break down the rest of the camera. This is useful if you need to replace the back plate.

Written By: Grant Lee



---

## INTRODUCTION

Check to see if the back plate can be placed back onto the camera. Make sure there are an even number of clips on the back plate. If one or more clips seems to be broken, the back plate needs to be replaced.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Clip Side Repair



- Remove both 6 mm screws from the clip side of the camera.
- After you have removed the two screws, remove both the clip and the plate behind the clip so that the inside of the camera is exposed.
- ⓘ If one of more of the clips appear to be broken, the back plate might need to be replaced.

To reassemble your device, follow these instructions in reverse order.