



# Munchkinz Speaker Replacement

Here is a step by step guide to replace the speaker in a Supersonic Munchkinz tablet

Written By: David Wood



---

# INTRODUCTION

If your speaker is not functioning correctly, follow this guide and replace the speaker.


---



## TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Soldering Iron](#) (1)
-


## Step 1 — Opening Device

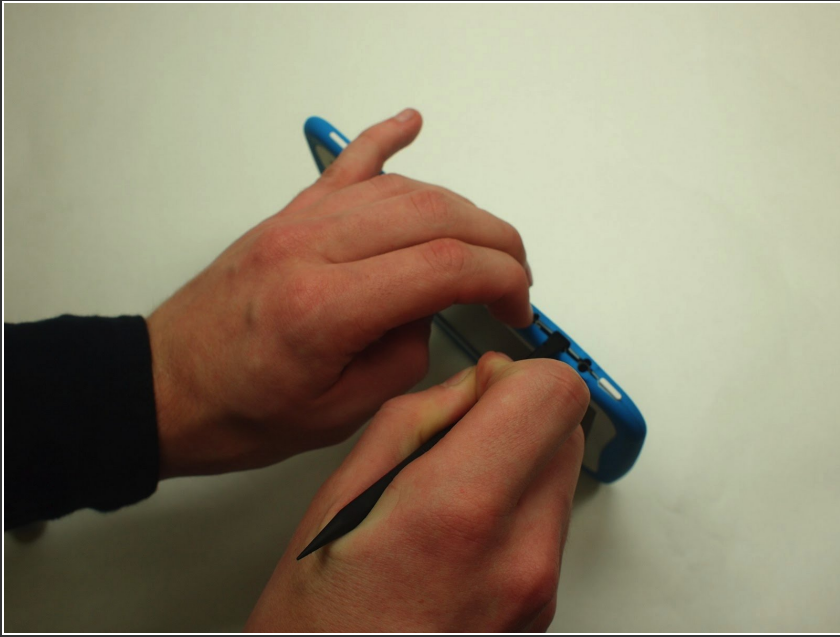

- Insert spudger into the USB Micro slot and pry the case apart.

⚠ Be careful not to go too deep and bend the prong inside the Micro USB port.

## Step 2 — Pry Device Apart

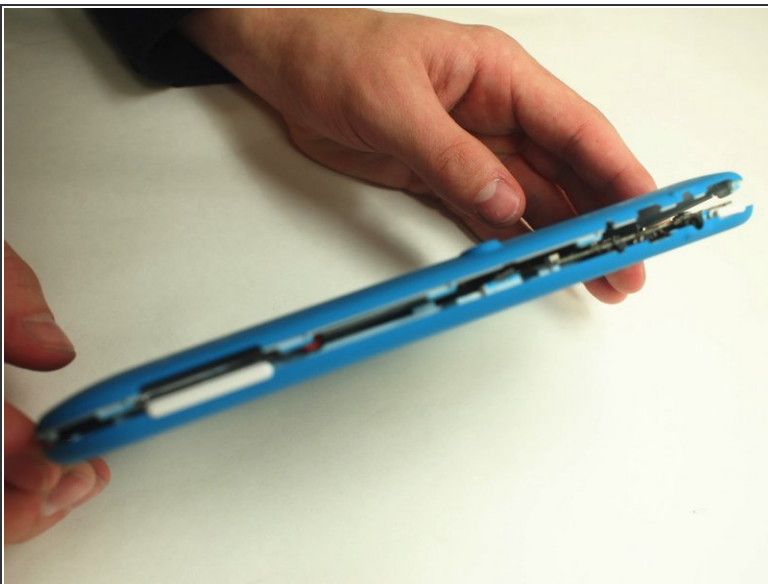

- Slide the wide plastic opening tool across the seam, separating it if you can't pry the device open using just the spudger.

⚠ Gently separate the case so none of the cords inside are disconnected





### Step 3 — Separated Device



- After prying the device apart, it should look like this.

### Step 4 — Pry Speaker

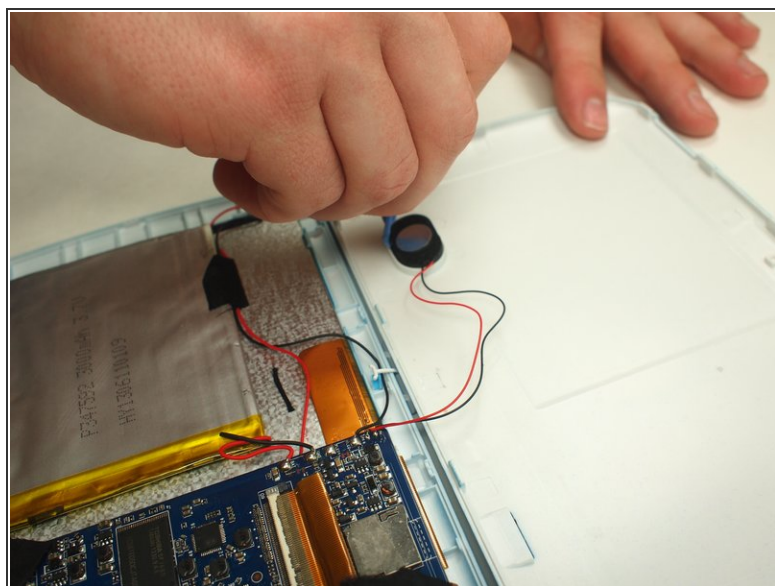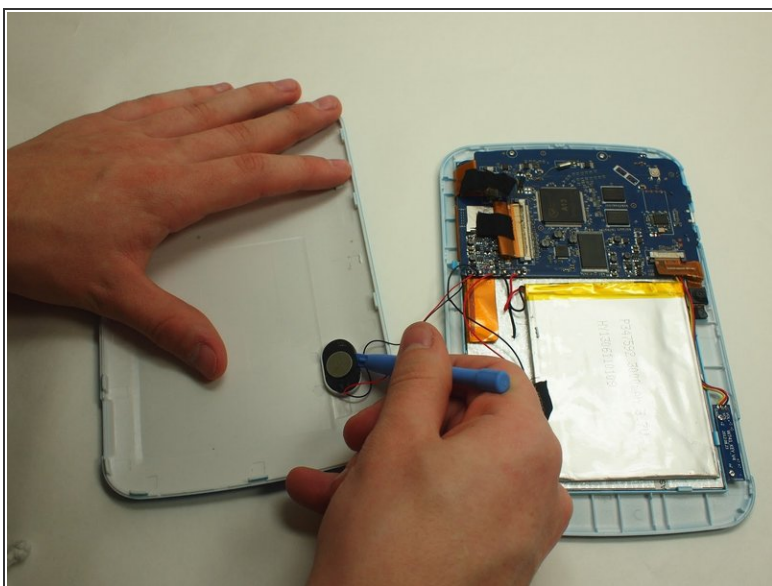


- Use the slim plastic opening tool to remove the speaker from its position on the case.

## Step 5 — Locate Wires



- Locate the red and black wires that connect the speaker to the motherboard.

## Step 6 — Solder Wires

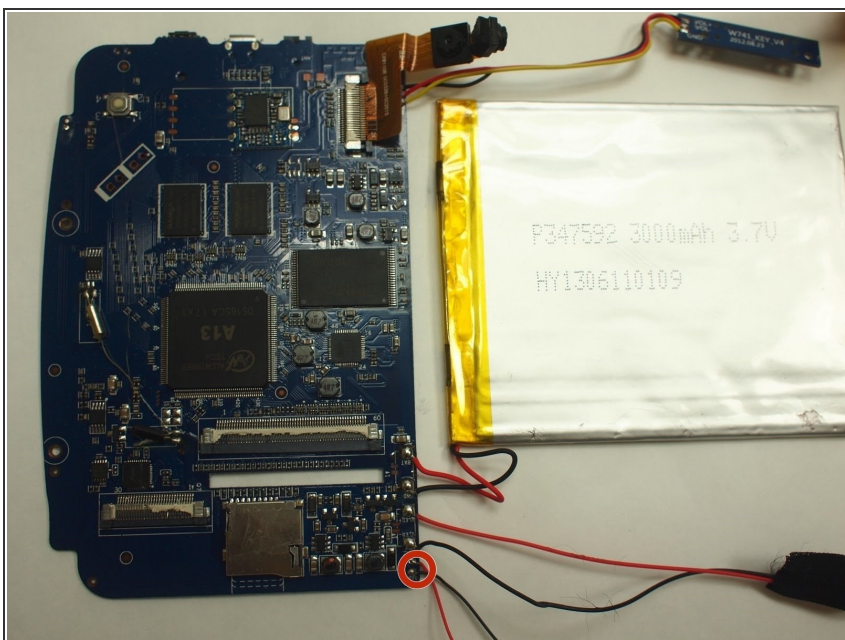

- Un-solder the red and black speaker wires that are connected to the motherboard

To reassemble your device, follow these instructions in reverse order.