


Circo Monkey Alarm Clock Motor Replacement

We will show how to open the clocks motor to control that controls the hand

Written By: Frank




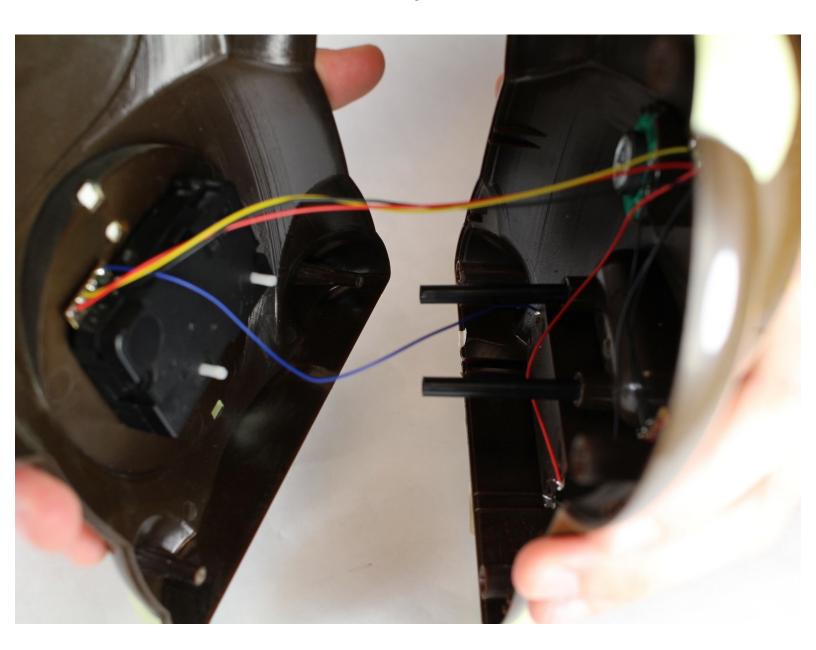

Phillips #00 Screwdriver (1)

Step 1 — Screw Removal



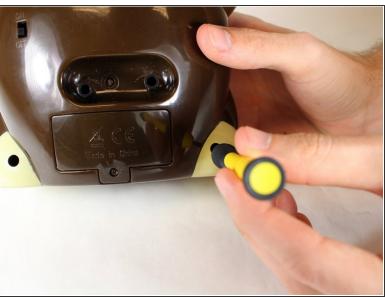


Remove all six 7.3 mm screws with a #00 Phillips head screwdriver.

Step 2 — Splitting the Shell in Half



Firmly pull each half apart.


Step 3 — Clock Motor

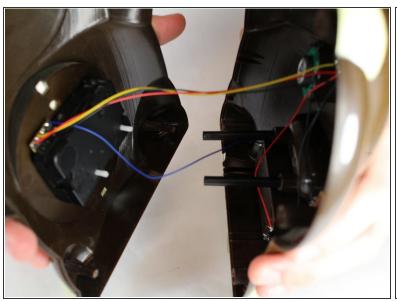




Once the clock is apart, carefully pull both halves until the clock is in two separate halves.


Step 4

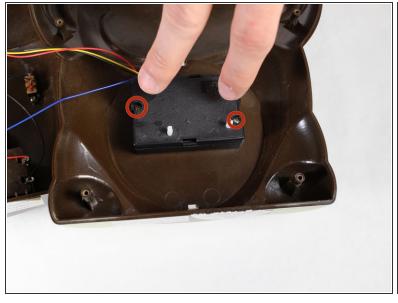


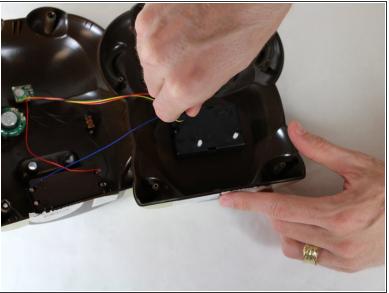


Unscrew the two 2 mm screws with a #00 Phillips Head screwdriver.

Step 5

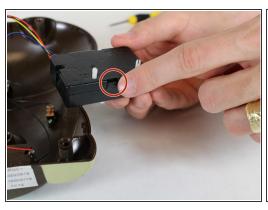


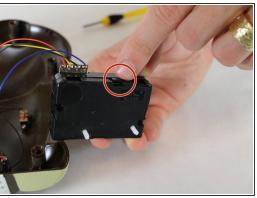

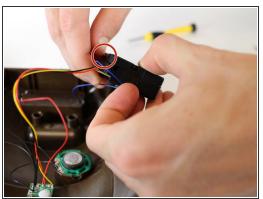

• Pull off the clock motor housing and un-clip the 4 clips on each side.

Step 6

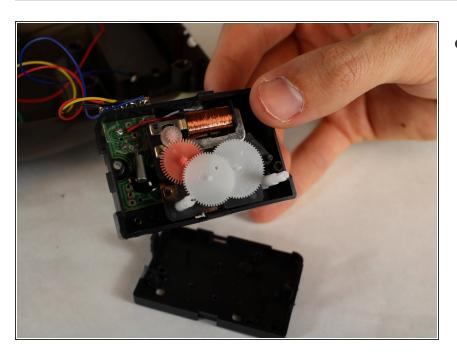

 Repair any lose or misplaced gears or wiring.

To reassemble your device, follow these instructions in reverse order.