



Nikon COOLPIX P500 Front Case Replacement

A guide for removing and replacing the front case on a Nikon COOLPIX P500 camera.

Written By: Kevin Scott



INTRODUCTION

This guide will demonstrate how to isolate the front case of the camera from the rest of the device.

TOOLS:

- [Spudger](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Soldering Iron](#) (1)
-

Step 1 — Battery



⚠ Electric shock is a huge risk if the battery is not removed while taking the camera apart.

- Press down and forward on the battery cover latch.
- Push the orange latch, in the direction of the arrow on it, to release the battery.

Step 2 — Motherboard





- Remove all the marked screws using a PH00 screwdriver.
- Remove the two 3mm screws on the grip.
- Remove the two 4mm screws on the side opposite the grip.
- Remove the three 4mm screws on the base of the camera.
- Remove the four 3mm screws on the base of the camera.

Step 3 — Removing hidden screws




- ✦ Open the flash module of the camera.
- Remove the 2mm screw from the microphone metal grid using a PH00 screwdriver.
- Remove the 4mm screw that was under the metal microphone grid using a PH00 screwdriver.

Step 4

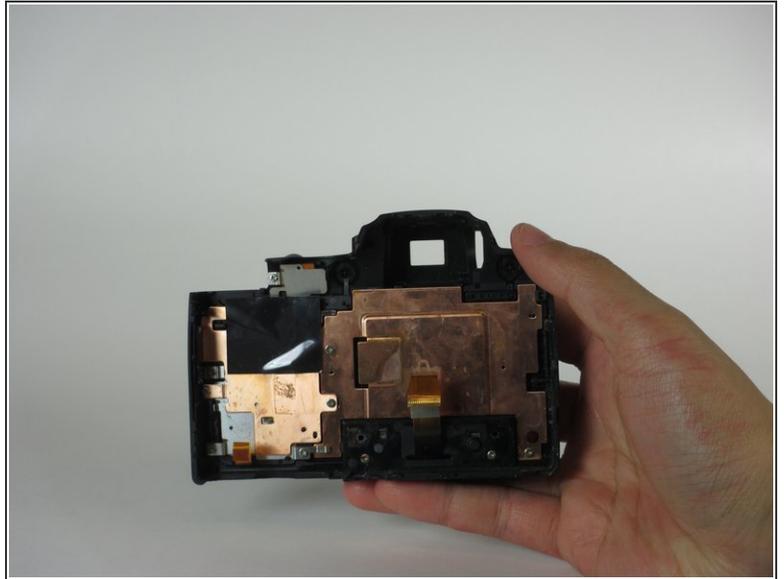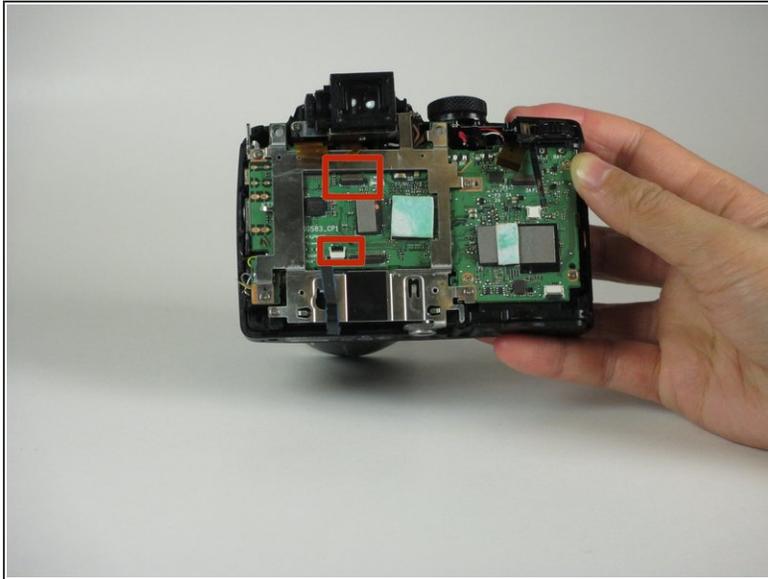


- Separate the two parts of the body of the camera slightly.
- Release the two cables by lifting up their respective clips with a spudger.
- ⓘ Make sure not to pull too hard because there are connector ribbons.
- ⓘ Detach the connector ribbons before fully separating the camera into two pieces.
- ⓘ These pictures were taken after the connector ribbons were released and the camera was separated into two parts. You will need to release the connector ribbons while the camera is still in one piece before you can separate it like the pictures.

Step 5

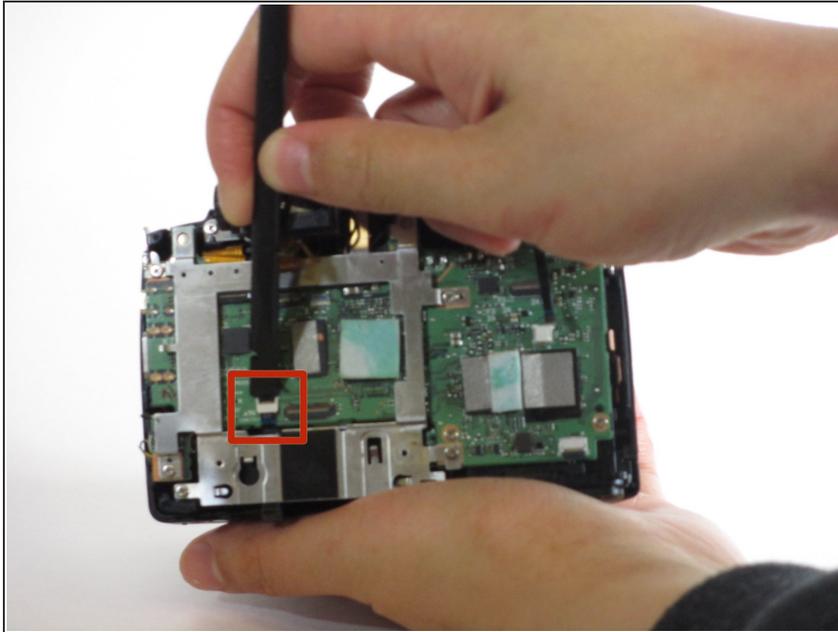



- Use a spudger to flip up the cable lock in order to release the ribbon.

Step 6

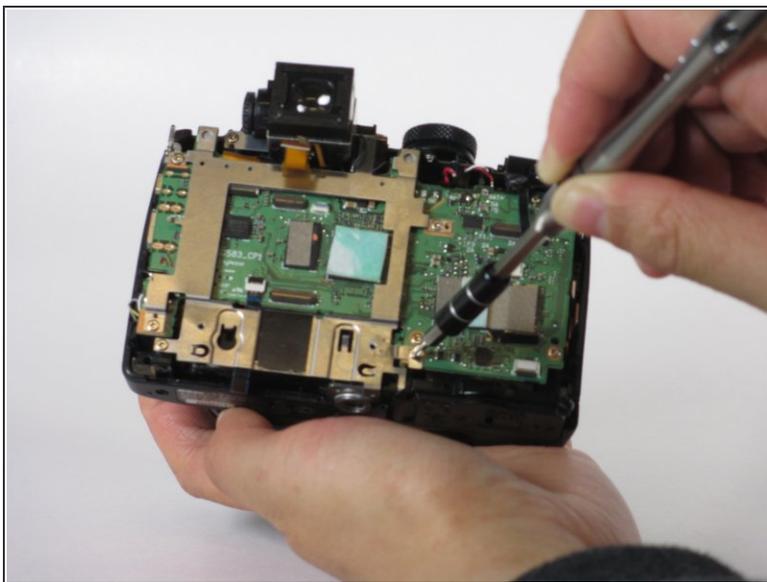

- Use a PH00 screwdriver to unscrew the four labeled 3mm metal screws on the metal backing.
- Remove the four labeled 4mm screws connected to the motherboard.
- Remove the metal support.



Step 7

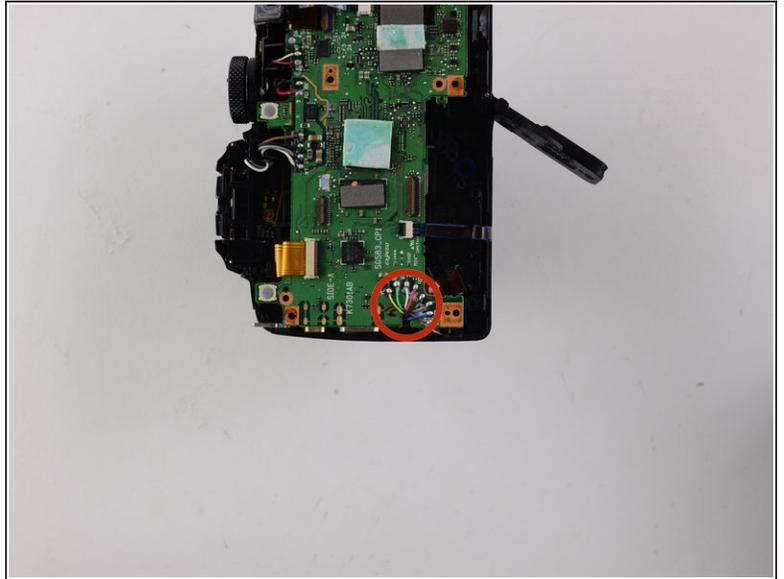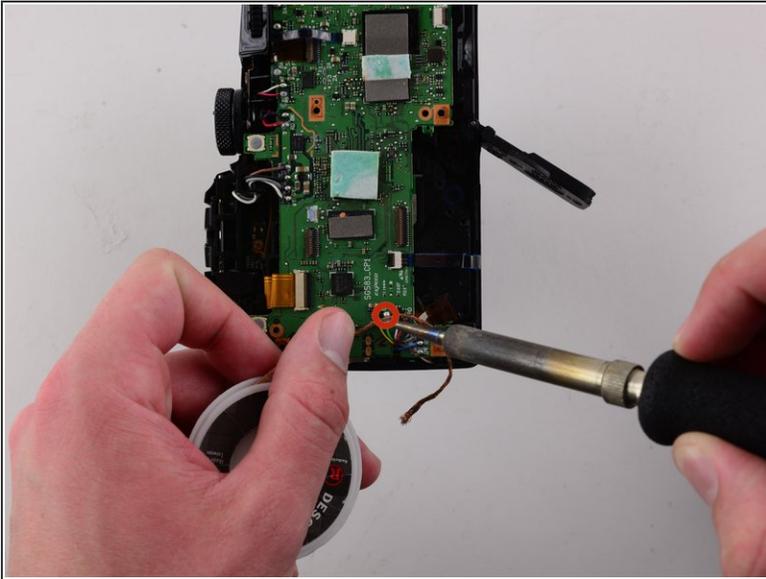

- Desolder the labeled soldering points.


⚠ Soldering irons are very hot. They can damage your device and inflict physical harm if proper care is not taken.

Step 8

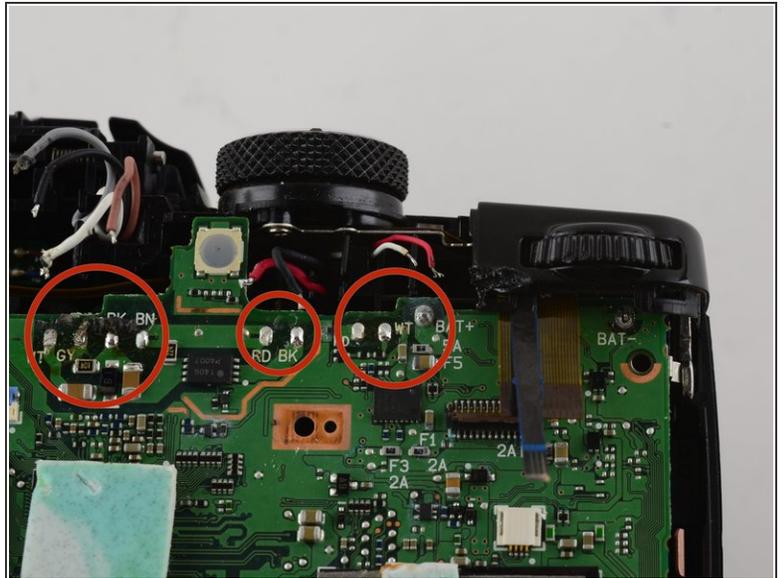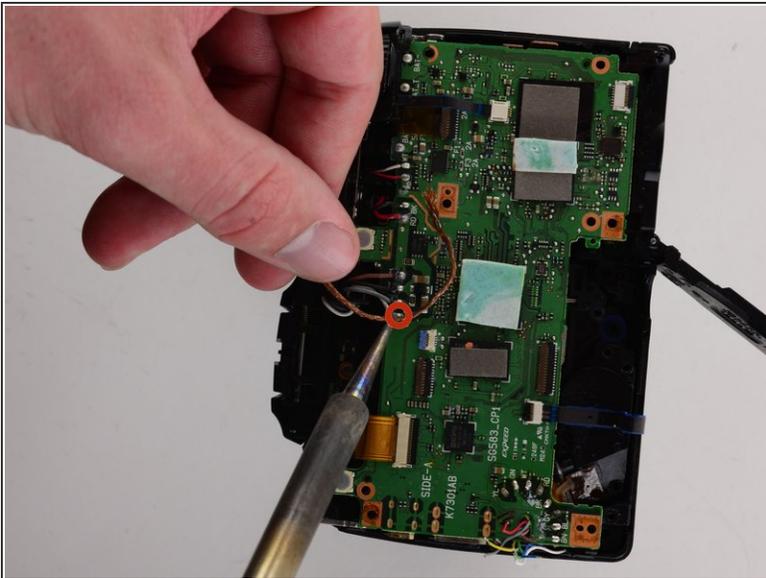


- Desolder the labeled soldering points.

Step 9

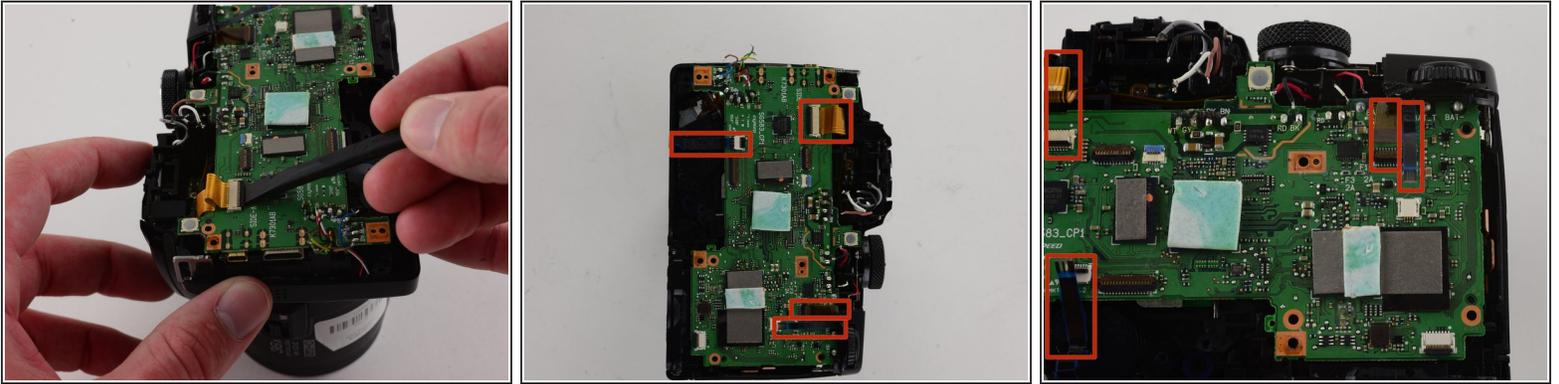


- Use a spudger to unlock the labeled connector ribbons.
- Disconnect the labeled connector ribbons.

Step 10

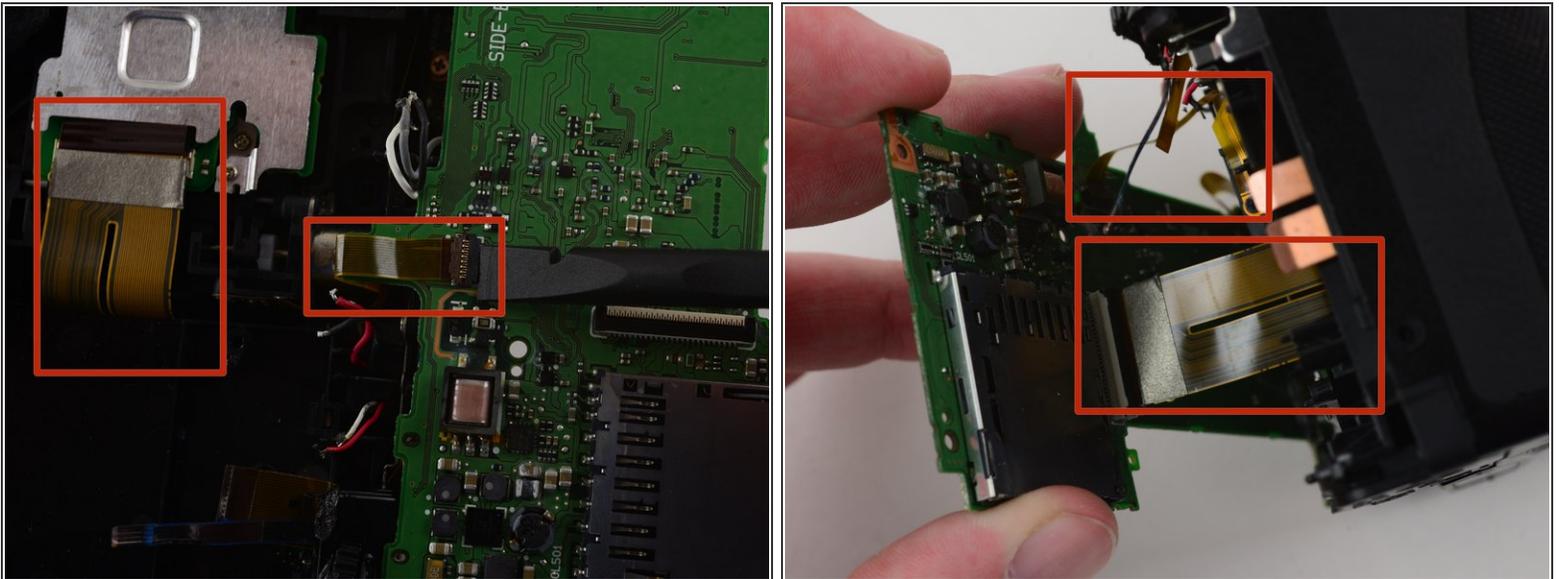

- Use a spudger to unlock the two connector ribbons.
- Disconnect the two connector ribbons.

Step 11

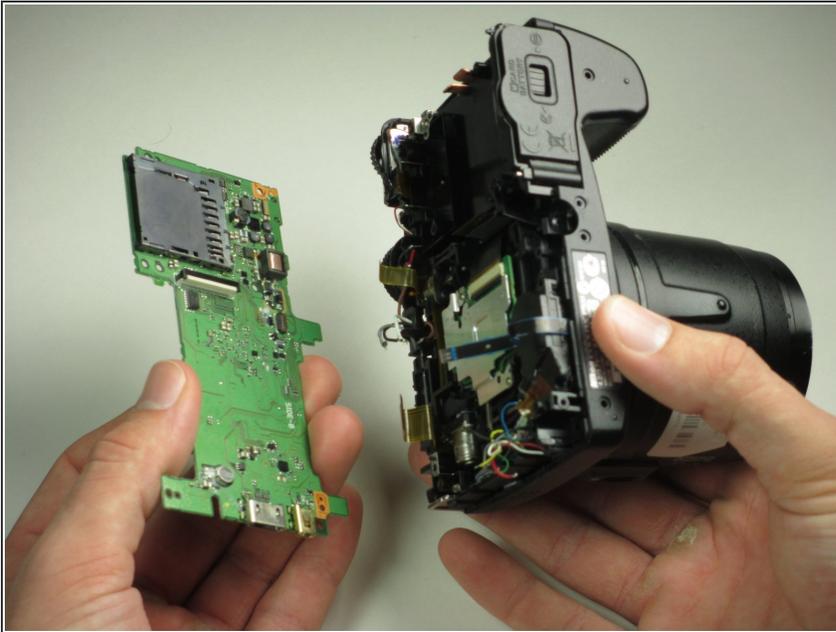


- Remove the mother board from the camera.

Step 12 — Front Case



- Use a PH00 screwdriver to remove the three labeled 3mm screws.

Step 13

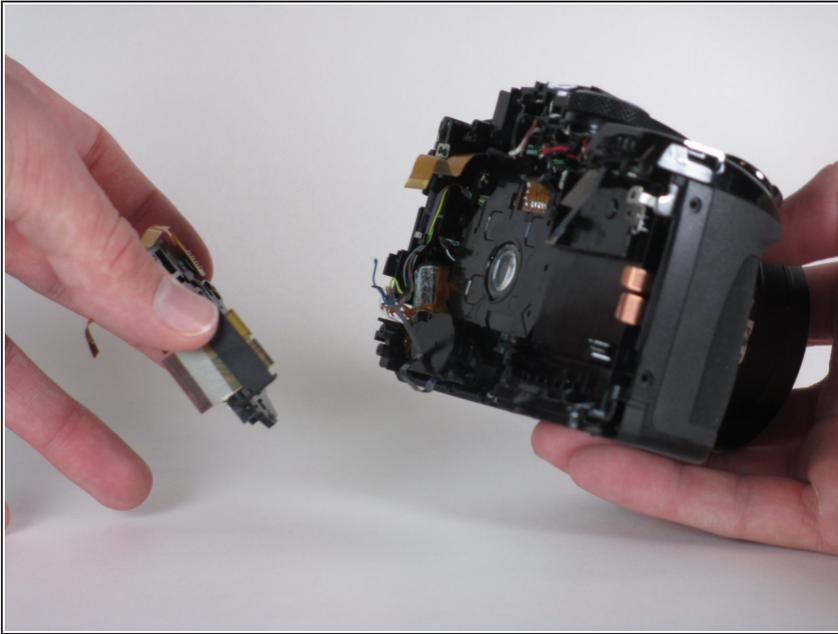

- Remove the black plastic holding the image sensor from the camera. You now have access to the front casing of the camera.

To reassemble your device, follow these instructions in reverse order.