




Nostalgia Electrics PCM805 Power Switch Replacement

This guide shows disconnecting and removing the power switch from the cottone candy maker.

Written By: Carlton

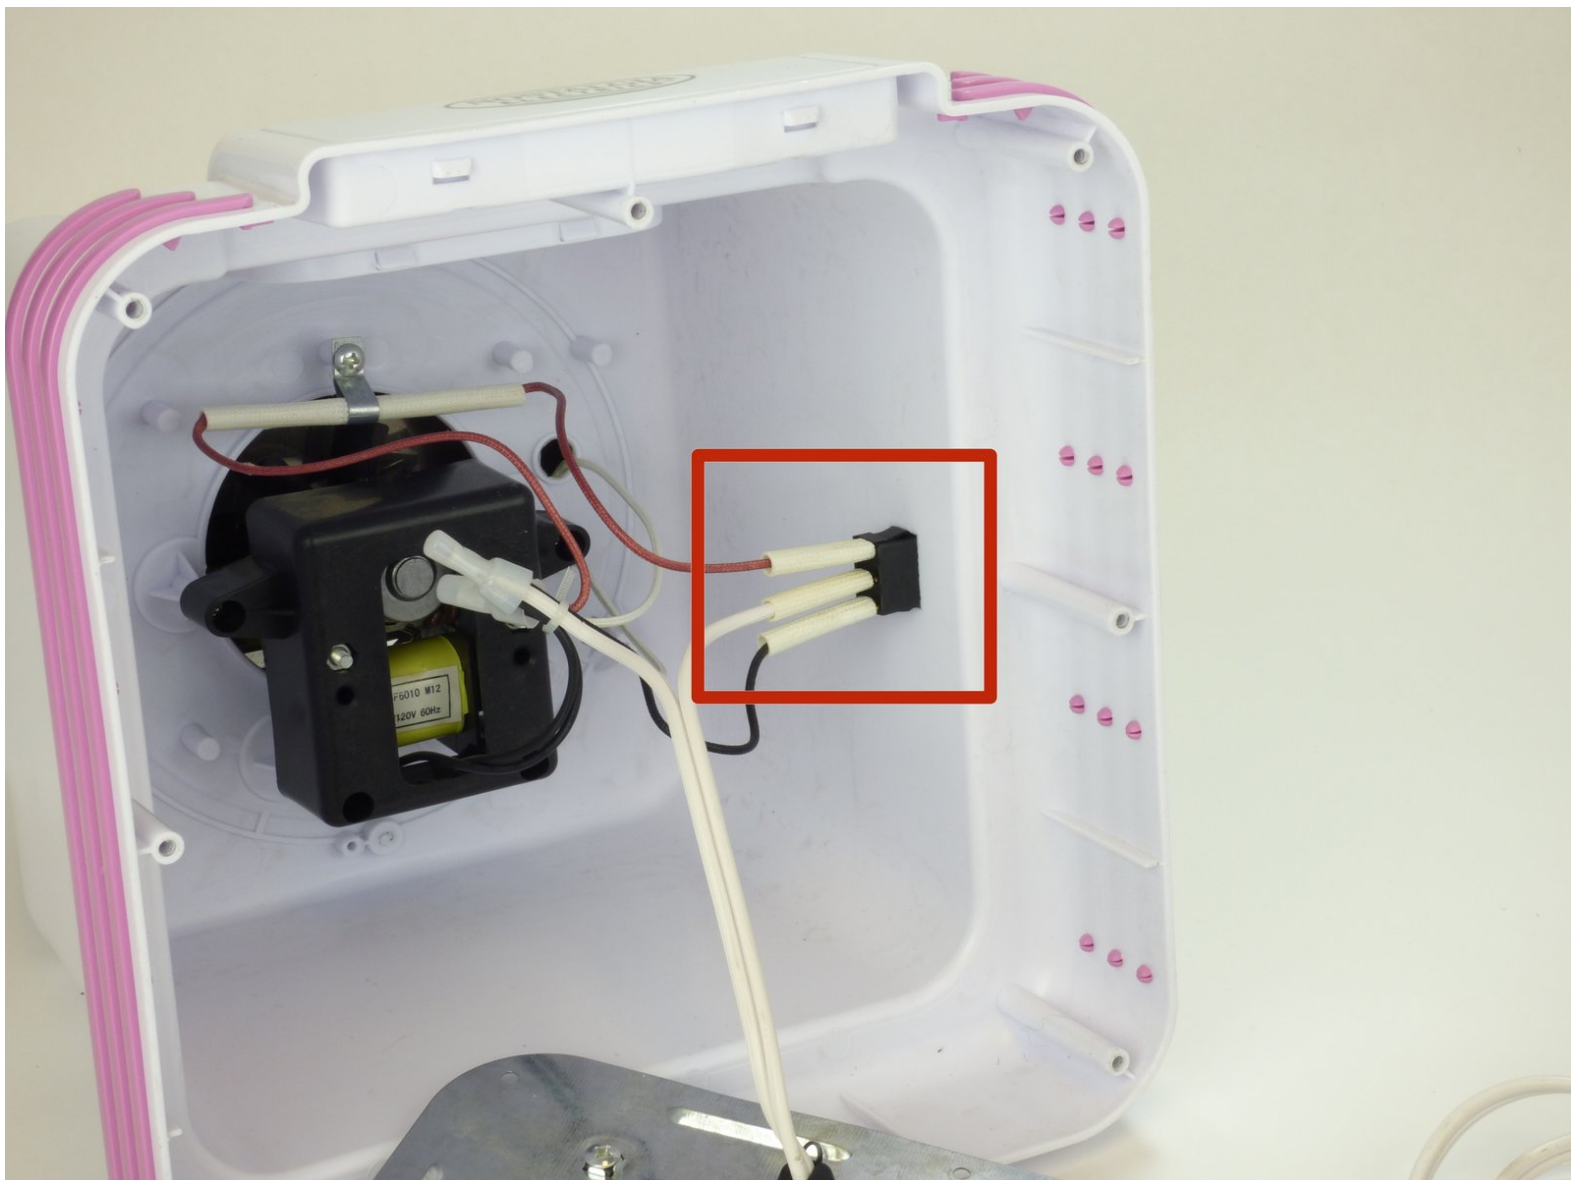

INTRODUCTION



Use this guide to replace the switch if the device will not turn on when receiving power.




PARTS:

- [Large Needle Nose Pliers](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
-


Step 1 — Unscrewing the base

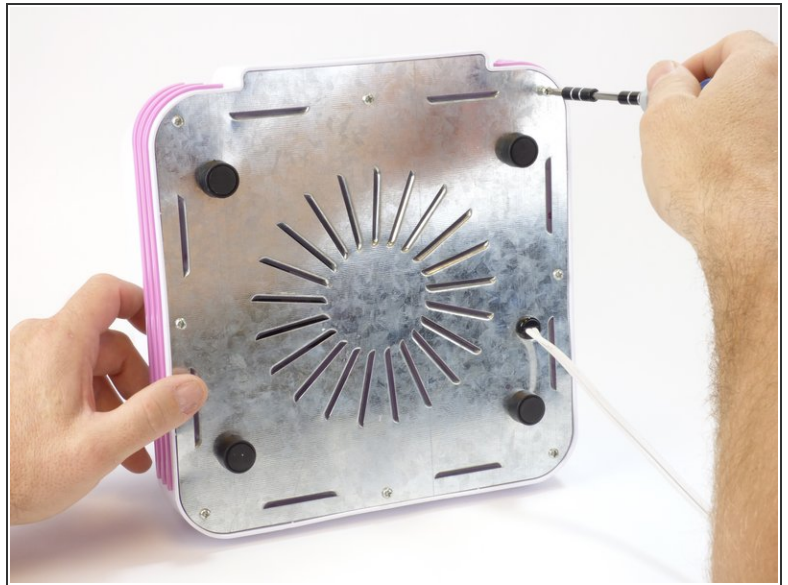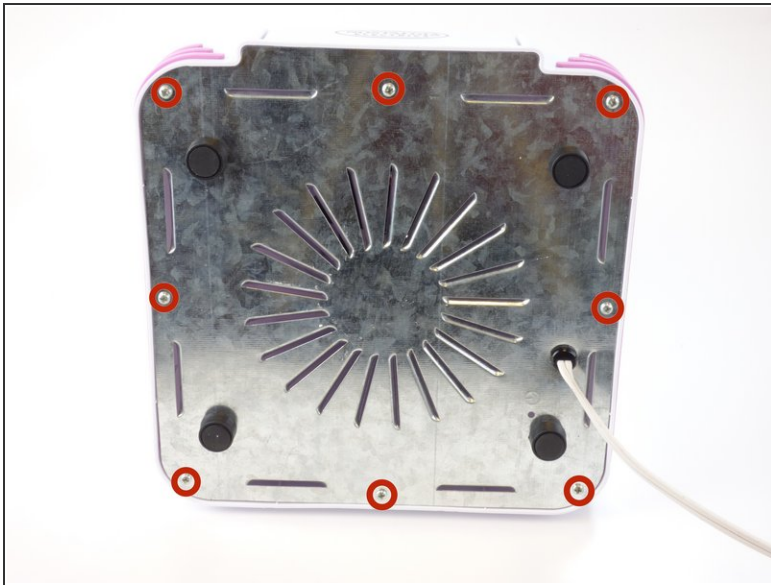

 Unplug the device before following this guide.


- First, place the device on its side, making sure the switch is not facing down.
- Remove the eight 12mm Phillips #02 screws from the base.

Step 2

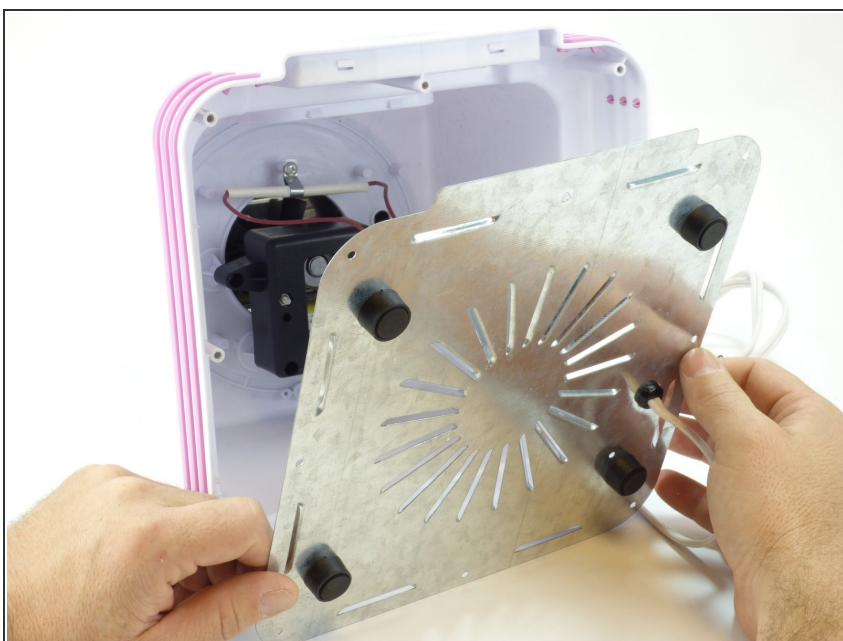


- Gently separate the panel from the device.
- ⓘ Be sure not to tug at the wires that are still connected.

Step 3 — Power Switch

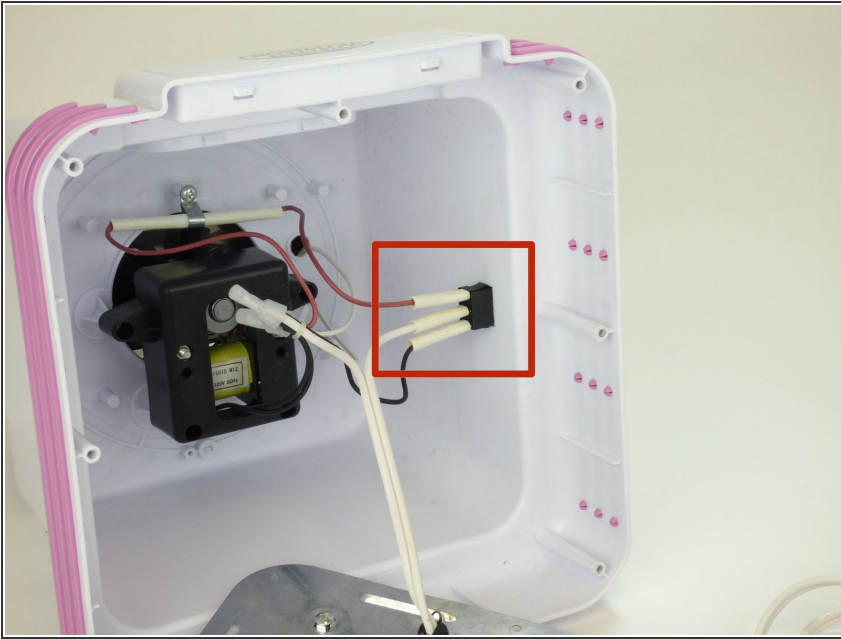

- Locate the switch/wire assembly inside the device.

Step 4

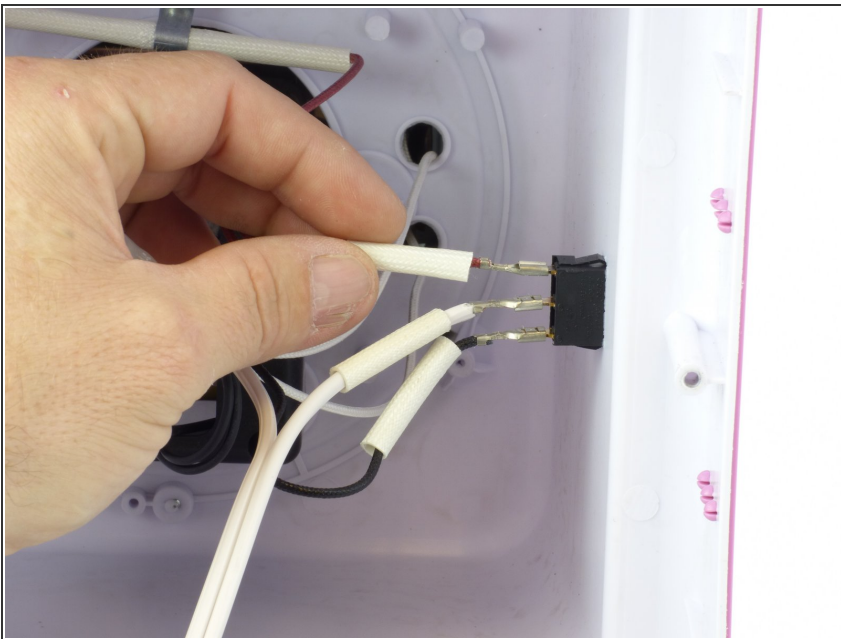


- Pull back the insulation sleeves to expose the connector heads.

Step 5




- ✦ Note the color of each wire and the order you remove them.
 - Using a pair of pliers, firmly grip the base of the wire.
- ⓘ Be sure to grip where the connector meets the wire and not where the connector covers the switch prong.
 - Pull the wire straight out of the switch.
 - Repeat this step for each wire.

Step 6

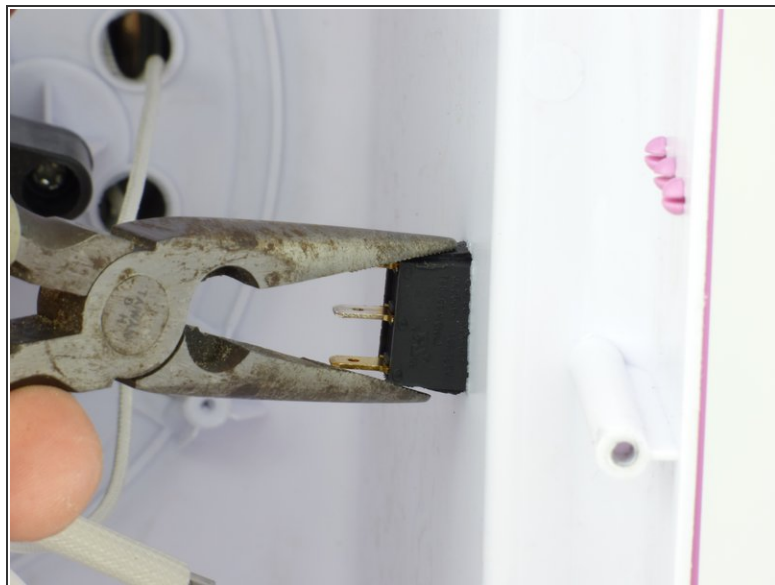

- Using pliers, pinch tabs at the top and bottom of switch.
- While pinching the tabs, push the switch until the tabs are on the outside of the device.

Step 7

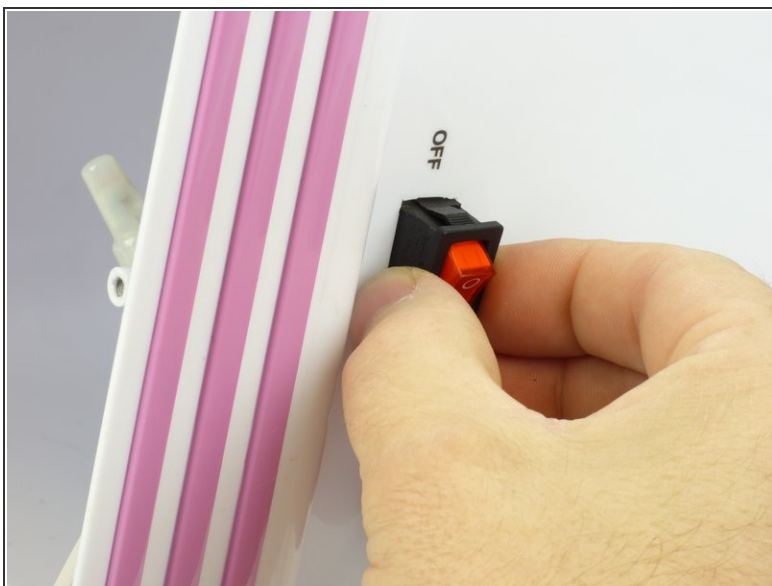

- Remove the switch from the device.

To reassemble your device, follow these instructions in reverse order.