




Nostalgia Electrics PCM805 Stand Replacement

This guide shows removing the stands at the bottom of the device.

Written By: Carlton

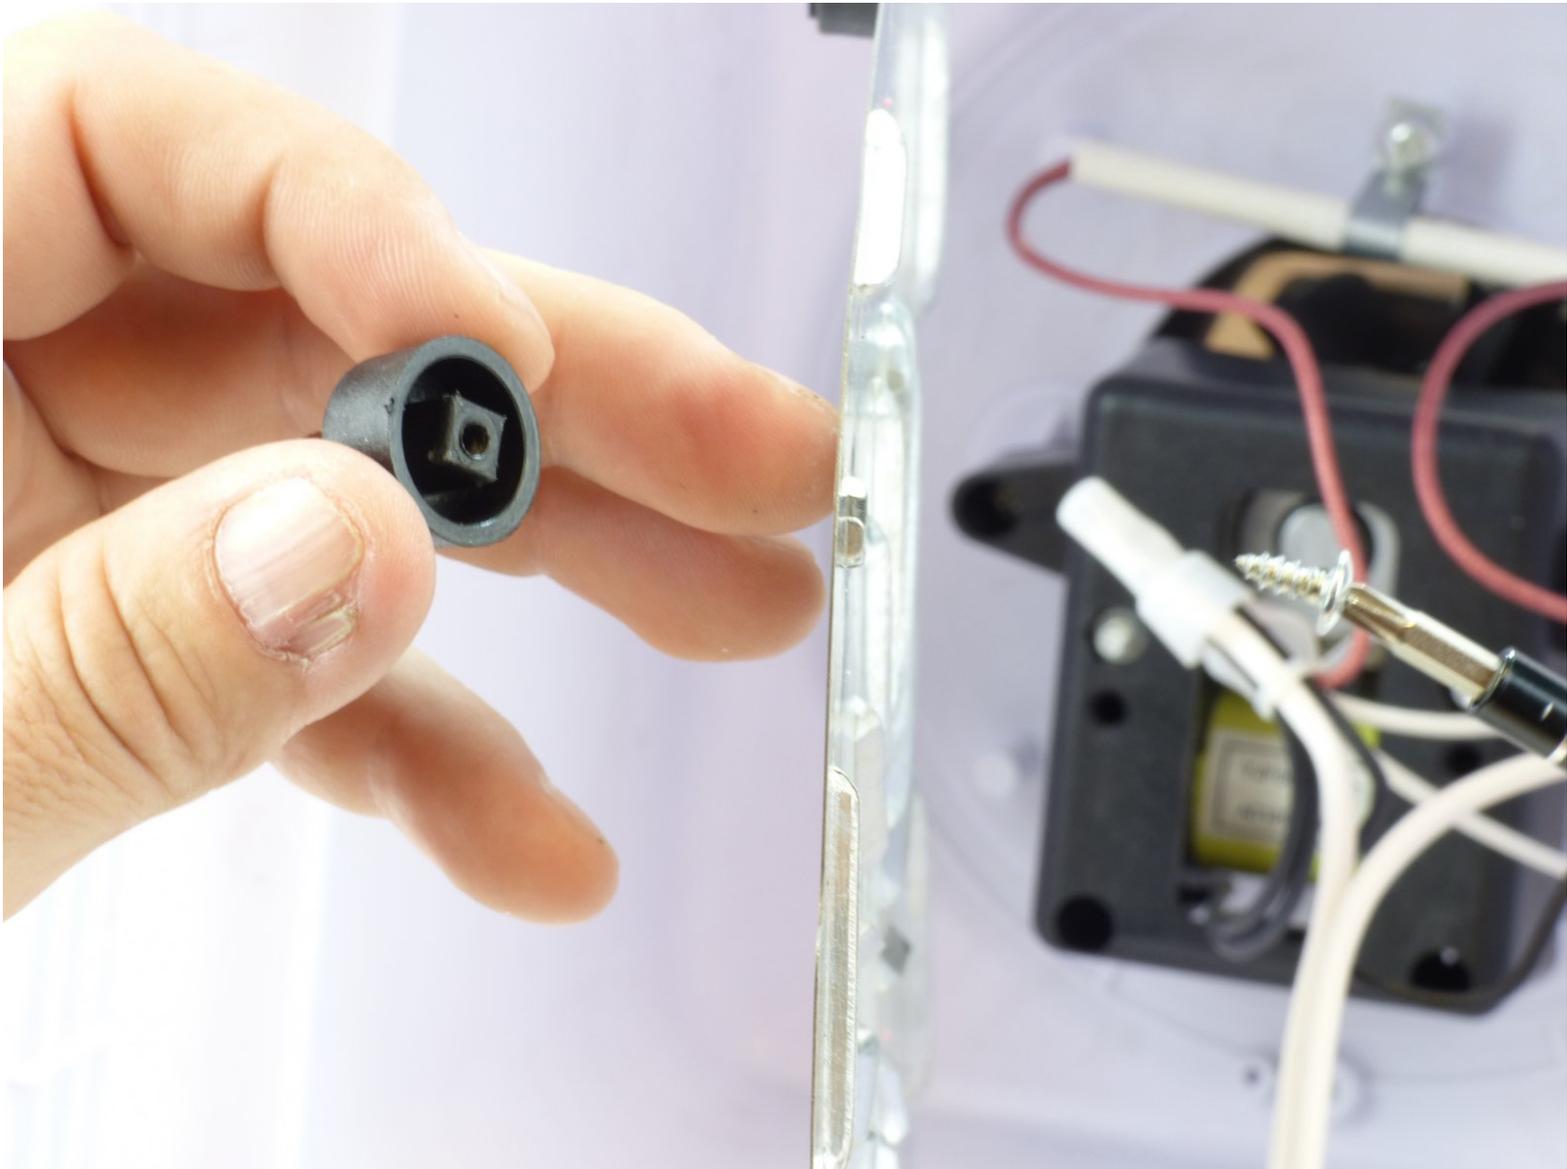

INTRODUCTION



Use this guide to replace the stands on the bottom of the device if they are missing or damaged.



PARTS:

- [Phillips #2 Screwdriver](#) (1)
-


Step 1 — Unscrewing the base

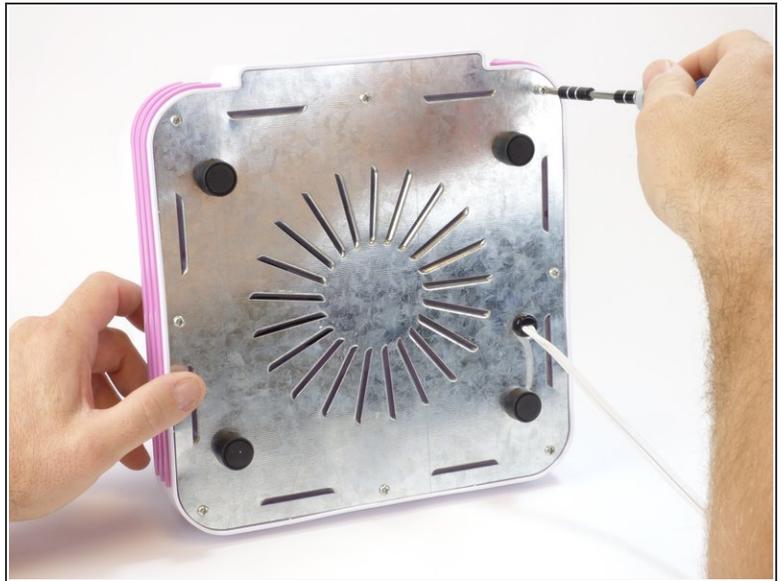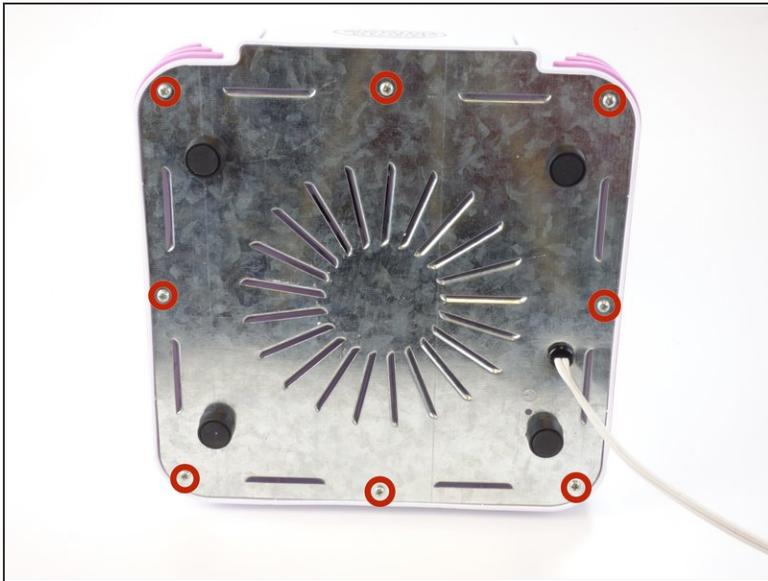

⚠ Unplug the device before following this guide.


- First, place the device on its side, making sure the switch is not facing down.
- Remove the eight 12mm Phillips #02 screws from the base.

Step 2

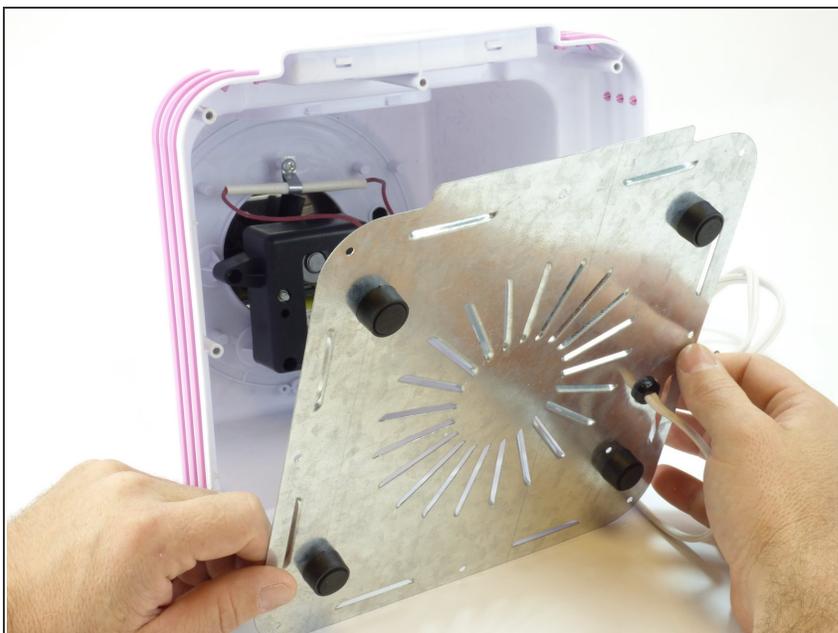


- Gently separate the panel from the device.
- ⓘ Be sure not to tug at the wires that are still connected.

Step 3 — Stand

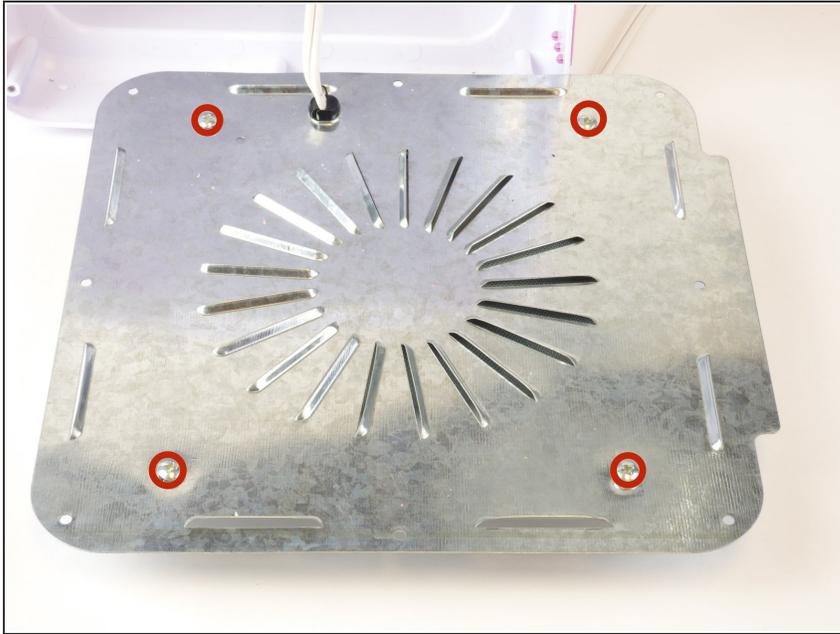

- Locate the four 10mm Phillips #02 screws on the inside of the panel.

Step 4

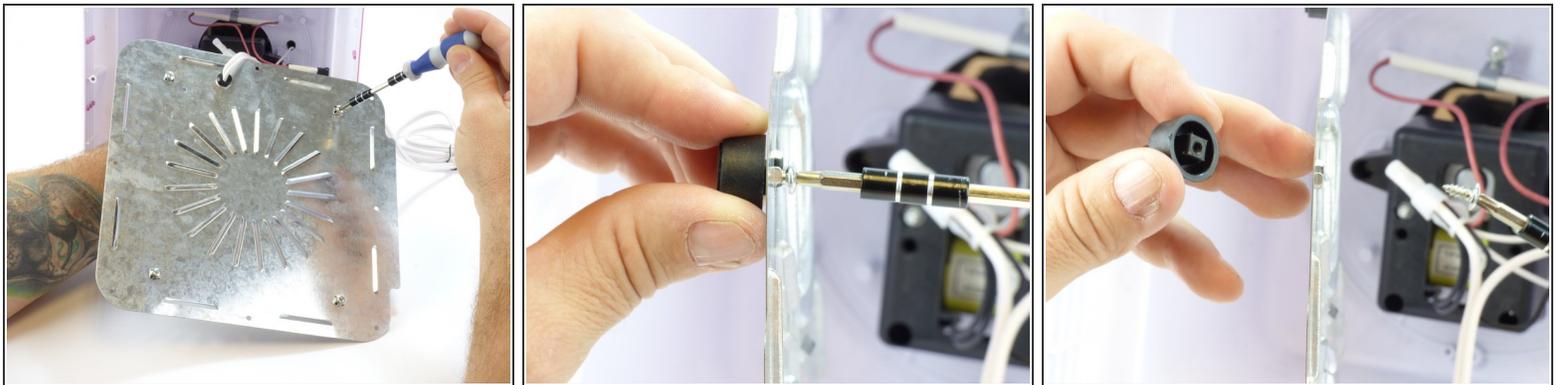

- Remove the screw of the foot you plan to replace.
- ⓘ Place your finger on the back of the the foot you are unscrewing for support.

To reassemble your device, follow these instructions in reverse order.