



# Kodak EasyShare C913 Batteries Replacement

Use this guide to replace batteries

Written By: Dustin Rodgers



# INTRODUCTION

Use this guide to replace batteries

## Step 1 — Batteries



- Position the camera with the bottom facing up.
- Slide the battery cover in the direction of the arrow with your finger gently.
- Remove the batteries

---

To reassemble your device, follow these instructions in reverse order.