




# HP Pavilion dv5000 Optical Drive Replacement

This guide will tell you how to remove the...

Written By: Alex Kwok

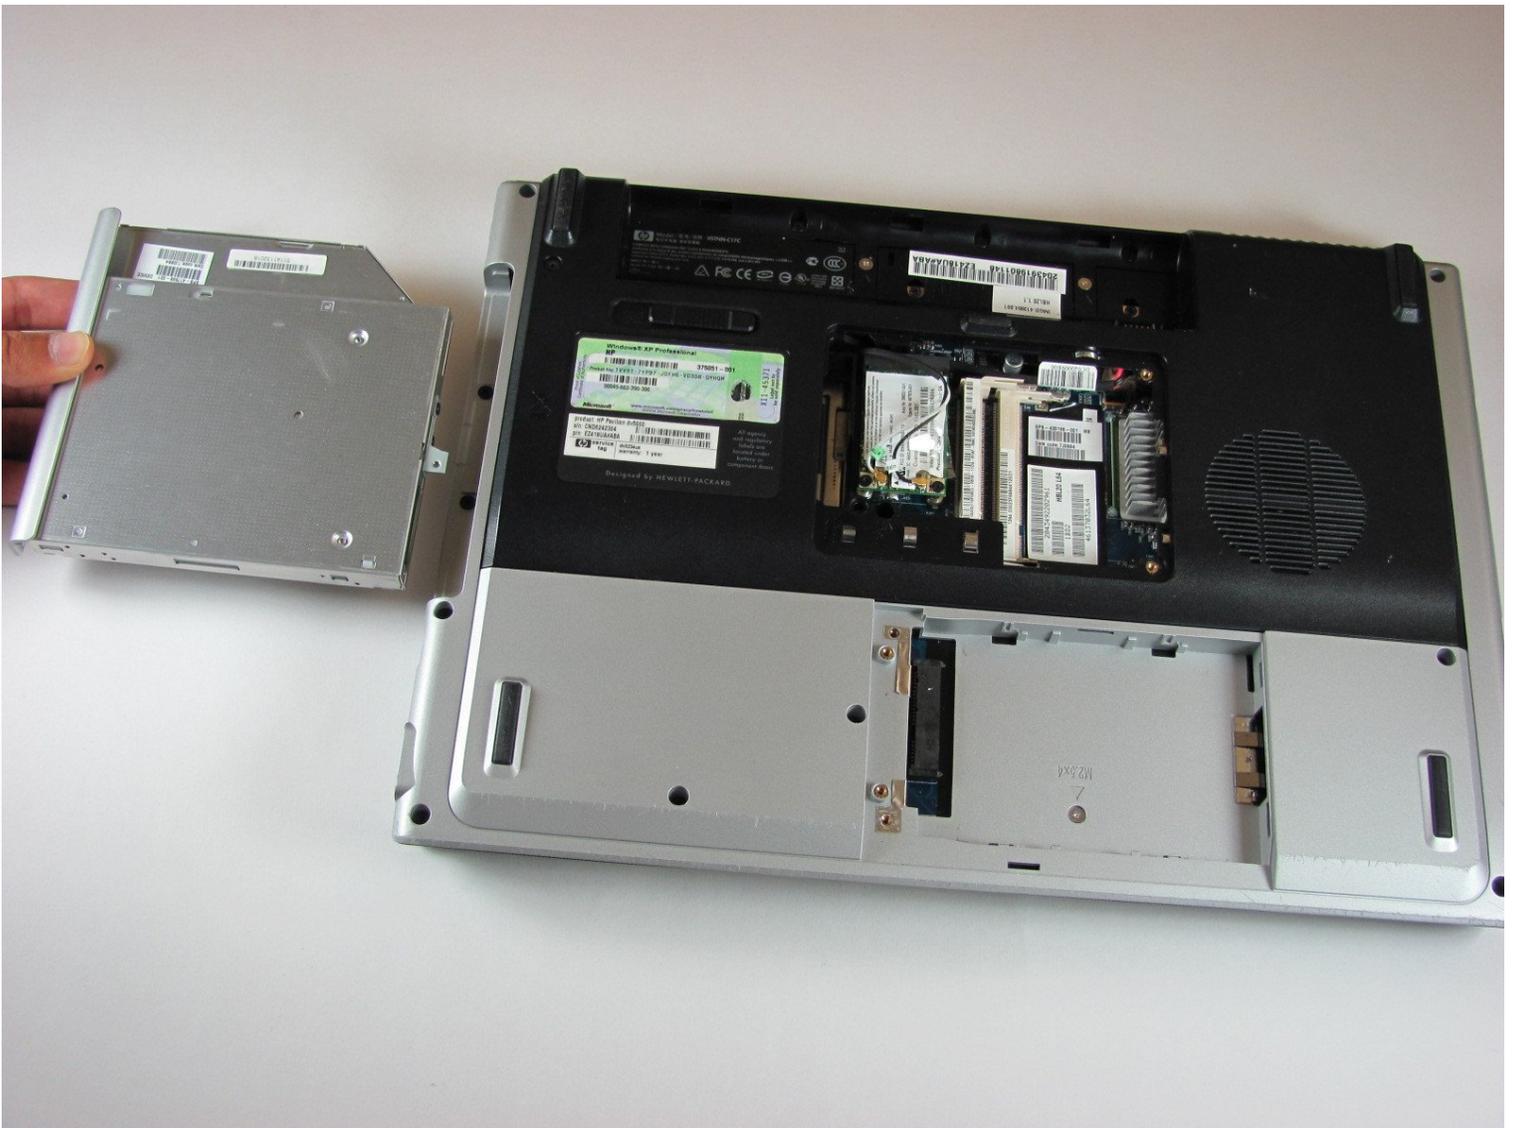

# INTRODUCTION

This guide will tell you how to remove the optical drive, or CD/DVD drive.

## TOOLS:

Phillips #00 Screwdriver (1)

## Step 1 — Battery



 Turn off the computer, and unplug it from all external power sources.


- Lay the computer face-down on a flat surface. Orient the computer to match the image.
- Locate the battery release switch, as indicated in the image by the red rectangle. Slide the switch from right to left, and remove the battery.

## Step 2 — RAM Cover



- Remove the two 5mm Phillips screws on the right side of the RAM cover.
- Lift the right side of the RAM cover, and remove it.

## Step 3 — Optical Drive

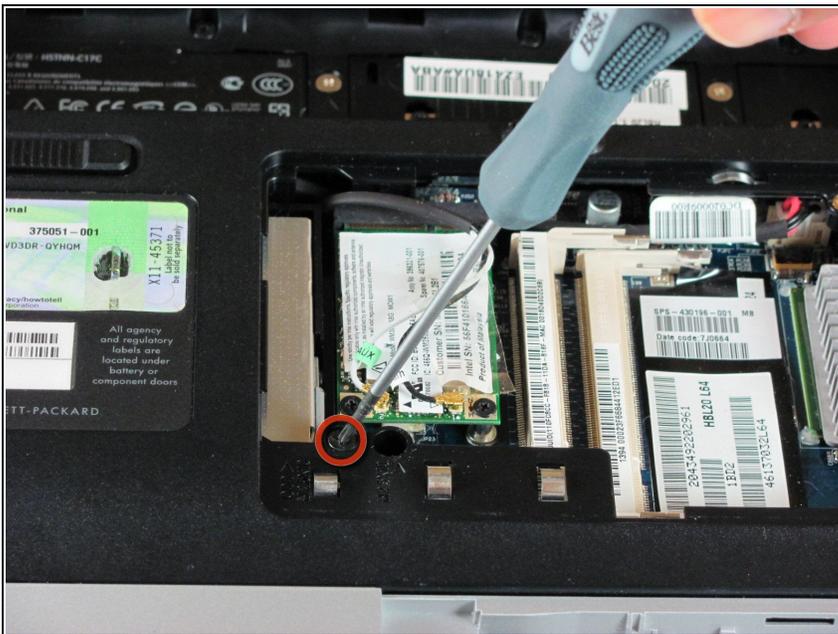

- Remove the 11.0mm screw securing the optical drive to the computer.

## Step 4



- Locate the optical drive. The optical drive is located on the left side of the RAM bay.
- Press the exposed edge of the optical drive gently with the spudger until the drive releases from the computer frame.
- Pull the optical drive completely out of the computer frame.

---

To reassemble your device, follow these instructions in reverse order.