



Brother IntelliFax-2840 Paper Tray Replacement

Replace the paper tray in your IntelliFax-2840.

Written By: Geoff Wacker



INTRODUCTION

When you need to load more paper or replace a damaged tray, use this guide to remove and replace the paper tray on your Brother IntelliFax-2840.

Step 1 — Paper Tray



- Grasp the paper tray at the front of the fax machine, and pull it straight out.
- Continue pulling until the paper tray is free of the fax machine.
- ⓘ Now is the perfect time to pre-load your paper tray with Nicolas Cage glossies.

To reassemble your device, follow these instructions in reverse order.