
INTRODUCTION

This guide may be used to remove the internal speakers from the Samsung ATIV Book 9 Plus for replacement or cleaning. Have a Phillips screw driver handy. Make sure you are able to keep track of all the screws removed and where they belong (a magnetic project mat would be helpful). The 2Wx2 replacement speakers should be purchased from the laptop's original manufacturing company (speakers can be bought online or in person from a Samsung retailer). Ensure that the former speakers are disposed of properly, according to your city's ordinances. While removing the speakers, make sure not to damage any cords connecting the speakers to the laptop.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)

Step 1 — Back Cover



- Turn the laptop upside down so that the underside of the laptop is facing you.
- Use a Phillips #000 screwdriver to unscrew the 4.3 mm screws located on the edges and corners of the laptop.

Step 2




- Lift the cover to reveal the interior of the laptop.

Step 3 — Speakers




- The speakers are black, and form a block-like "L" shape around the bottom half of the battery.
- Lift from the corners of the speakers to remove them.

Step 4

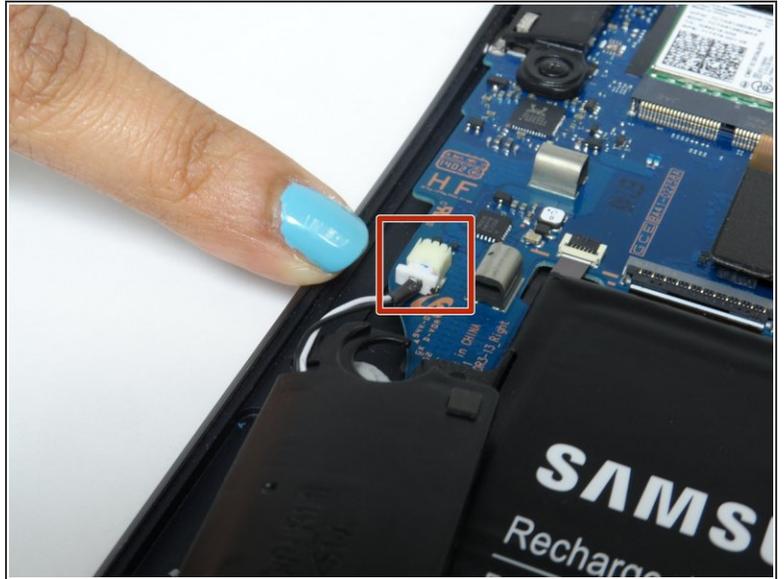

- After lifting the body of the speaker out of the laptop, you will notice that the top of the speaker is connected to the laptop by cables.
- Continue removing the speakers by gently squeezing the sides of the white connector.

Step 5

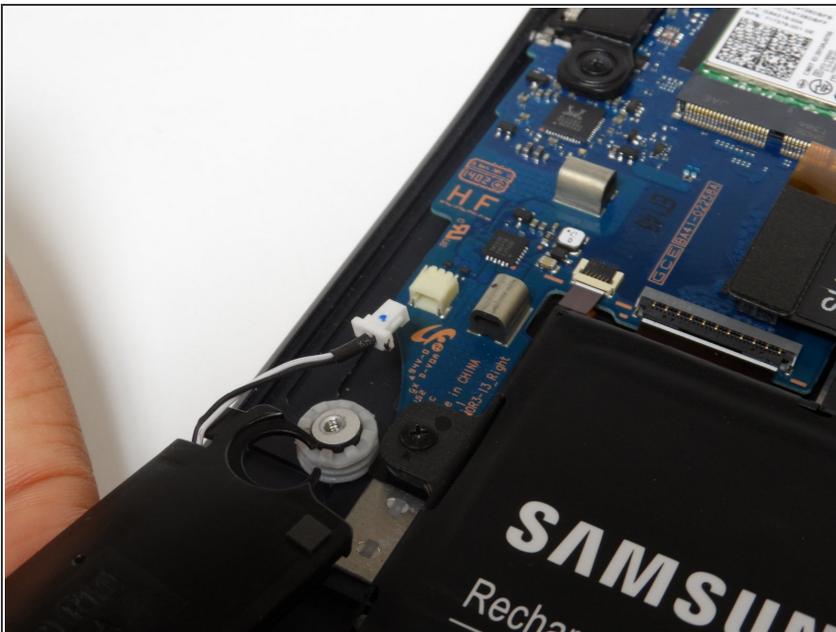

- Gently tug on the white connector in order to remove the speakers.

To reassemble your device, follow these instructions in reverse order.