




# ClickN Kids Tablet Speaker Replacement

Guide to replace the speakers in the device.

Written By: Kevin Finney

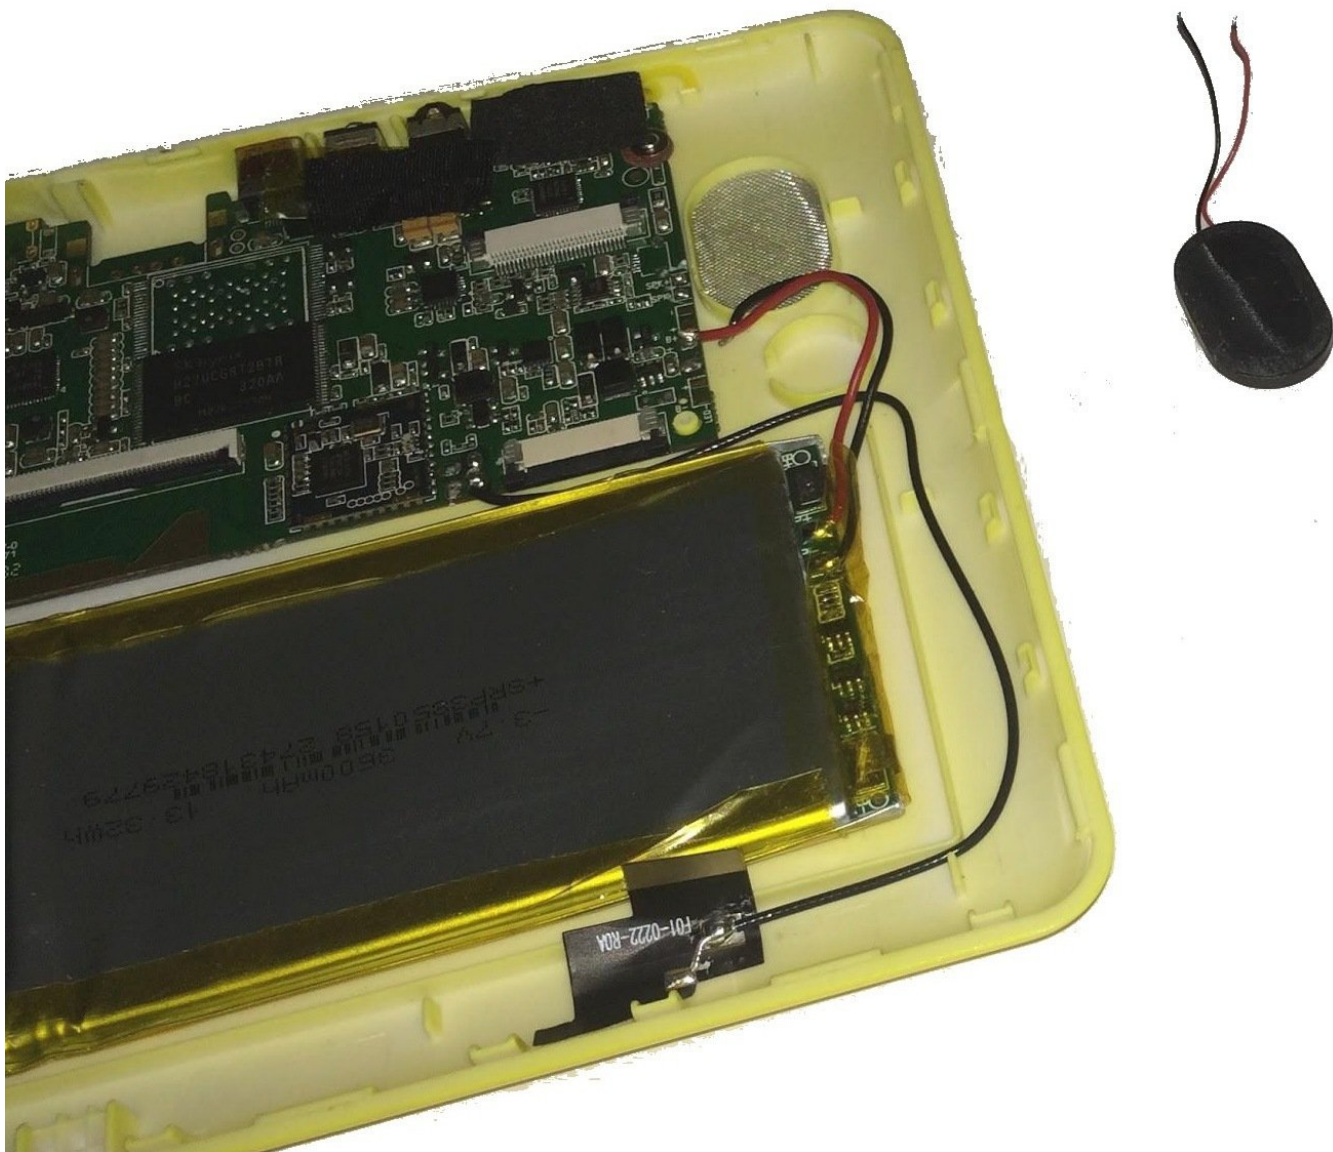



## TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Soldering Iron](#) (1)
-

## Step 1 — Speaker




- Follow the [camera replacement guide](#) to get to the inside of the device.

## Step 2

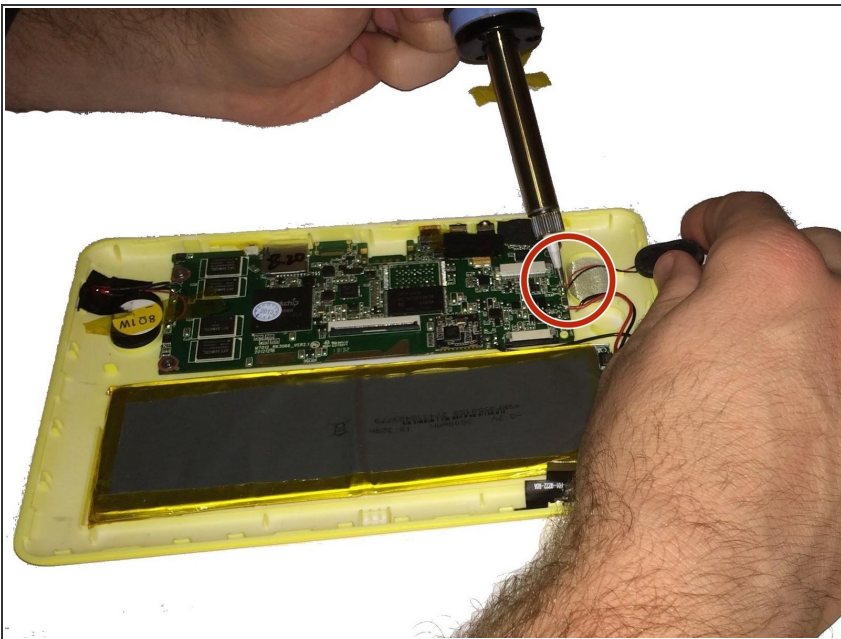



- ⓘ Have someone who knows how to solder to do this step.
- ⚠ Be careful not to damage the motherboard or other parts in the device.
- Desolder the wires connecting the speakers to the motherboard from the contact points on the motherboard.

## Step 3

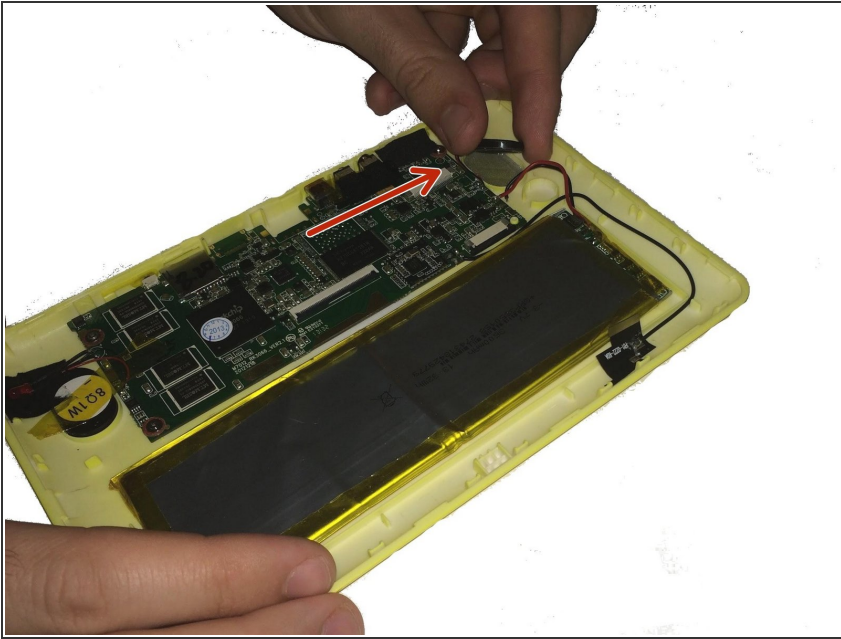

- i The speaker is held down with a strong adhesive.
- Pry the first speaker out of its holding place with a plastic opening tool or spudger.

## Step 4

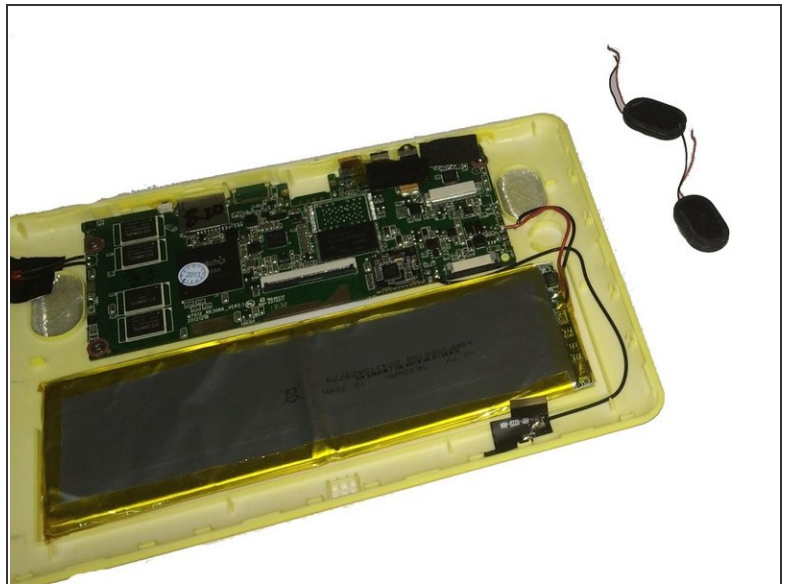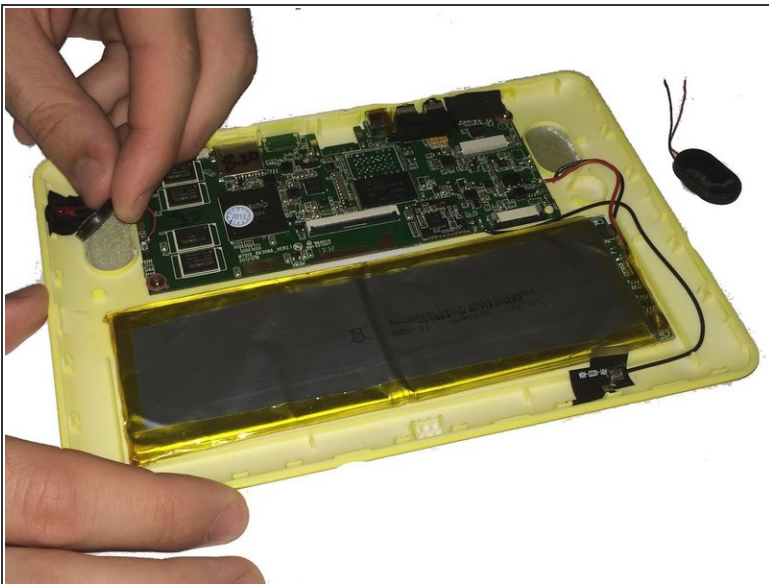

- Pry the second speaker out of its holding place with a plastic opening tool or spudger.

To reassemble your device, follow these instructions in reverse order.