



Dell Photo Printer 720 Encoder Strip Replacement

This guide will demonstrate how to replace the encoder strip in your Dell Photo Printer 720.

Written By: Megan Lawrence



 
INTRODUCTION

The encoder strip is the thin plastic ribbon that runs across the printer. It is crucial for the movement of the ink cartridges during the printing process. This guide will show you how to replace the encoder strip in your Dell Photo Printer 720.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Encoder Strip

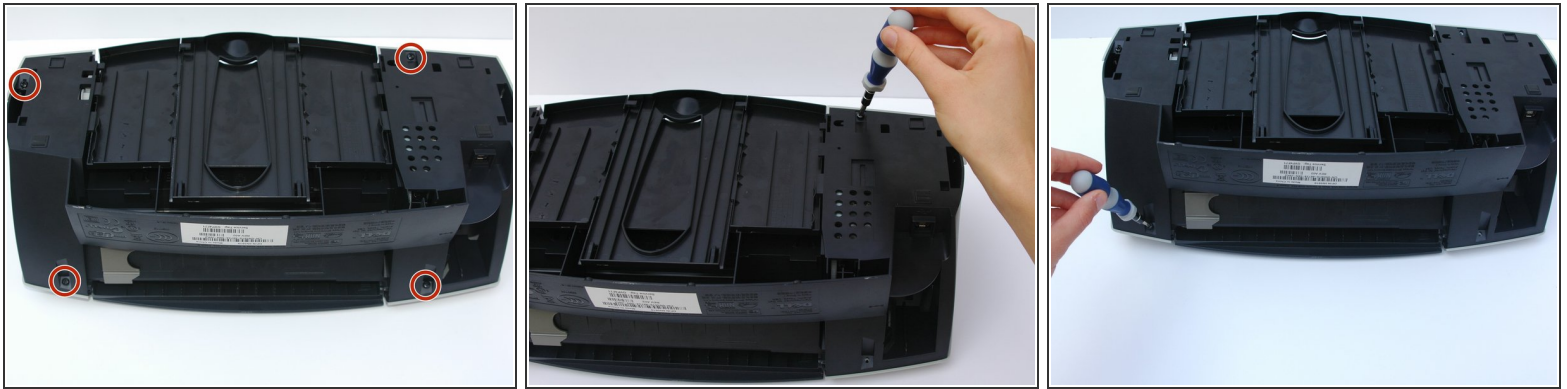


- Use a Phillips head #2 screwdriver to remove the 4 screws located on the bottom of the Dell Photo Printer 720.

Step 2



- Use a spudger to wedge between the cover and base of the printer (where the light grey and black portions meet).
- Pry apart the light grey cover from the black base.
- Gently flip the printer upright to its standard position and carefully lift off the cover.

 Step 3

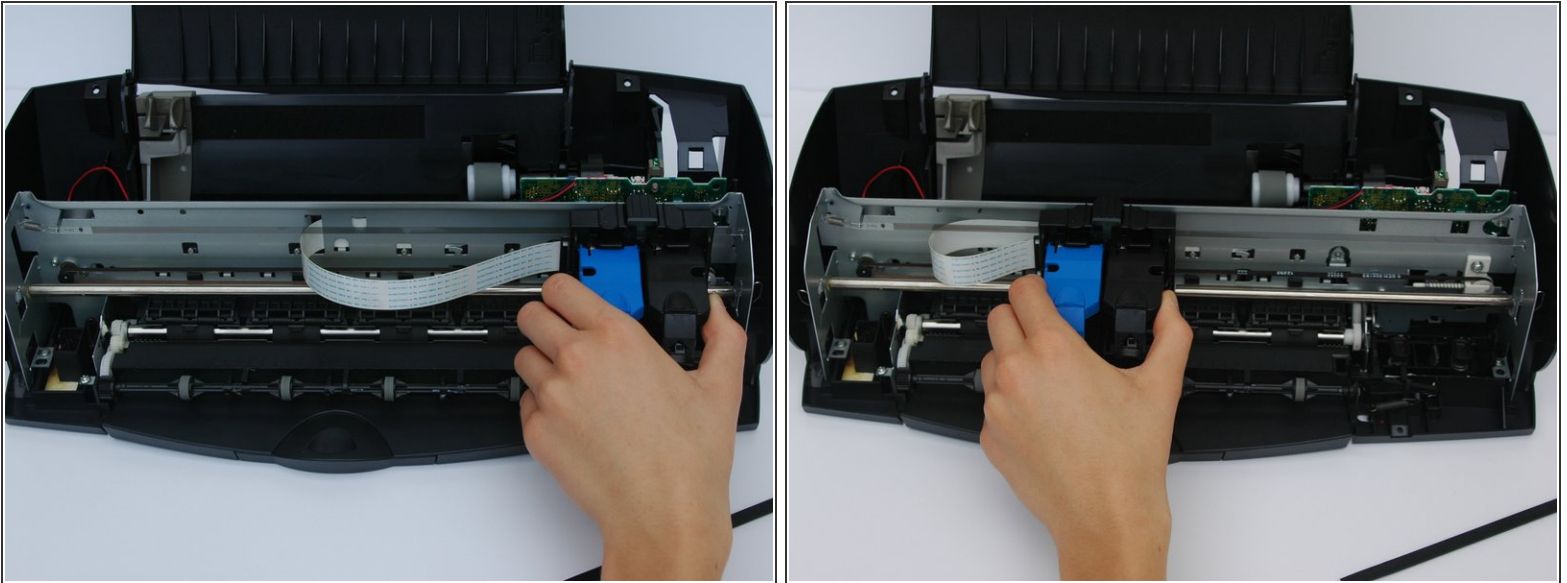

- Slide the ink cartridge from the right side to the middle left so it is out of the way.

Step 4



- Grab ahold of the encoder strip on the right side. Gently tug the strip outward and swing the end piece towards you to unhook the encoder from the prong.
- Carefully unhook the opposite end of the encoder strip to full disconnect the part.
- To replace new encoder strip, reattach each end to the hooks by reversing previous steps.

To reassemble your device, follow these instructions in reverse order.