



# Nikon COOLPIX S3600 SD Card Replacement

How to remove and replace the memory card in case pictures are not saving to the memory card.

Written By: Lenisha Poirier



## INTRODUCTION


If your camera is not saving pictures, you may need to remove or replace the memory card. Follow this replacement guide for help!

## Step 1 — SD Card



- Push latch downwards to open the battery hatch located on the bottom right.
- Memory card is located above the battery compartment.

## Step 2

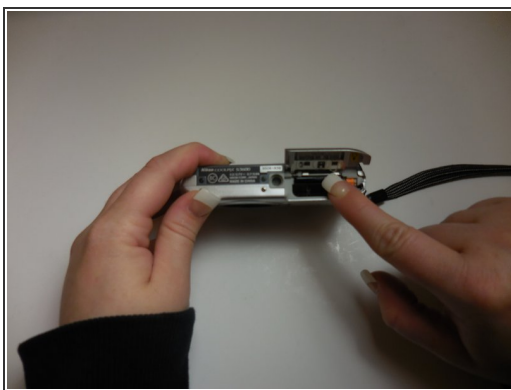

- Push in the memory card until you can't push it in any more and release.
- Memory card should be slightly popped up.
- Now you can carefully remove the memory card.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-16 06:58:07 PM (MST).

