




Acer Iconia A100 Battery Replacement

A step-by-step guide that illustrates the...

Written By: Omar Acosta

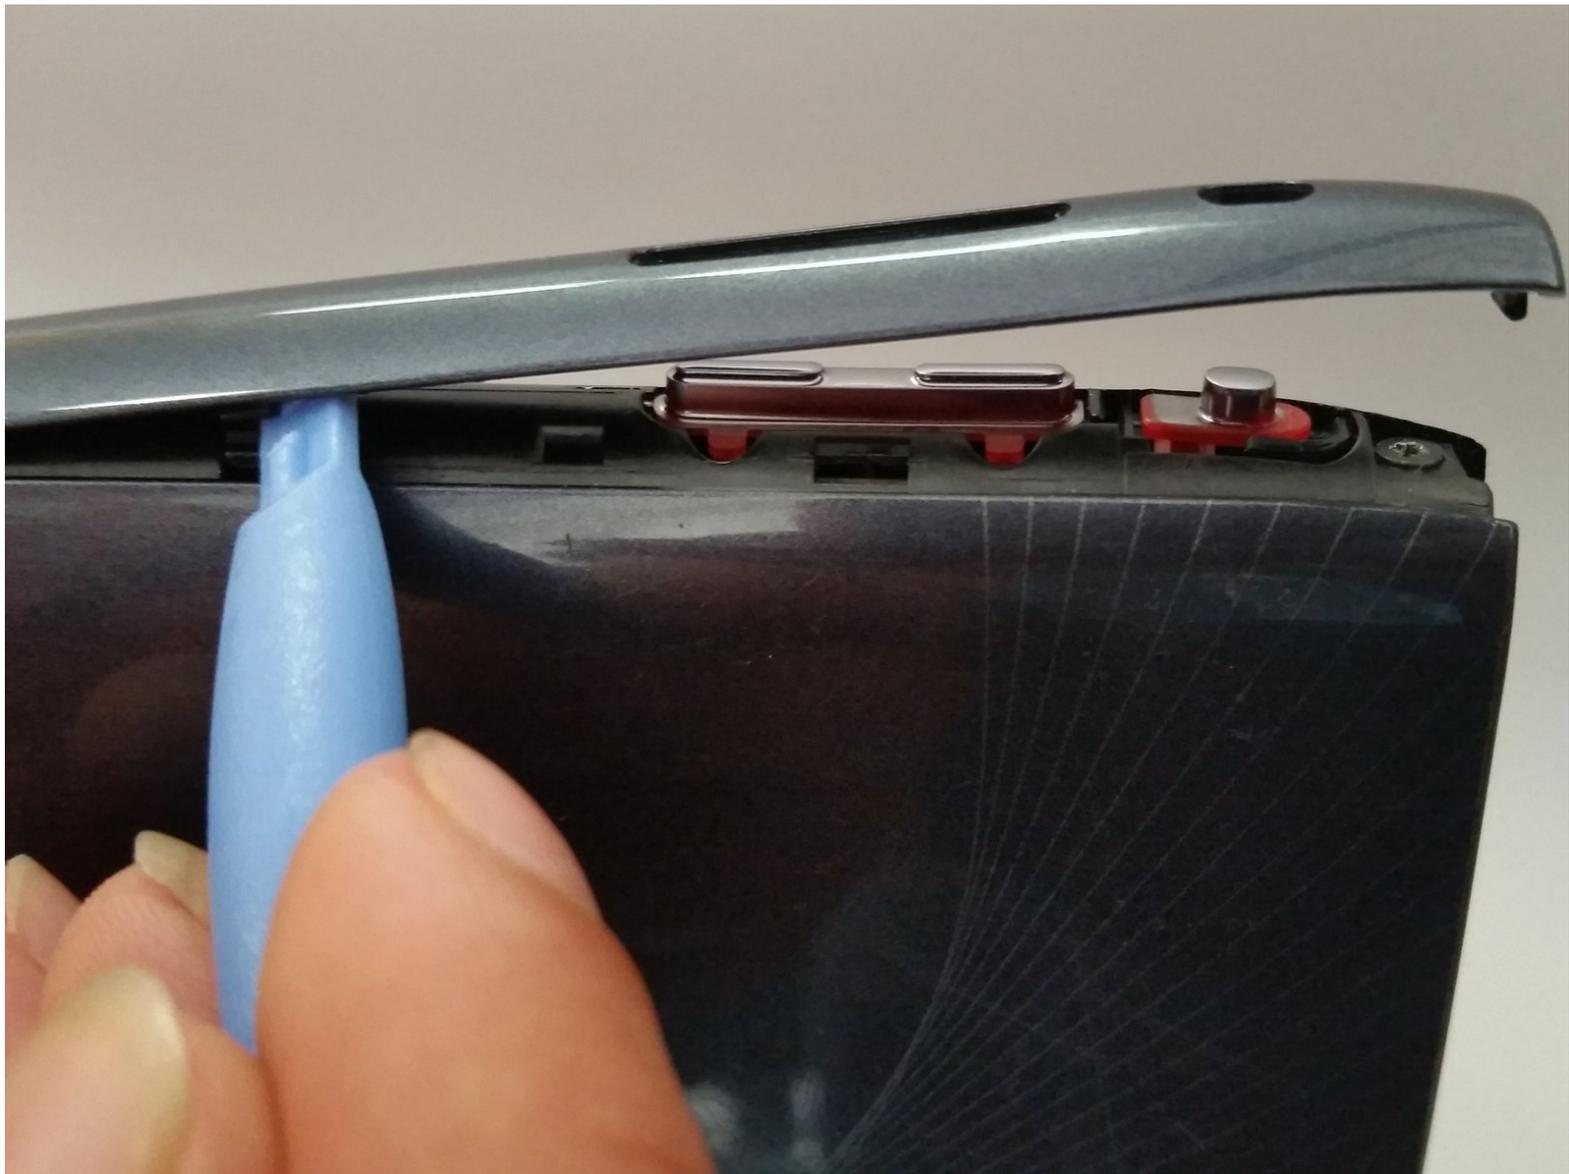


INTRODUCTION

A step-by-step guide that illustrates the necessary precautions for replacing a battery for the Acer Iconia A100 tablet.

TOOLS:

- [iFixit Opening Tool](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery

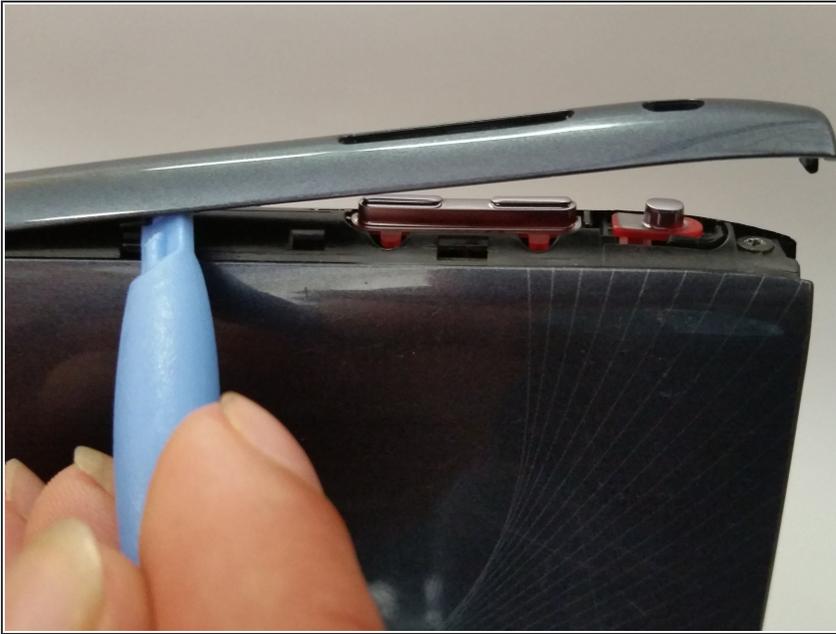

- Start at any side of the tablet.
- Begin to take apart the tablet with a plastic opening tool along the sides of the tablet.
- Work your way around the tablet.
- ⓘ There are four side pieces in total.

Step 2



- Remove the five 4 mm screws from the edges of the tablet with a Phillips #00 screwdriver.

Step 3




- Carefully separate the back piece from the device using a plastic opening tool.
- ☑ Remember to open along the entire perimeter of the tablet.

Step 4



- Turn the tablet over so that the battery is facing upwards.
- Remove the four 4mm screws located around the battery.

Step 5

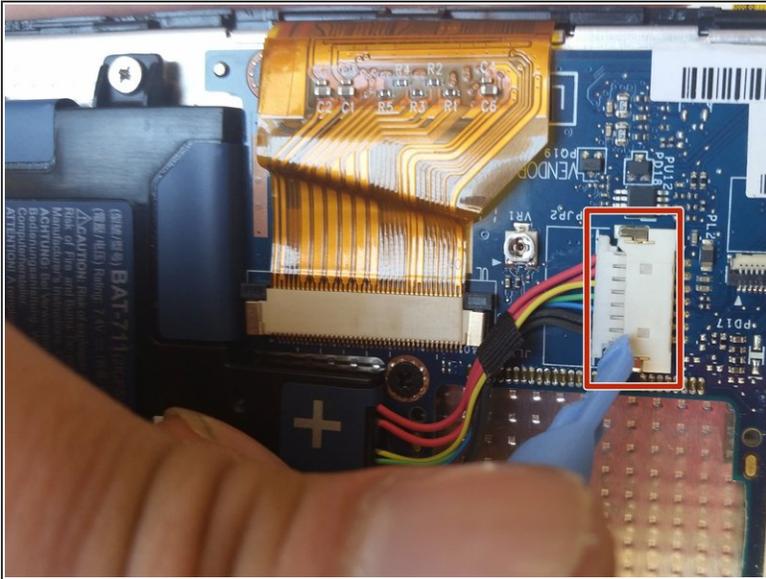

- Use the tip of a plastic spudger or opening tool to gently push the connector head out of its socket.
- Use your fingers or the flat edge of a plastic opening tool to lift the battery up and off of the device.

⚠ Be sure to not have any water around the device while removing the battery.

⚠ Be sure to be cautious while removing the battery and remove carefully; avoid ripping the wires attached to the battery.

To reassemble your device, follow these instructions in reverse order.