



HTC One M8 Bottom Speaker Replacement

Replace the bottom speaker.

Written By: Michael Gonzalez



INTRODUCTION

Use this guide to replace the bottom speaker on your HTC One M8.

Please note that your device may have a large amount of copper shielding and tape covering the back of the display assembly, as shown [here](#). If this is the case, you'll need to gently remove it to get at the motherboard.

TOOLS:

- [iOpener](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [Tweezers](#) (1)
- [SIM Card Eject Tool](#) (1)
- [iFixit Opening Picks set of 6](#) (1)

PARTS:

- [HTC One \(M8\) Speaker Assembly](#) (1)

Step 1 — SIM Card



- Insert a SIM card eject tool or a paperclip into the small hole in the SIM card tray, located on the upper left hand side of the phone.
- Press to eject the tray.
- ⓘ This may require a significant amount of force.

Step 2



- Remove the SIM card tray assembly from the HTC One M8.
- ★ When reinserting the SIM card, ensure that it is in the proper orientation relative to the tray.

Step 3 — MicroSD Card



- Insert a SIM card eject tool or a paperclip into the small hole in the microSD card tray, located on the upper right hand side of the phone.
- Press to eject the tray.
- ⓘ This may require a significant amount of force.

Step 4



- Remove the microSD card tray assembly from the HTC One M8.
- ⚠ When reinserting the microSD card, ensure that it is in the proper orientation relative to the tray.

Step 5 — Rear Case



- Use an iOpener or heat gun to loosen the adhesive on the upper and lower speaker grilles.
 - ⓘ Refer to the [iOpener guide](#) for info on how to use the iOpener.

Step 6



- Use a plastic opening tool to gently peel up the lower speaker grille.
 - ⓘ The adhesive is messy, and can be removed using Goo-gone.

Step 7



- Use a plastic opening tool to gently peel up the upper speaker grille.

Step 8



- Remove the two silver 3 mm Phillips #00 screws from the top.
- Remove the four black 4 mm T5 Torx screws from the bottom.

Step 9



- Work your way around the perimeter of the phone with a spudger and plastic opening picks to free the clips that secure the rear case to the display assembly.
 - ⓘ A metal spudger is pictured, but it is best to use a nylon spudger to prevent marring the device.
 - ⓘ Be careful not to lose the power button: it sits loosely in the top of the lower chassis.
- ⚠ Significant force may be required to pry the casing apart.


Step 10 — Motherboard



- Remove the two silver 2 mm Phillips #00 screws securing the battery connector to the motherboard.
- Use a plastic opening tool to gently pry up the battery connector.

This document was generated on 2020-11-18 08:07:03 AM (MST).

Step 11

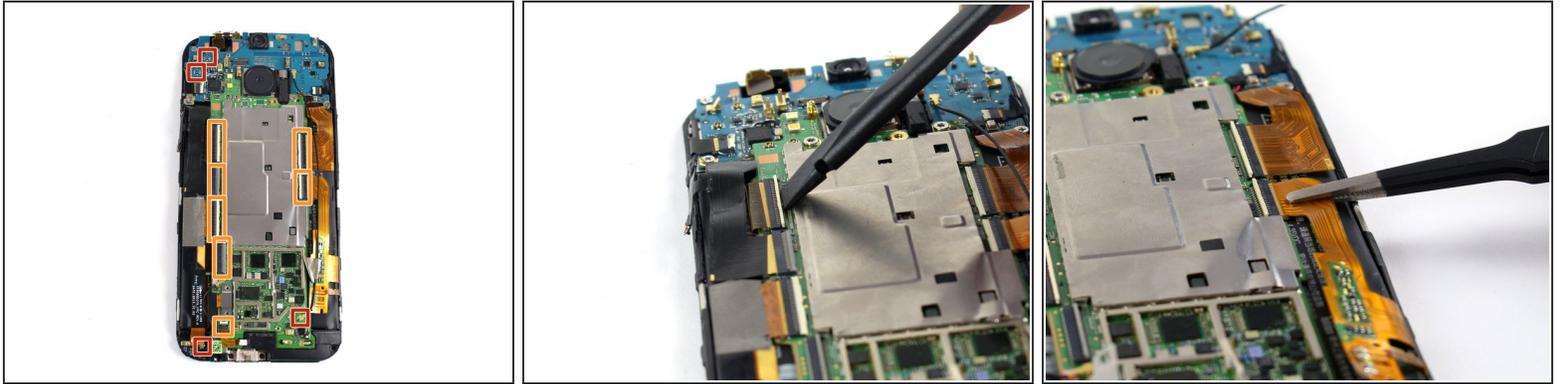


- Use a spudger to disconnect the two (four) antenna cables.
- Use the tip of a spudger to disconnect the seven ZIF connectors.
- Use a pair of tweezers to gently pull the seven ribbon cables free of the connectors.

Step 12




- Remove three silver 3mm screws using T5 screwdriver.

Step 13

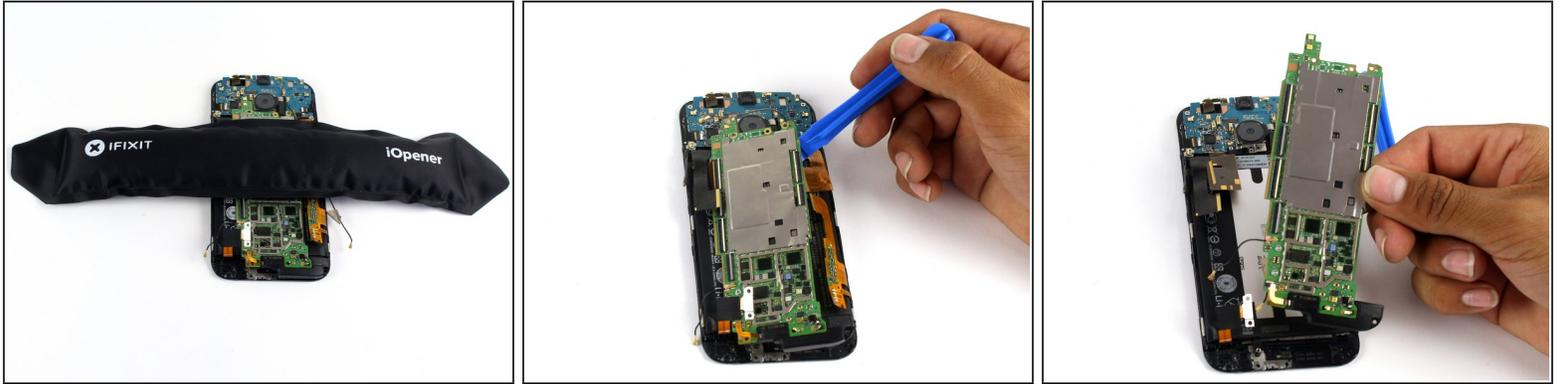

- Use an iOpener or a heat gun to loosen up the adhesive securing the motherboard to the display assembly.
- Use a plastic opening tool to gently pry the motherboard free of the display assembly.
- ⓘ At this point, the bottom speaker is still attached to the motherboard. If you are only replacing the motherboard, refer to the [bottom speaker guide](#) to swap your existing speaker to the new motherboard.

Step 14 — Bottom Speaker

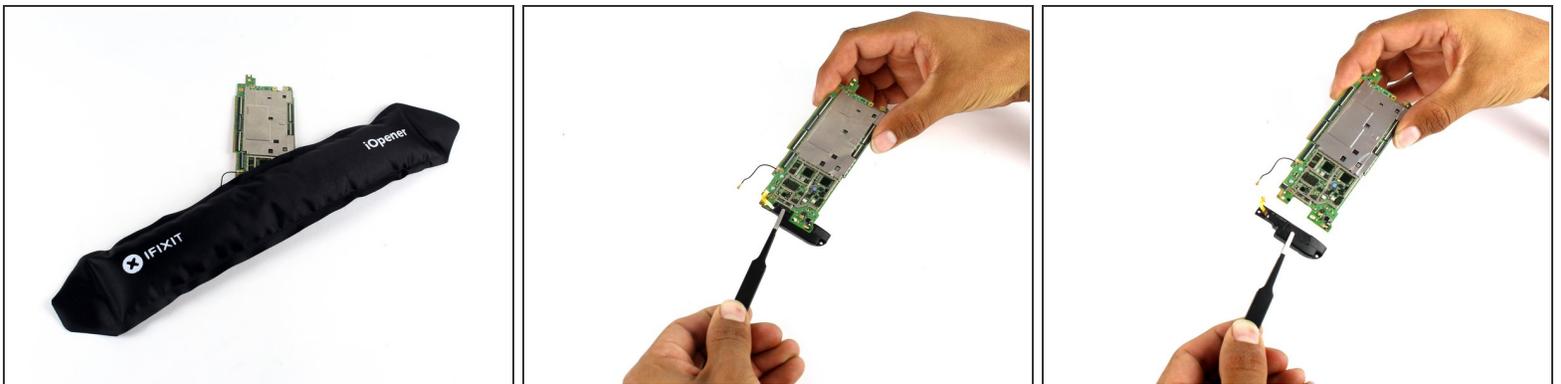

- Use an iOpener to loosen up the adhesive securing the bottom speaker to the motherboard.
- Use a pair of tweezers to gently remove the bottom speaker from the motherboard.

To reassemble your device, follow these instructions in reverse order.