



Olympus Stylus Tough 6020 Shutter Button Replacement

This guide provides instructions that will enable you to replace the shutter button on your Olympus Stylus Tough 6020 camera.

Written By: Taylor Carabin



INTRODUCTION

This guide will help you replace the shutter button on your camera. Your shutter button will need to be replaced if it is stuck or is not working. Replacing this component will enable your camera to adjust exposure properly when taking pictures.



TOOLS:


- [Spudger](#) (1)



PARTS:

- [Shutter Button](#) (1)

Step 1 — Shutter Button

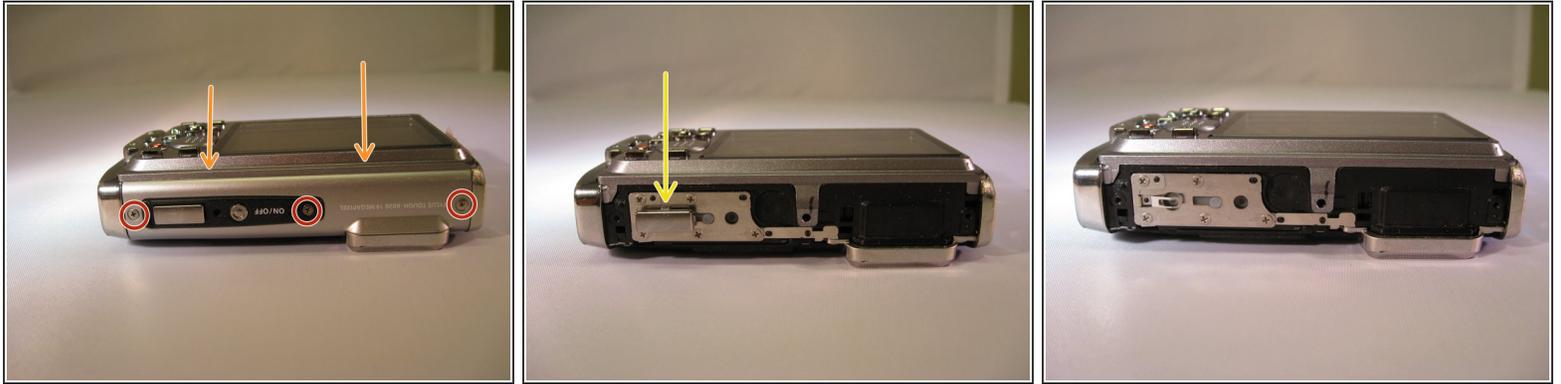

- Turn the camera so that you are looking at the top of the camera.
- Using a Phillips 00 screwdriver, unscrew the three 3.9mm screws on the top of the camera.
- Using a spudger, pry off the plating on the top of the camera.
- Using your fingers, pull off the shutter button.
 - ⓘ You may need to use a spudger to pry off the shutter button.

To reassemble your device, follow these instructions in reverse order.