




Disassembling Pentax PZ-10 Top Cover

This is a guide to remove the top casing of the Pentax PZ-10.

Written By: Jonathan Diaz

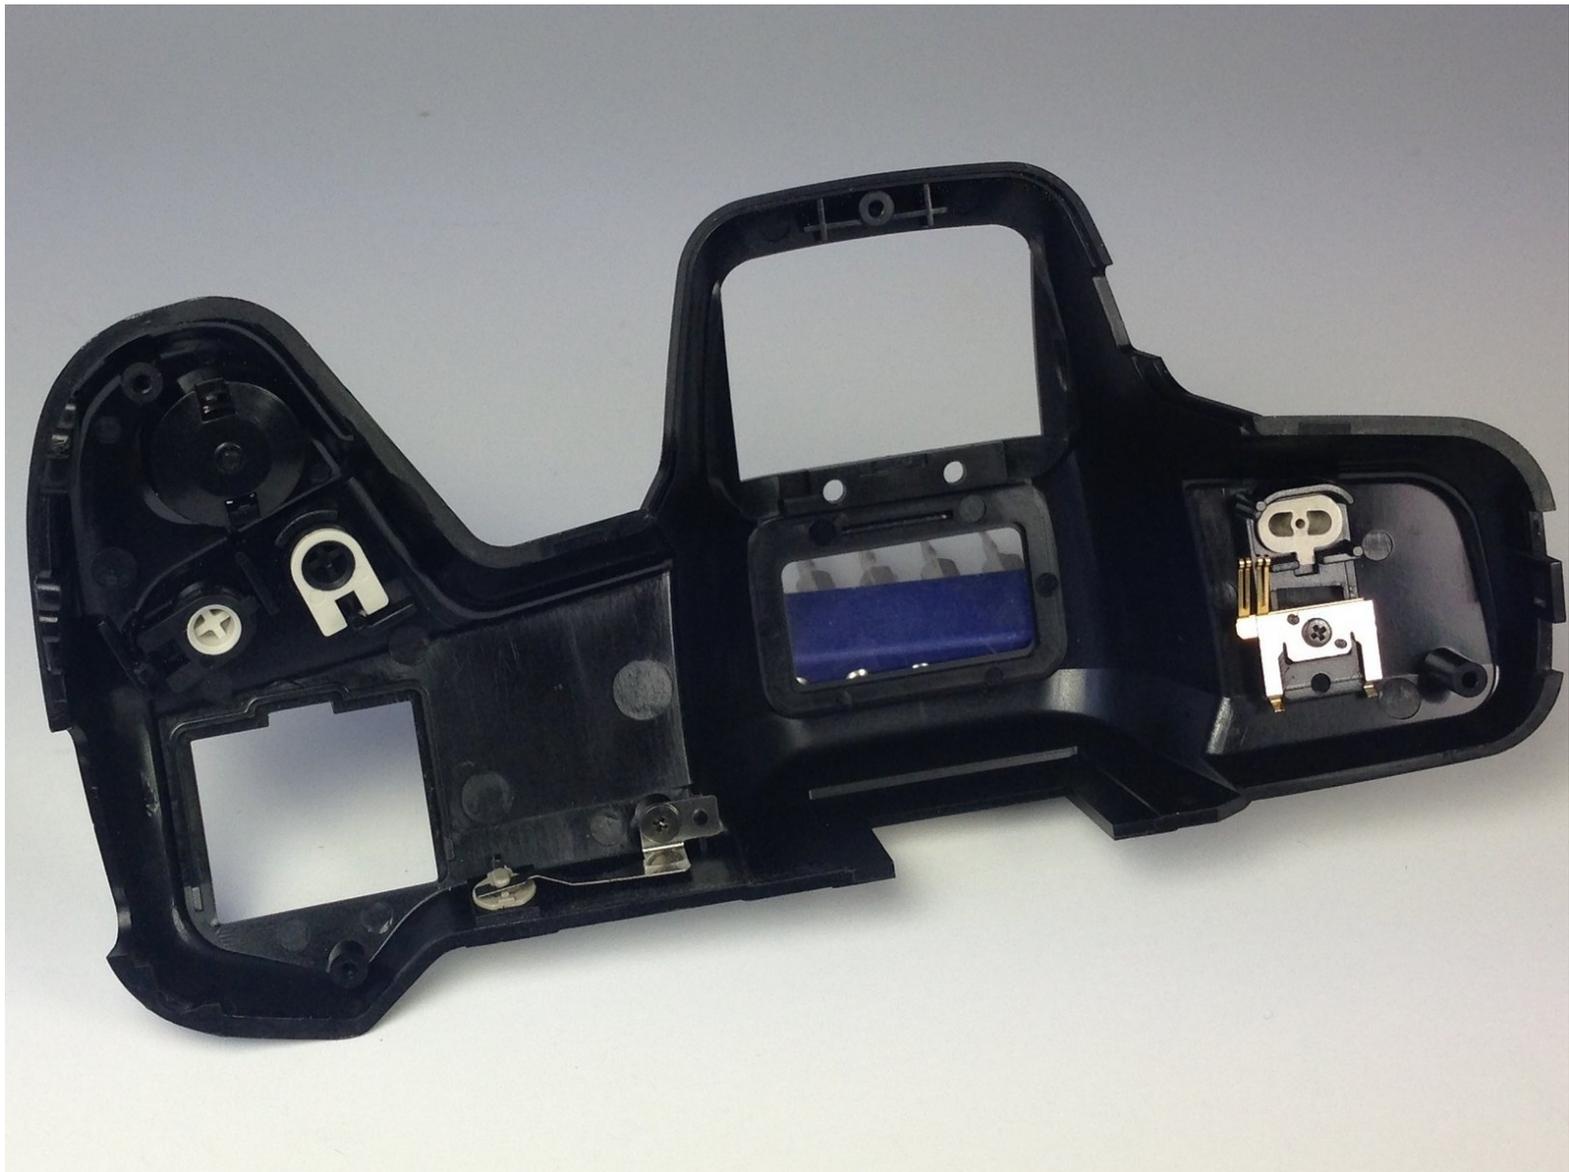

INTRODUCTION

This guide is a prerequisite guide to enable access to features under the top casing for maintenance, repair, and replacement. The top cover encases the top features of the device except the flash and shutter button.



TOOLS:


- [64 Bit Driver Kit](#) (1)

Step 1 — Top Cover



- ⓘ The top cover is one piece encasing the top of the device except the shutter release button and flash.

Step 2 — Removing Upper Right Housing Screw

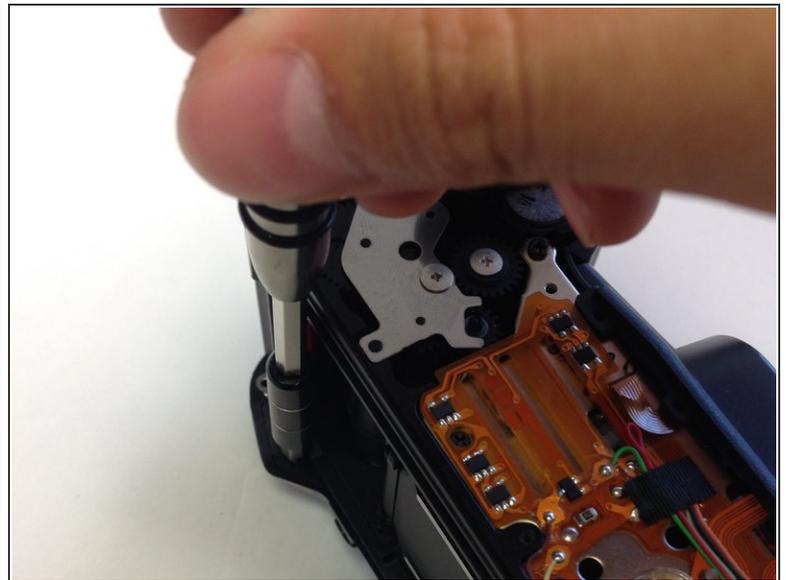

- ⓘ With the camera lens face down, locate the screw under the overhanging piece of the top casing on the right side of the back panel.

- Using the J0 screwdriver, remove the 6.3 mm screw.

Step 3 — Removing Screw in Battery Compartment



- ⓘ Locate the next screw by holding the camera upside down with the battery compartment empty and face up.
- Remove the 6.3 mm screw using a J0 screwdriver.

Step 4 — Removing Screw Under Flash Bulb



i The next screw is found in the overhanging piece just above the lens.

- With the top of the camera facing down, remove the 3.4 mm screw with a J0 screwdriver.

Step 5 — Pulling Off the Top Cover



- Gently pull off the top cover with your hands by pulling on the tab on the left of the camera.

To reassemble your device, follow these instructions in reverse order.