




Reassembling Braun EP 100 hair-trimmer

Trimmer head

Reassemble the trimmer head of your Braun Exact Power EP 100 hair trimmer

Written By: cloclolulu

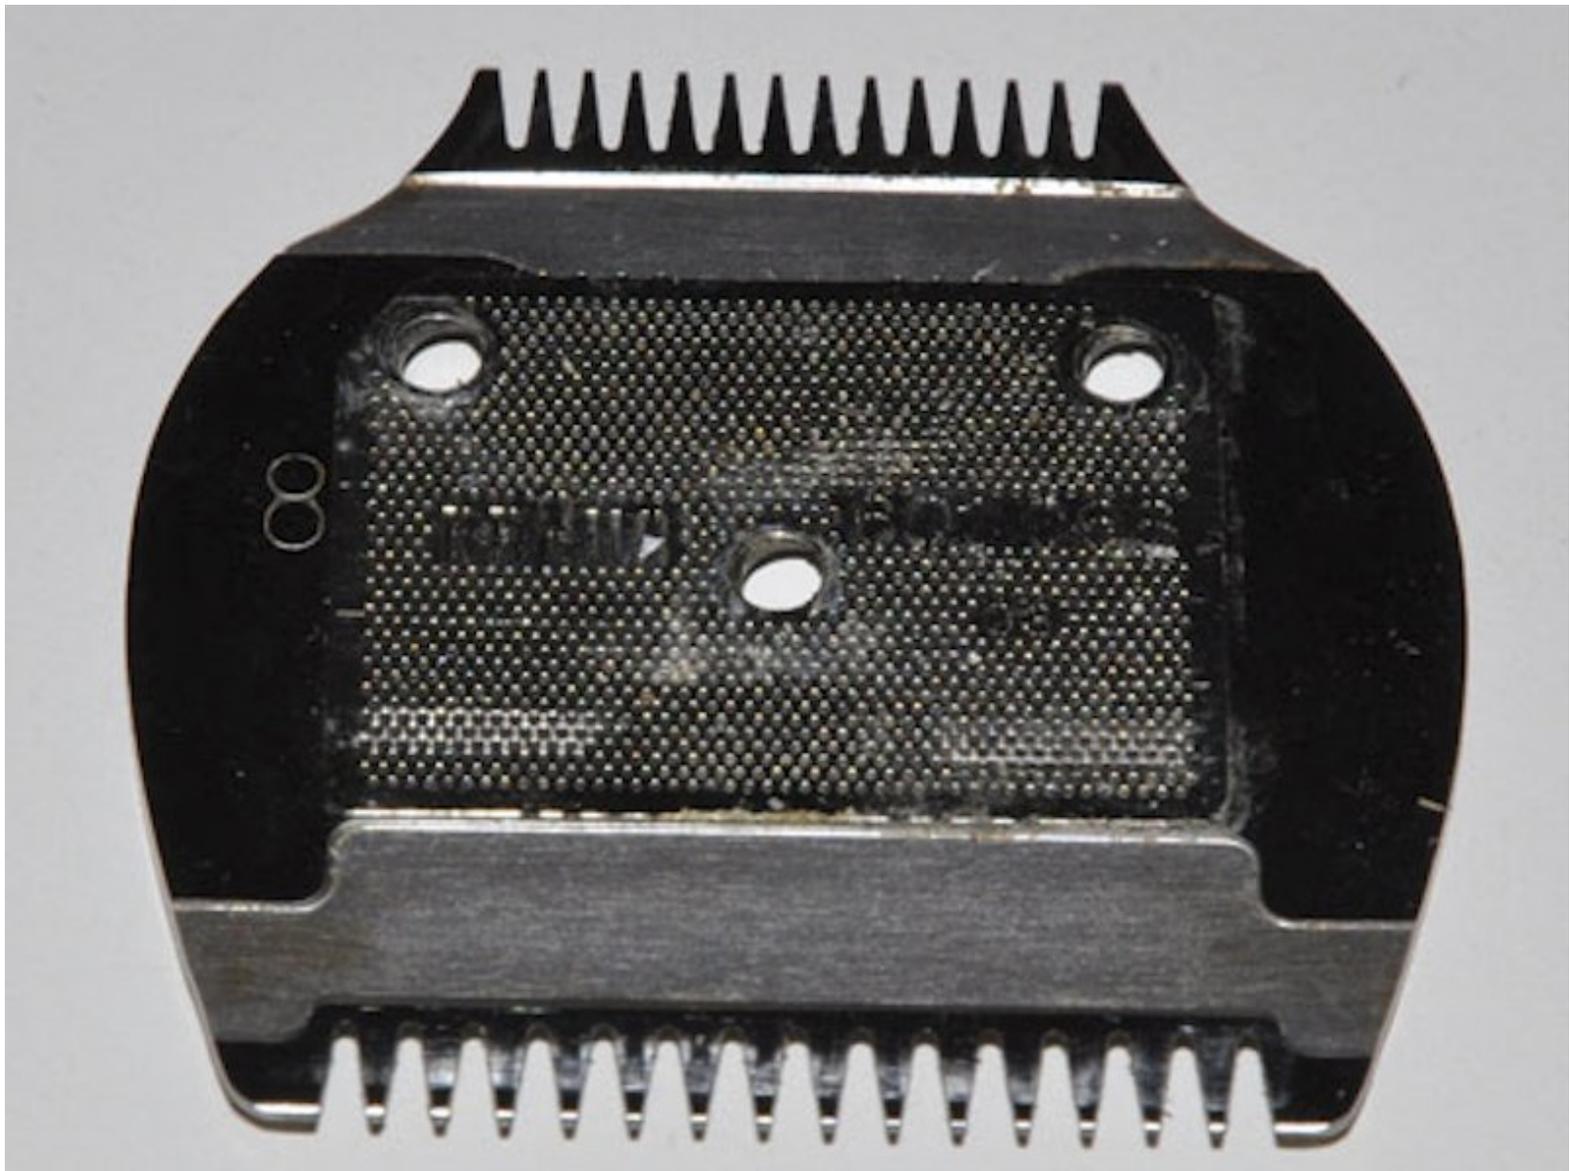


INTRODUCTION

If ever you disassembled the trimmer head in order to clean it thoroughly, and then had trouble assembling it back again, here's a step-by-step guide of how to achieve it!

TOOLS:


- [Nail 30mm long, dia. 1.5mm](#) (1)
- [T8 Torx Screwdriver](#) (1)

Step 1 — Trimmer head

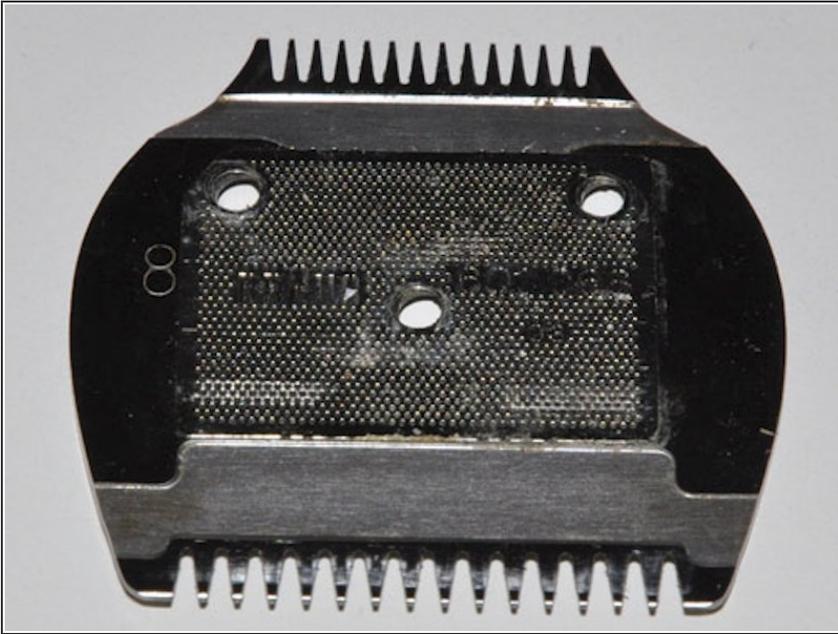


- Pick the thin lubrication sheet and put it on top of the base. Align the 3 holes.

Step 2

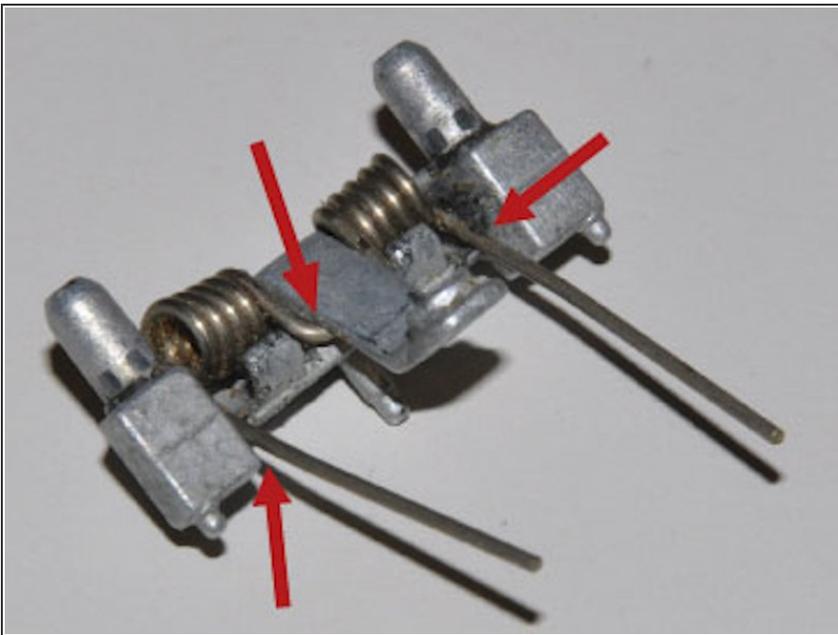


- Fit the first spring into the base (cast part). The ends have to be oriented to the bottom, as illustrated.

Step 3

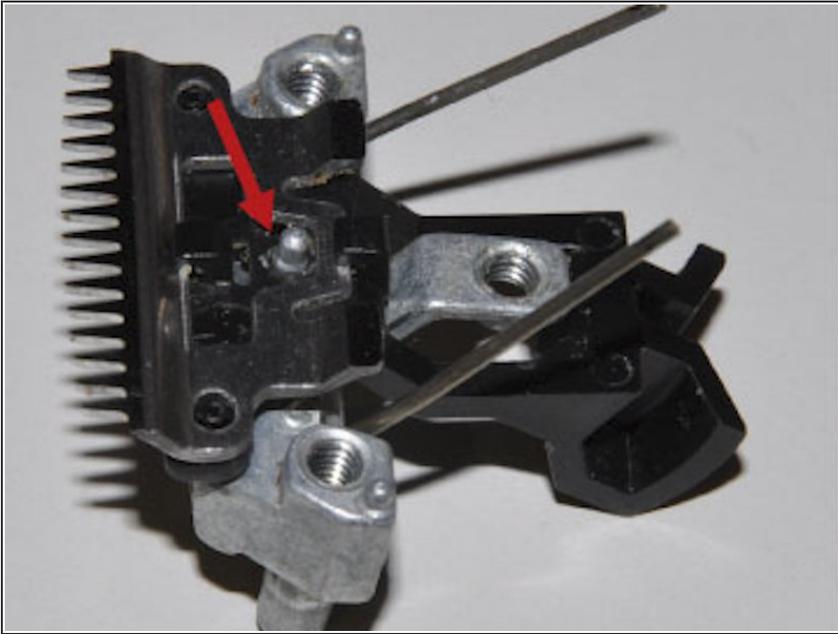


- Turn around the assembled parts, and fit the short hair trimmer knives into the small pin (see arrow) of the cast piece.

Step 4

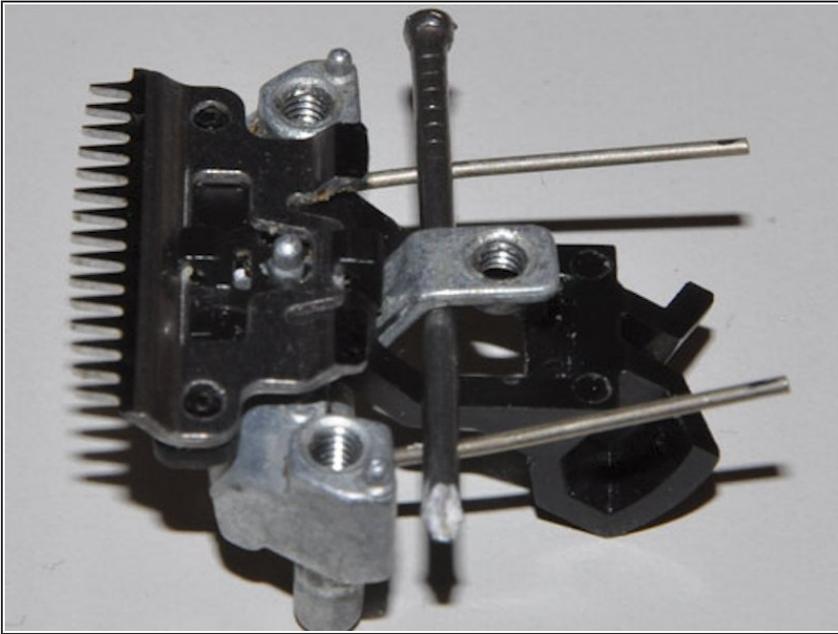


- Now insert the nail in between the spring ends and the small bracket. This will hold the ends and make it possible to further assemble the head.

Step 5

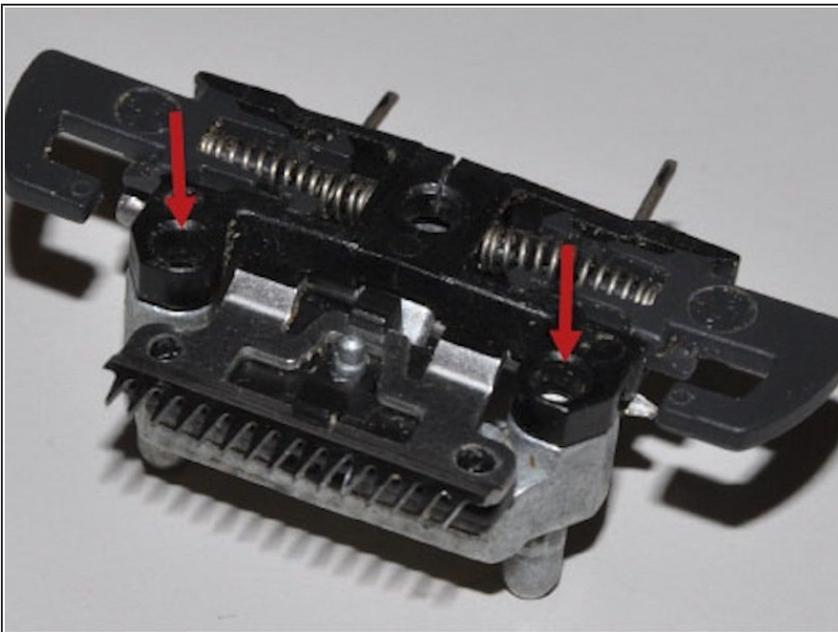



- Now you can fit the locking part into the two pins (see arrows). The spring ends should not be touched here - if yes, reposition the nail.

Step 6

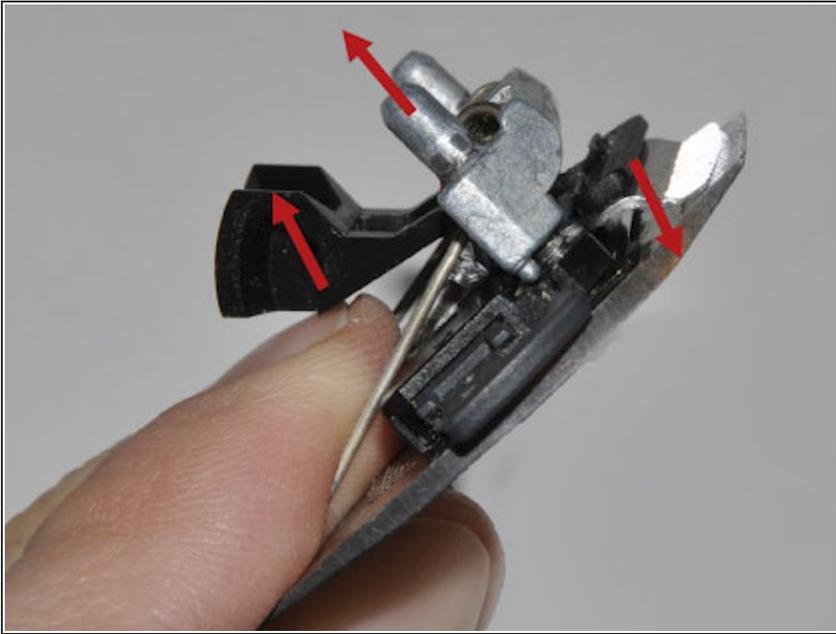


- Now fit the base plate of step 1 onto the other parts, using the 3 T8 screws.
- For the time being, do not tighten up the screws completely, just enough to hold all the parts together. This will allow you to gently lift the short hair trimmer with your finger - the knives will move downwards.
- Now a step where you may need some extra patience: take the small spring, insert it into the groove of the short hair trimmer with the 2 ends, gently push it and insert the spring winding into the upper groove of the cast part.

Step 7

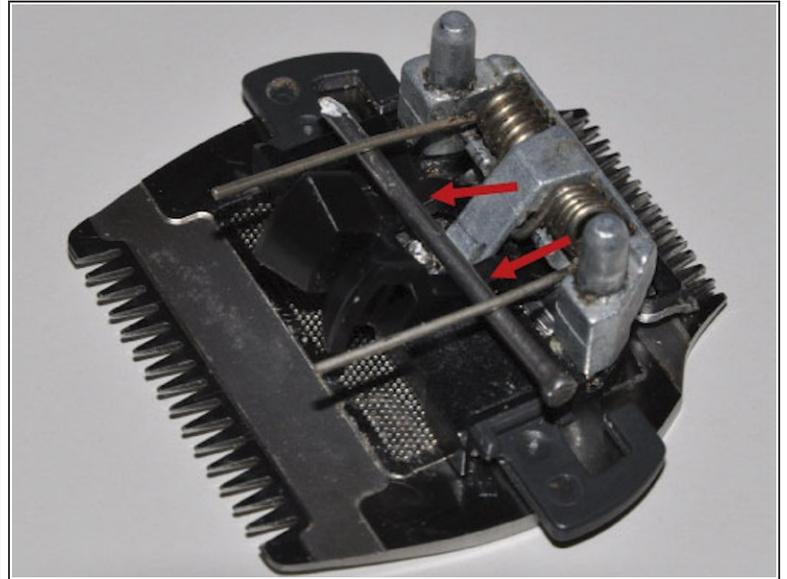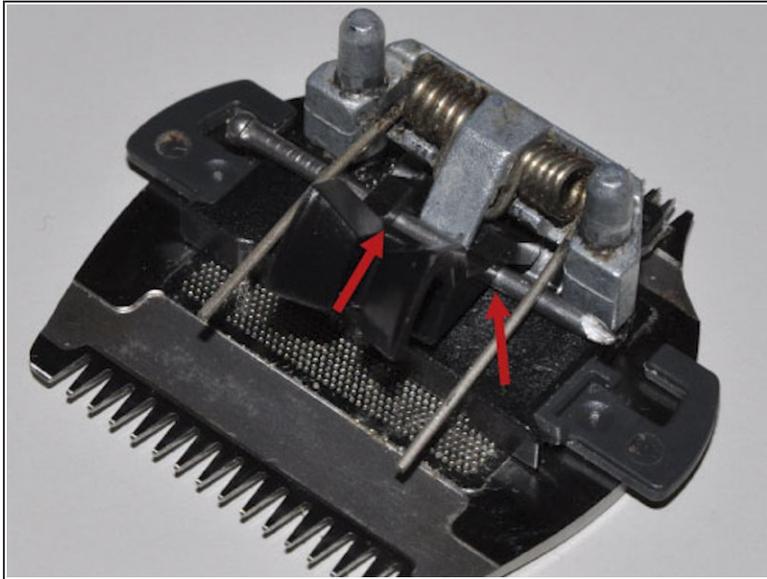


- Now retract the nail from its position... (first picture)
- ... and reinsert it one step higher (second picture), so that the nail pushes the spring ends above the plastic arms of the short hair trimmer.

Step 8

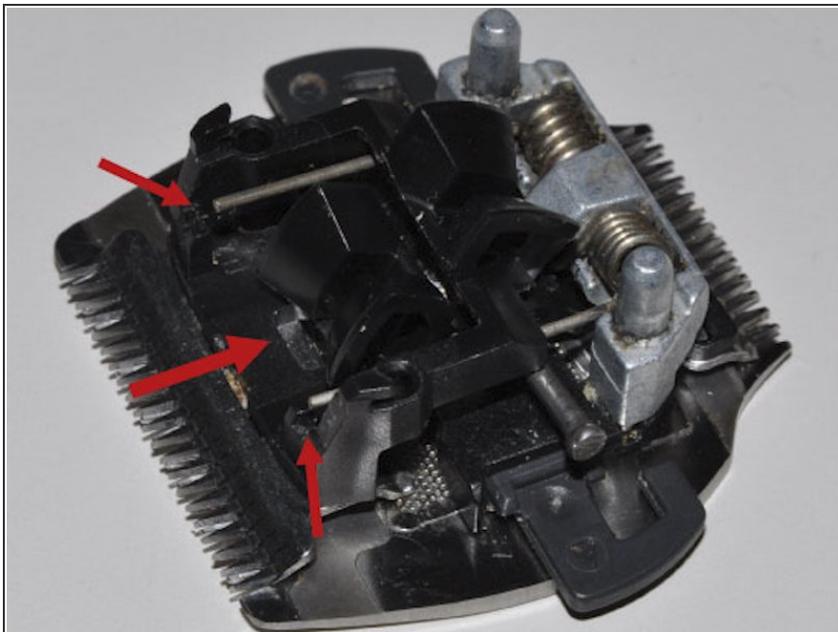


- Fit the wide hair trimmer into the assembled parts.

Step 9

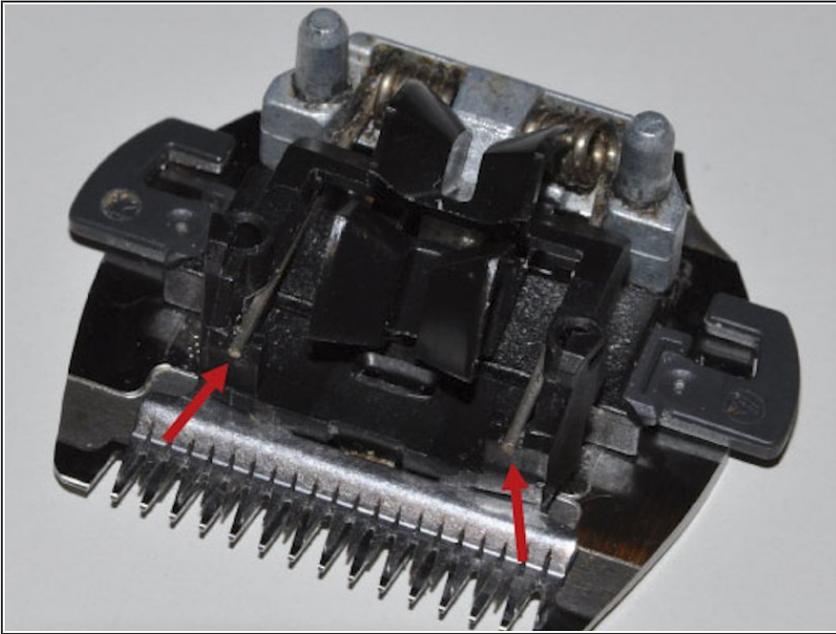

- If necessary, put the spring ends behind the small guides in the wide hair trimmer part.

Step 10

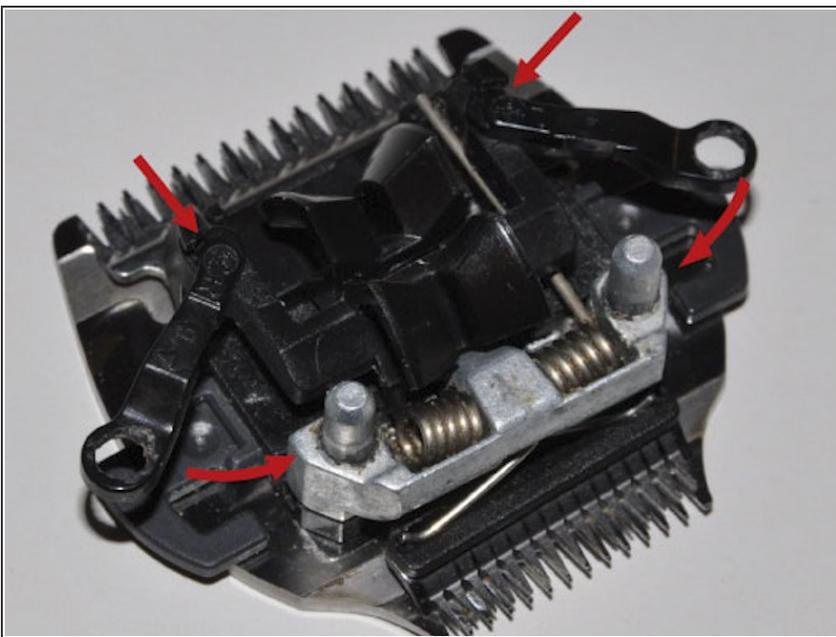

- Fit the two oscillation arms into the 2 pins of the wide hair trimmer first, and by spreading them.
- Then tilt them to the inside, that the small latches keep it in place.
- Gently lift the other ends of the arms above the pin of the cast part.
Careful: you may break the arms if you lift too hard!

Step 11



- Finally push the arms completely down the pin.
- Well, that's it!

To disassemble your device, follow these instructions in reverse order.