




# Sharp Aquos LC13B2UA Speakers Replacement

If the speakers on your Sharp Aquos LC13B2UA...

Written By: Robert Hobson

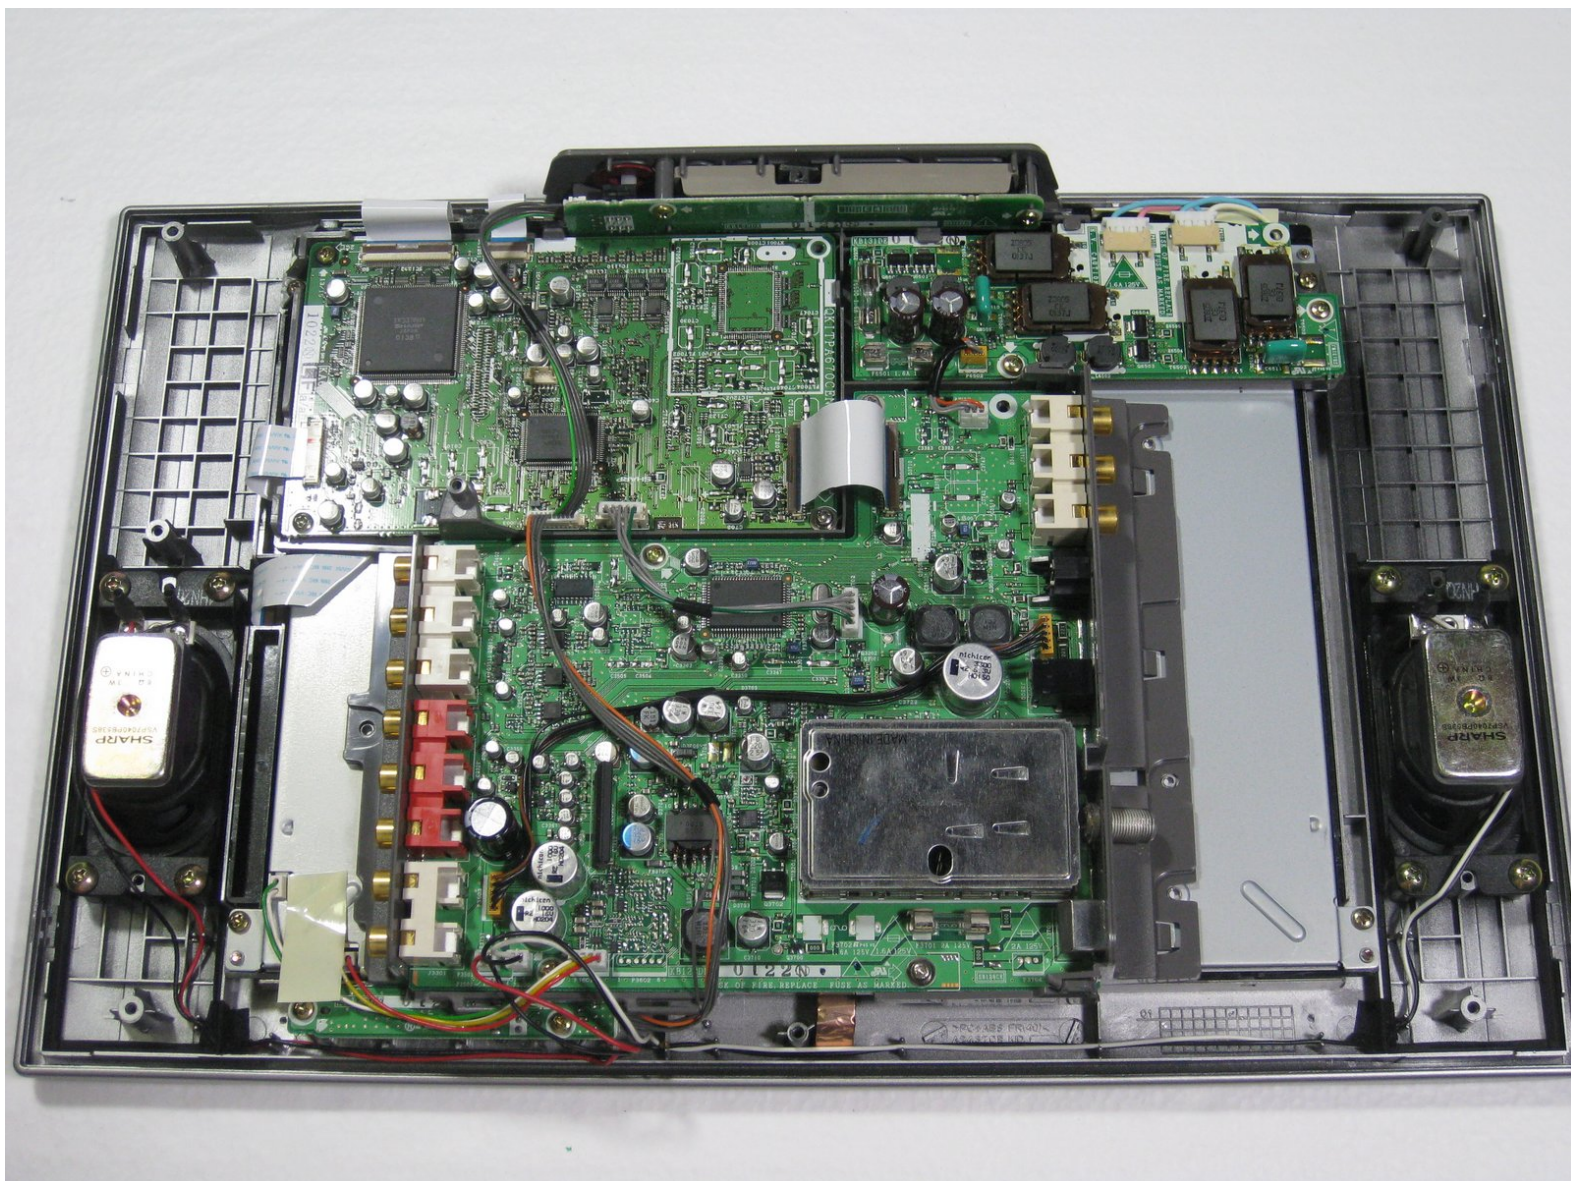

## INTRODUCTION

If the speakers on your Sharp Aquos LC13B2UA are not producing a clear audio, or no audio at all, this guide will help you replace those malfunctioning speakers.

The speakers on the TV are responsible for giving a clear sound of what is being transmitted, and faulty speakers might produce distorted audio or no sound at all.

Before using this guide, be sure that the TV is turned off and disconnected from any external power source.



### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-



## Step 1 — Stand



- Place the TV face down on a flat smooth surface as to not scratch the screen.
- Using a Phillips #2 screwdriver remove the four 8mm screws attaching the stand to the TV.

## Step 2




- Lift the stand off the television.

### Step 3 — Back Case



- Remove the two back panels by prying them out with your hands.

### Step 4

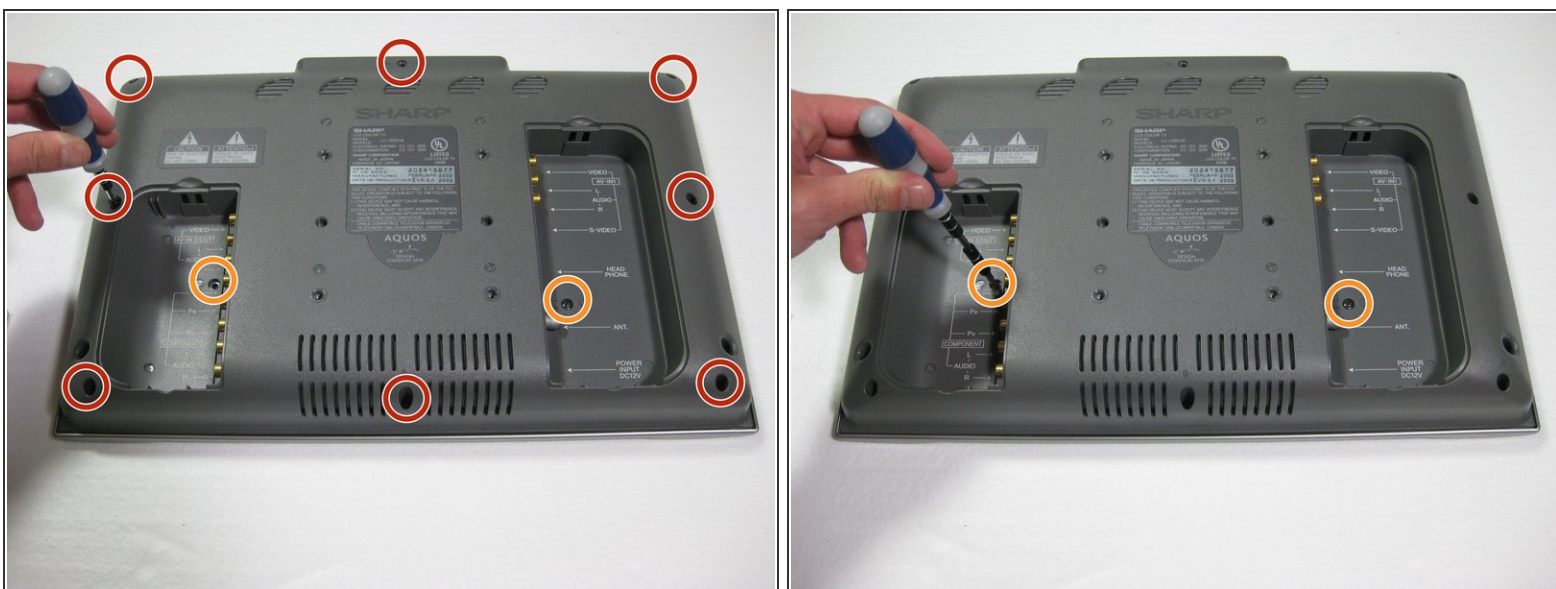

- Using a Phillips #2 screwdriver, remove the eight 6mm Phillips screws located around the edge.
- Using a Phillips #2 screwdriver, remove the two 6mm Phillips screws located near the inputs.





## Step 5



- Using your hands, gently lift and remove the back case of the television.



## Step 6 — Speakers

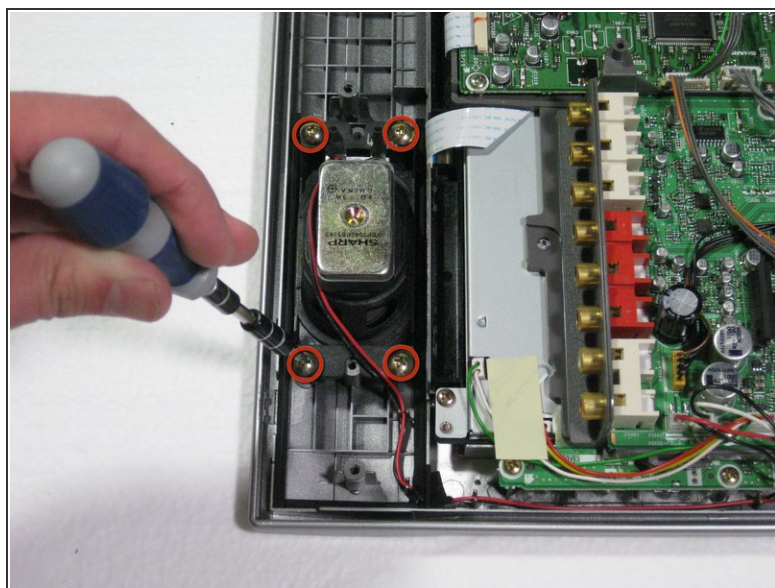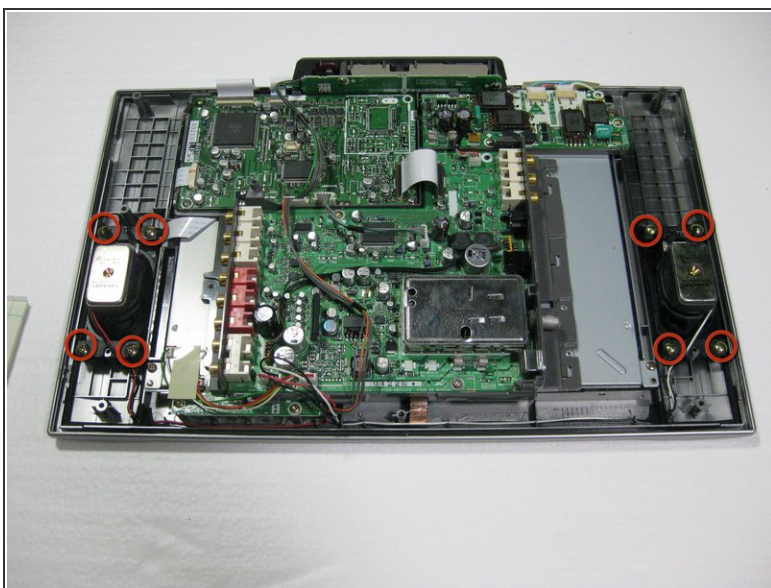

- Remove the eight 9mm screws from both speakers.

⚠ Do not remove the speakers yet—they are still attached.

## Step 7

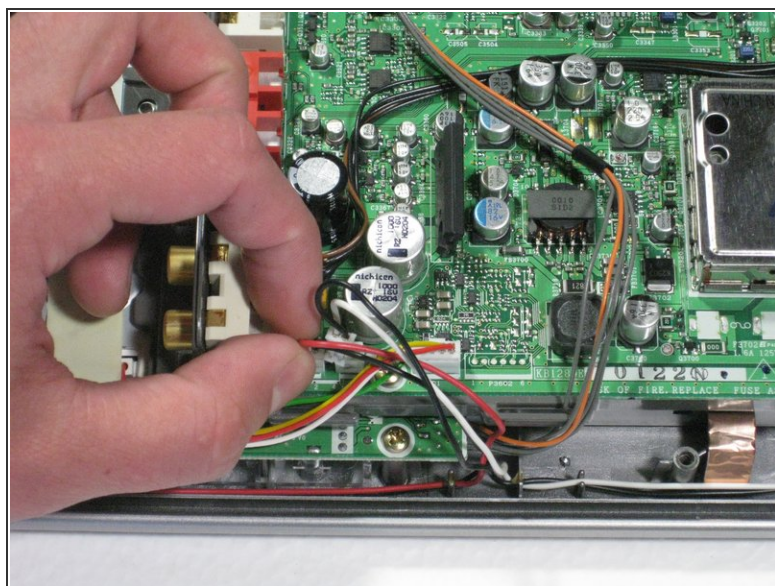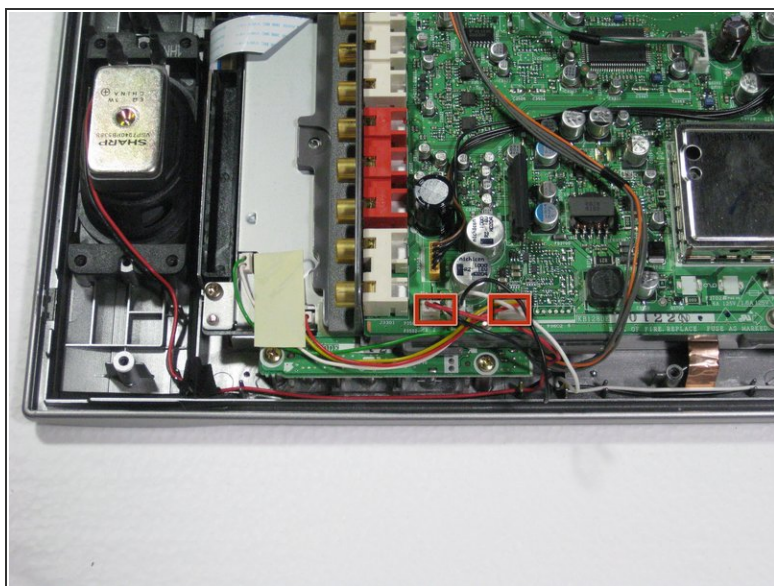


- Remove the two speaker cables from the circuit board by pinching the plastic connectors and firmly pulling up.

⚠ Pull on the plastic part of the connector, even though it may seem easiest to pull on the wires.

⚠ Do not remove the speakers yet—they are still attached.



## Step 8

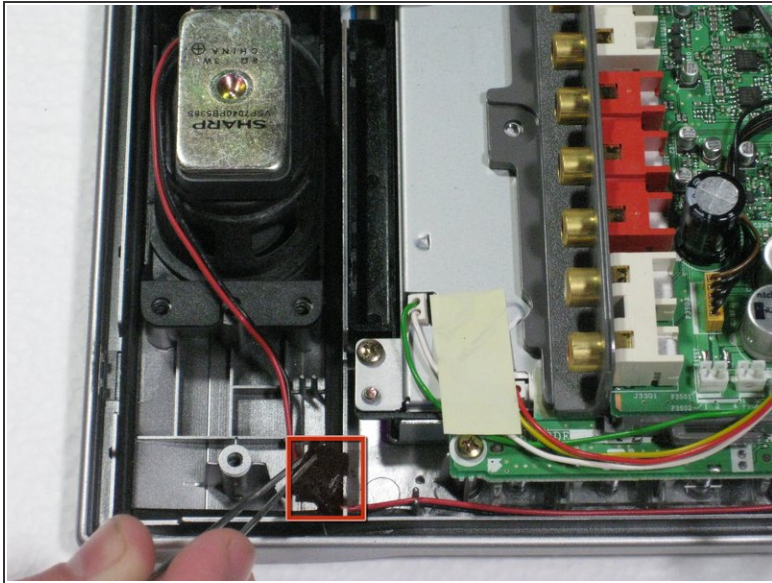

- Remove the two black tape strips (one on each side) securing the power cable to the frame.
- The speakers can now be removed.

To reassemble your device, follow these instructions in reverse order.