



# Disassembling Canon EOS Rebel XS Back Cover

Use this guide to replace a dysfunctional back...

Written By: Daniel Bussone



# INTRODUCTION

Use this guide to replace a dysfunctional back cover.

---

## TOOLS:

Phillips #00 Screwdriver (1)

Tweezers (1)

---


## Step 1 — Latch Side Cover



- Remove the two 3mm (1/8") black screws from the side cover using a #00 Phillips screwdriver.



## Step 2

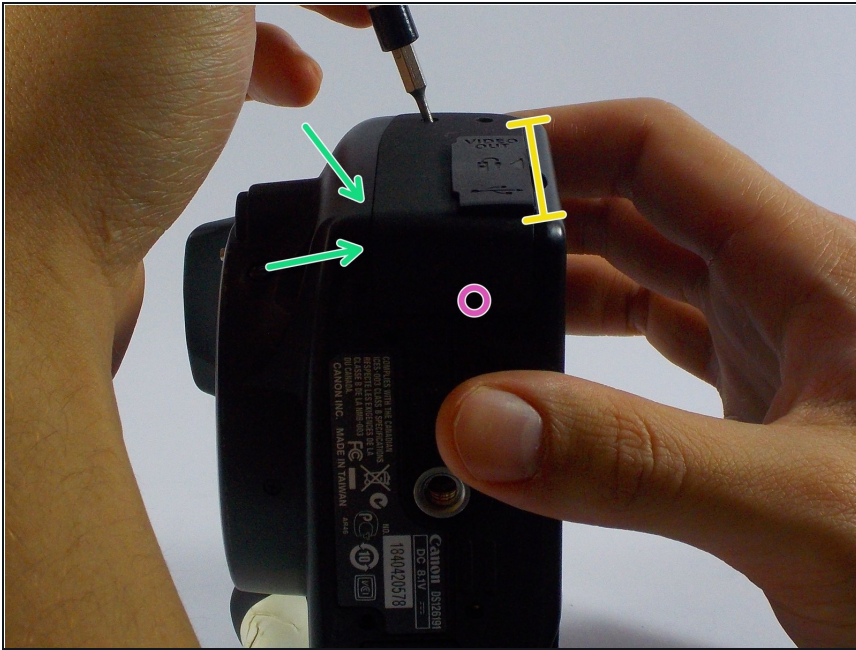


- On the bottom, remove the 6mm (13/64") screw with the #00 Phillips Screwdriver.
- Pry up the panel; starting from the front/bottom corner, as indicated.
- There's a concealed lip, under the opposite edge.

## Step 3 — Back Cover



- Remove the three long black screws from the bottom using a #00 Phillips screwdriver.
- Use [tweezers](#) to lift the panel.

## Step 4

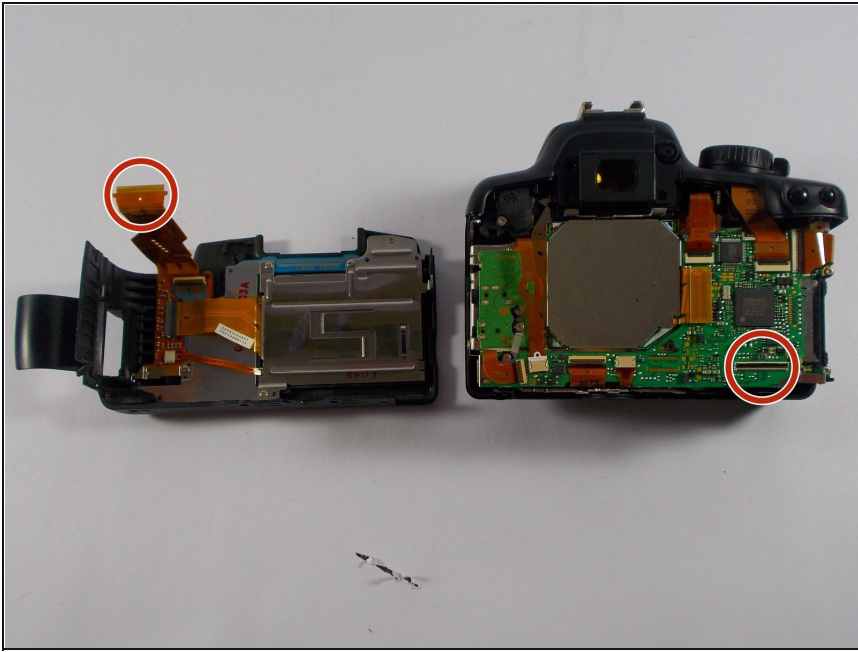

- Once you have detached the back cover, use a pair of tweezers to lightly pull on strap found connecting the back cover to the camera.

---

To reassemble your device, follow these instructions in reverse order.