



# 2003-2006 Chevrolet Silverado Headlight Bulb Replacement

How to change the low beam lights on a 2003-2006 Chevy Silverado.

Written By: Alisson Silva



## INTRODUCTION

This is a guide on how to replace the low beam lights on a 2004 Chevrolet Silverado. The headlight is held in place by clips. You will not need any tools to complete this project besides the replacement bulbs. Having a rag or terry cloth is best for handling the bulb.




### PARTS:

- [Sylvania SilverStar 9006 ST ZXE Halogen Headlight Bulb, 2 Pack](#) (1)
-




## Step 1 — Preparation



 Turn your vehicle off, and let the engine bay cool before starting the following steps.

- First, open the driver side door, and reach under the steering wheel and release the latch to open up the hood of your truck.
- Next, walk over to either of the headlights and remove the pin above the headlight to release the housing unit.
- ☒ Make sure to put the pin in a safe location so you can lock in the housing once you finish replacing the light bulbs.


## Step 2 — Removing the old lights

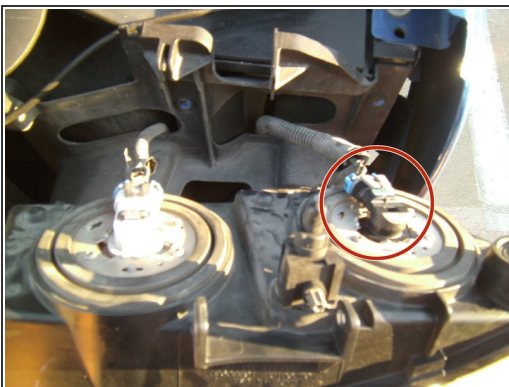

- Pinch the blue clips and remove them from the back of the wiring harness.
- After removing the pin, you should now be able to tilt the headlight downward to gain access to all of the wires.
- Twist the light bulb counter clockwise and gently remove the harness and the light bulb.


This document was generated on 2021-03-31 01:26:15 AM (MST).

### Step 3 — Inserting the new lightbulb

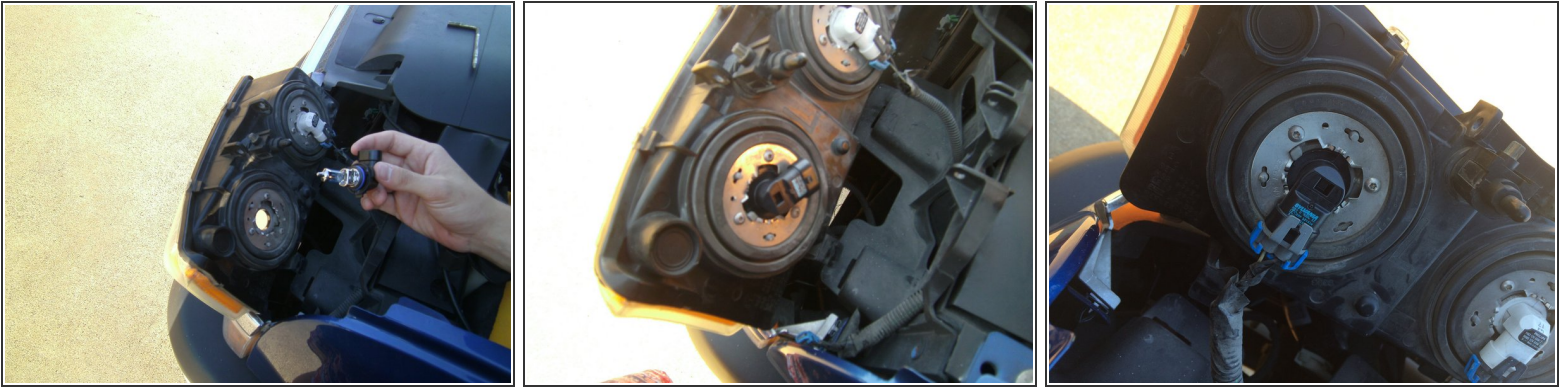

- Unbox your new low beam light, and insert it into the same hole you took the old one out of.
- i** Be sure to twist the bulb clockwise until it locks into place with the harness pointing down.
- Plug the blue wiring harness back in until you hear a click, and it should now be locked back into place.

### Step 4 — Putting the headlight in

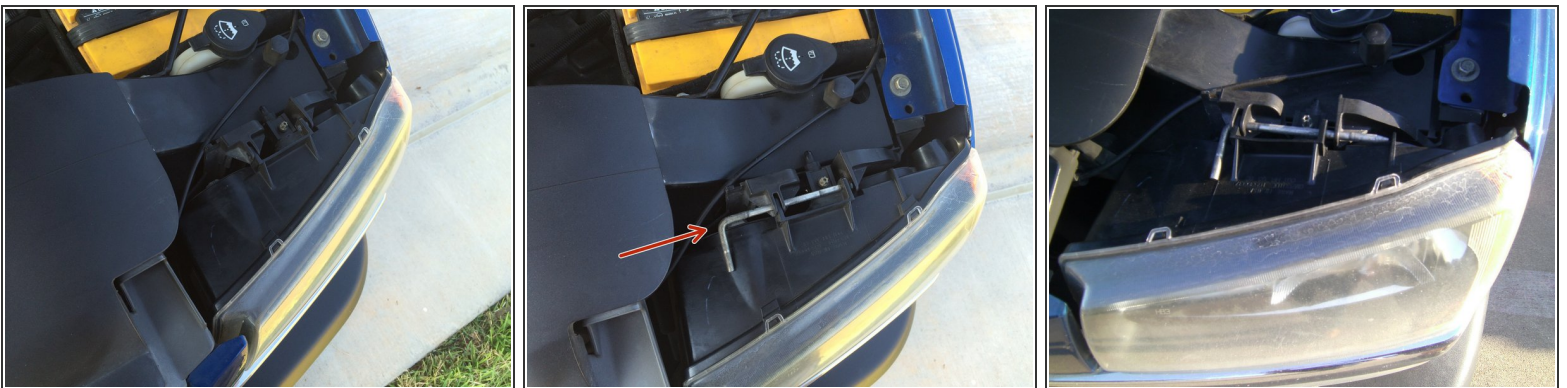 

- Begin to replace the headlight housing back into its original place by tucking in the wires.
- Grab the pin that you took out at the beginning and insert it back into the housing unit.
- Align the housing back with the guide holes for the pin.



## Step 5 — Repeat




- Follow steps 1-4 for the other headlight to replace the low beam headlight.

 Make sure to keep track of all of your parts and dispose of your old bulbs properly.

## Step 6



-  Be sure to check your headlight alignment. This can be done by a professional or through Youtube videos.

To replace the other light bulb just follow the same steps as above.