



2007-2012 Jeep Wrangler Headlight Replacement

Learn how to replace the headlights on a Jeep Wrangler

Written By: Marco Santini



INTRODUCTION

Did your headlight on your jeep recently stop working? Use this guide to replace the headlight and get driving once again.

TOOLS:

- [Star Bit Screwdriver](#) (1)
- [Flathead Screwdriver](#) (1)

PARTS:


- [Jeep Wrangler Replacement Headlight](#) (2)

Step 1 — Headlight





- Locate the two gray latches on either side of the hood near the headlights.
- Pull the latches away from the hood to release the latches.

Step 2

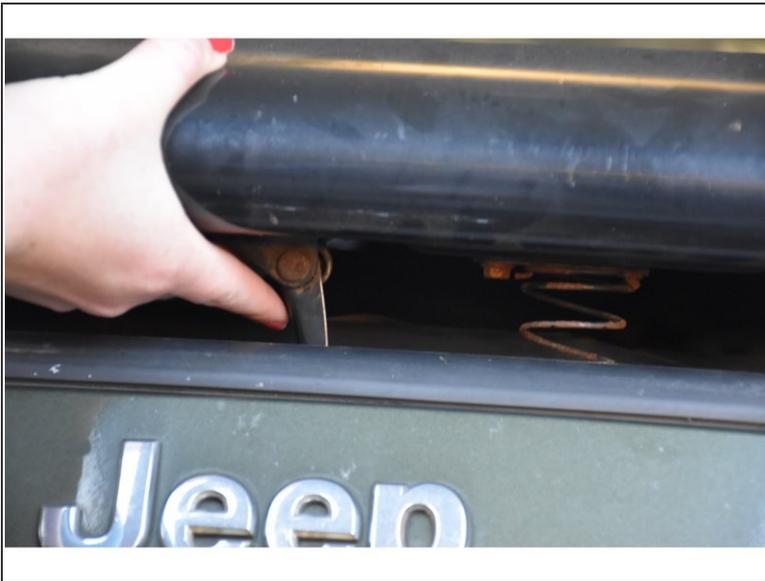



- Reach under the hood and push the lever left to right. You should now be able to lift the hood.
- Prop open the hood by inserting the support rod into the designated hole on the underside of the hood.

Step 3

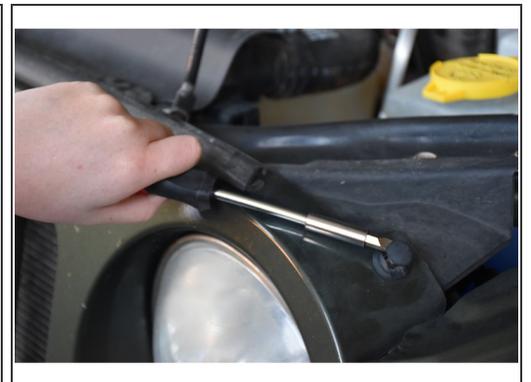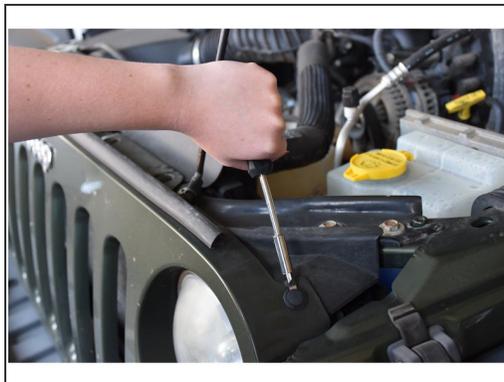

- Locate all six push on fasteners on the top of the grill.
- Use a flathead screwdriver to pry up the fasteners, and make sure you put the screws somewhere safe.
- ⓘ If the fasteners will not come up, use two flathead screwdrivers on either side of the fastener to remove.

Step 4

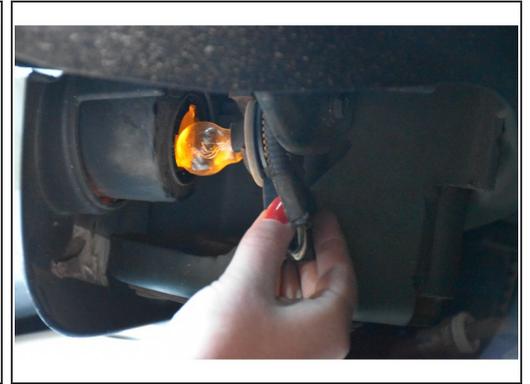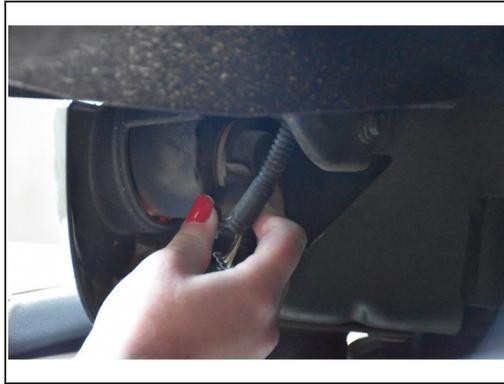

- Locate right and left blinker lights under the fenders.
- Twist blinker light toward the ground, and make sure you pull the bulb out carefully.


⚠ Make sure you are handling bulb carefully.

Step 5





- Make sure all fasteners are removed from top of the grill, and the top of the grill is loose.
- Firmly pull the bottom of the grill until the grill disconnects from the jeep.

Step 6

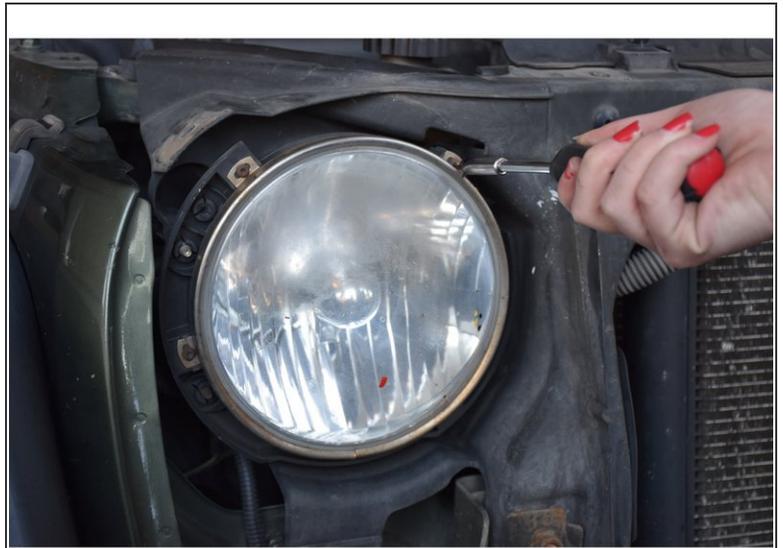




- Locate the 4 screws holding the headlight in place.
- Use a star bit screwdriver to unscrew the .164-18 x .625 mm star bit screws around the headlight, and make sure you place screws somewhere safe.
- ⓘ Hold the headlight when unscrewing last screw to prevent the headlight from falling.

Step 7

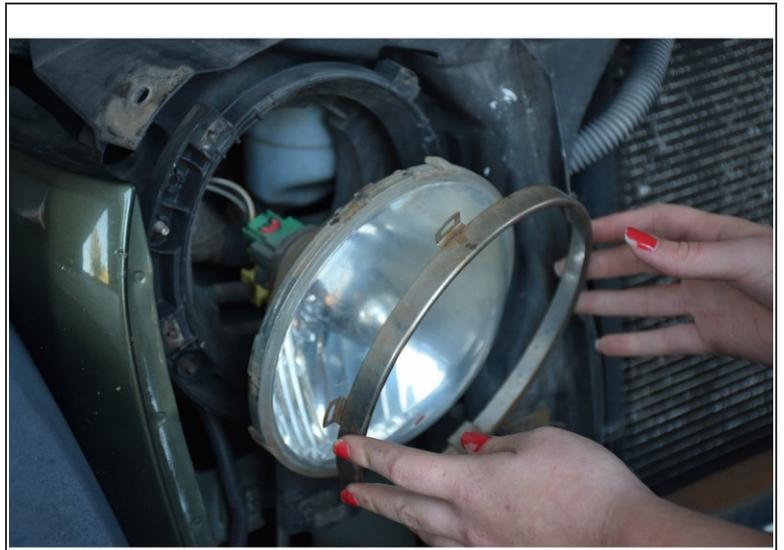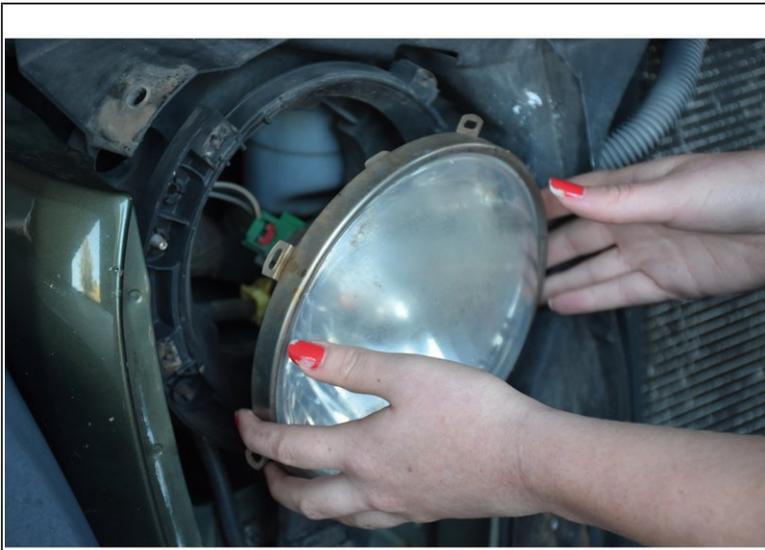

- Use your hands to carefully remove silver ring from the headlight.

Step 8

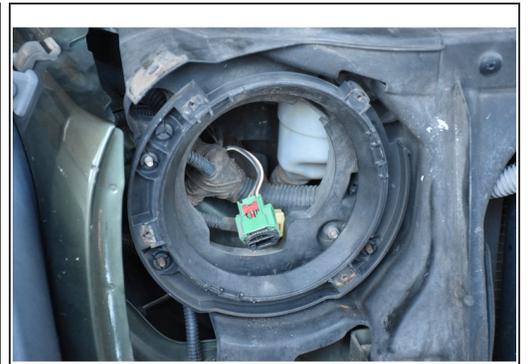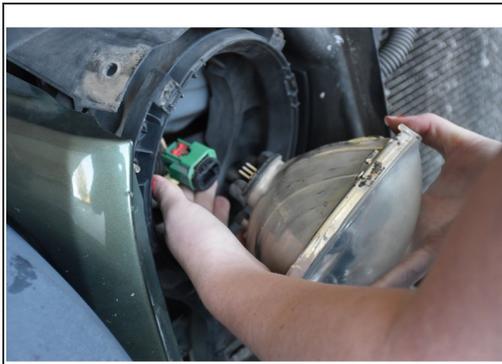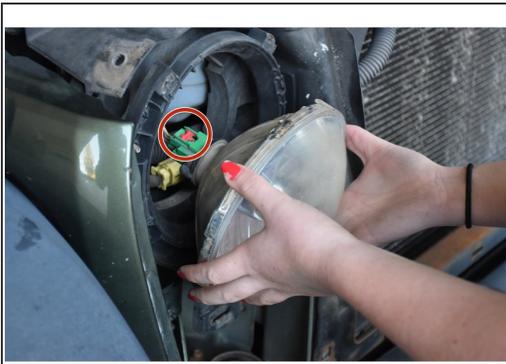

- Locate red tab on the headlight plug connector, and push it away from the headlight.
- Firmly pull the connector away from headlight to remove.

To reassemble your device, follow these instructions in reverse order.