



# Canon EOS Rebel T3i Screen Replacement

Replacing the damaged LCD screen on the rear casing.

Written By: Natalie Crock



---

## INTRODUCTION

Use this guide to replace the LCD screen on your Canon EOS Rebel T3i.

---

### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Battery



- Locate the battery compartment on the bottom of the camera.

## Step 2



- Hook your finger onto the compartment door latch.
- Open the battery compartment door.

### Step 3



- Remove the battery from the compartment.

### Step 4 — Screen




- Remove the two 3 mm Phillips #000 screws. The screws are on opposite sides of the screen.

## Step 5



- Remove the plastic backing.

## Step 6

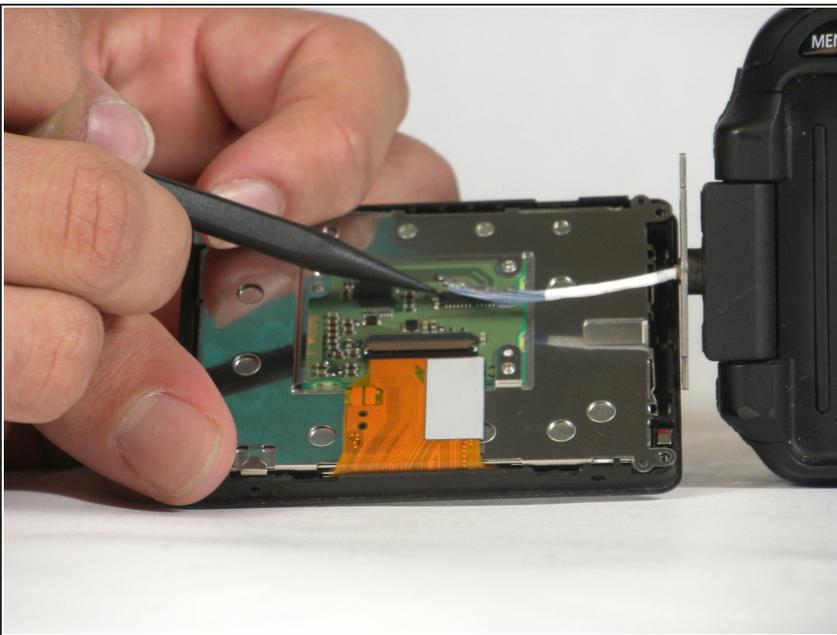

- Unplug the blue cable from the back of the LCD.

## Step 7



- Remove the two 3 mm Phillips #000 screws.
- Separate the LCD from the plastic housing.

To reassemble your device, follow these instructions in reverse order.