



# Sony Alpha A3000 Memory Card Replacement

Step by step instructions on how to replace the memory card in a Sony Alpha A3000.


Written By: Leonard Holloman



## Step 1 — Memory Card



- Access the memory card port by opening the flap on the side of the camera shown here. The motion of the flap should be counterclockwise.

 To prevent damage to camera or memory card, ensure the camera is powered off before removing memory card.

## Step 2



- Depress the old memory card to release it from its cradle. Extract the card and replace it with the new one, pushing the card in until it locks.

To reassemble your device, follow these instructions in reverse order.