



Trio Stealth G4 Speaker Replacement

This guide will show step by step instructions on how to replace a broken or faulty speaker in your Trio Stealth G4. This specific repair may be necessary if your tablet does not play sound out loud, but still plays when headphones are plugged in.

Written By: Matt Arnold



INTRODUCTION

The speaker allows the device to play audio out loud. The replacement of the speaker may be necessary if your tablet does not play sound out loud, but still plays when headphones are plugged in.

The disassembly is relatively simple, but will require the use of a soldering iron to disconnect a couple of wires. Be sure to review the [iFixit soldering guide](#) if you do not have experience with soldering. You will also need to remove a couple of screws in order to take out the speaker.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Soldering Iron](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

A black, rectangular electronic device, possibly a portable media player or a small tablet, lying on a light gray surface. The device has rounded corners and a smooth finish. In the center, the word "trio:)" is printed in white, lowercase letters. At the bottom, there is a small white label with technical specifications and a barcode.

- Flip your tablet over so that the back panel is facing up.



- Use a plastic opening tool to gently pry the back panel assembly apart from the front casing.
- Start on one edge of the device by inserting the plastic opening tool between the back panel and the front casing using a gentle rocking motion.

Step 3



- Once you have successfully separated one edge of the back panel from the front casing, slide the plastic opening tool along the other edges to detach them as well.
- ❗ The latches keeping the back panel attached to the front casing can sometimes be a little difficult to separate, so don't be afraid to use some force.

Step 4



- Remove the back panel from the rest of the tablet and set it aside.

Step 5





- The plastic volume button cover may fall out when you remove the back panel. Set it aside.

Step 6 — Speaker




- Remove the yellow tape covering the set of wires located near the upper right corner of the battery.

Step 7

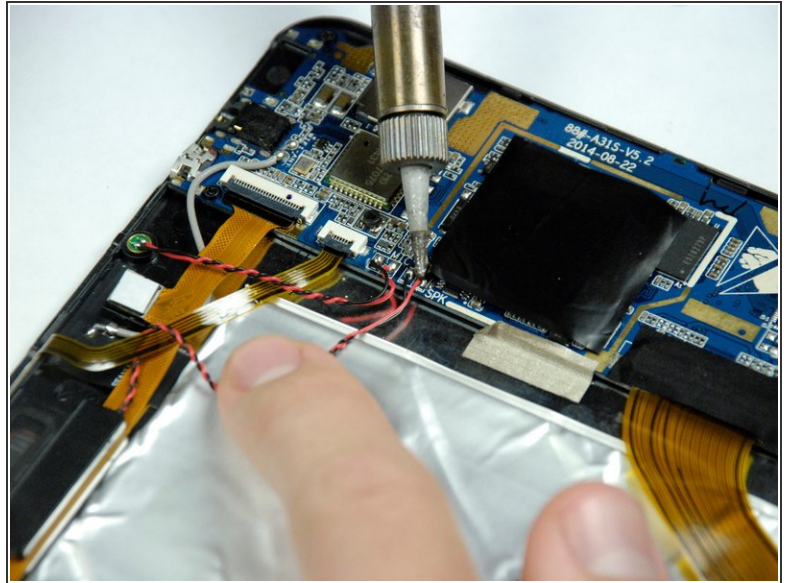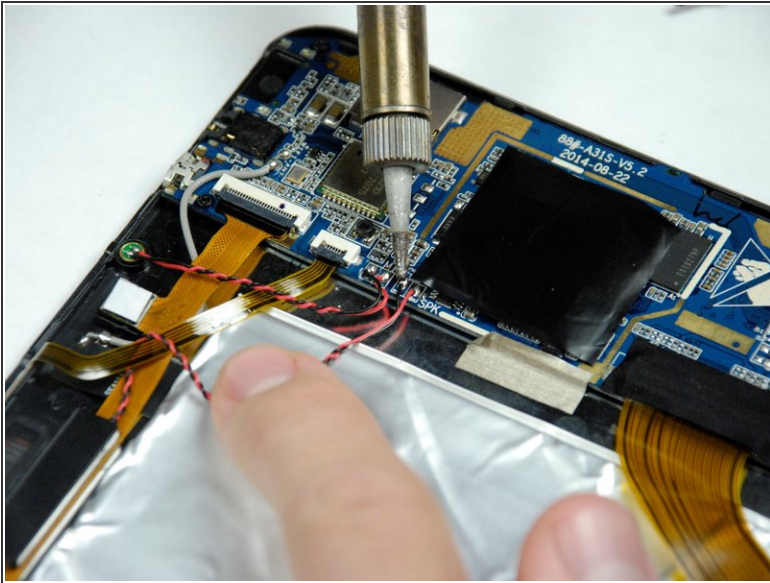


- Use the soldering iron to [melt away the solder](#) from the red and black wires that connect the speaker to the motherboard.
- Once the solder is completely removed, pull the wires away from the motherboard.

Step 8

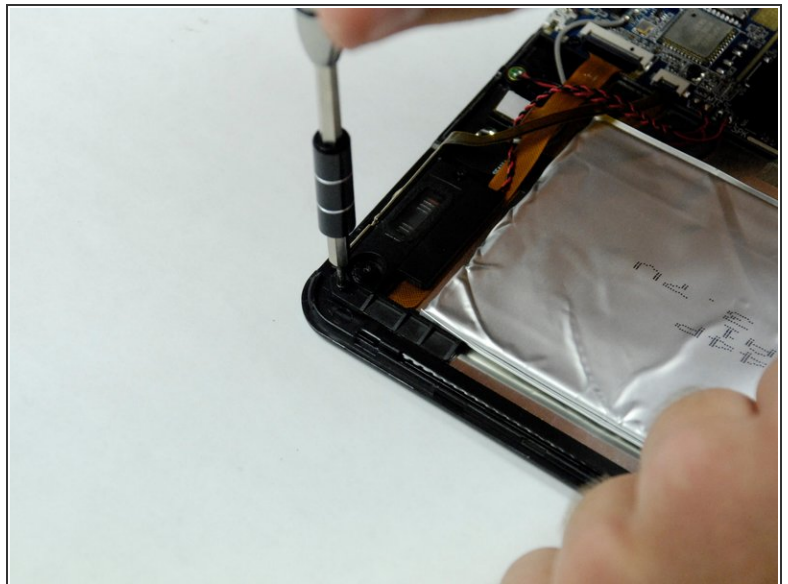

- Use a J000 Phillips head screwdriver to remove the two 4.3 mm screws securing the speaker to the device and set them aside.

Step 9

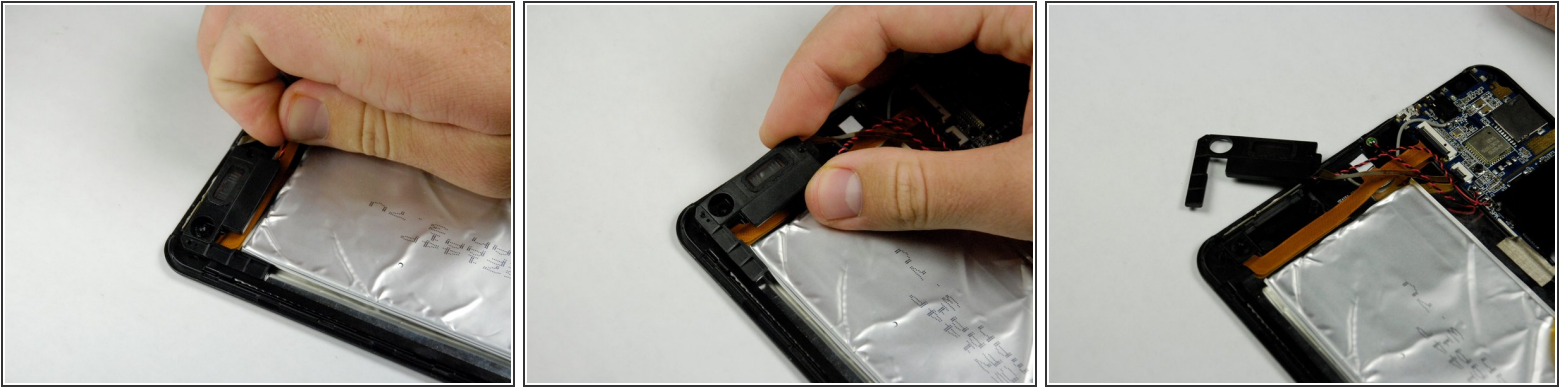

- Use your fingers to remove the plastic L-shaped speaker housing from the tablet.

To reassemble your device, follow these instructions in reverse order.