



# HP ProOne 600 G1 RAM Replacement

This guide shows you how to remove the computer's RAM.

Written By: Claire Crocker



## INTRODUCTION



The RAM may be replaced or updated in order to increase your computer's speed and performance. Before performing any work, always remember to completely turn off and disconnect your computer from any power source.

## Step 1 — RAM




- Push the unlock tabs on the back on the monitor in and towards each other while sliding the back cover up.

## Step 2

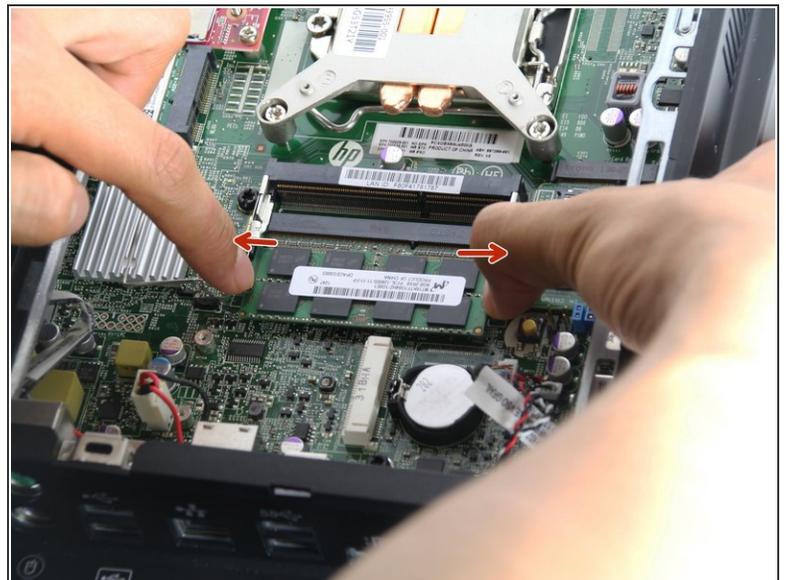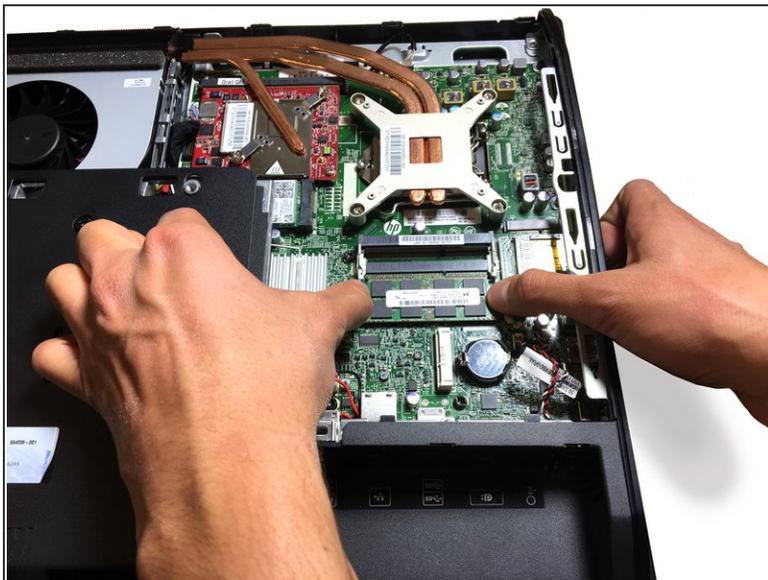

- Locate the RAM in the bottom right hand corner.
- Pull the two silver brackets holding the RAM away from each other.

### Step 3

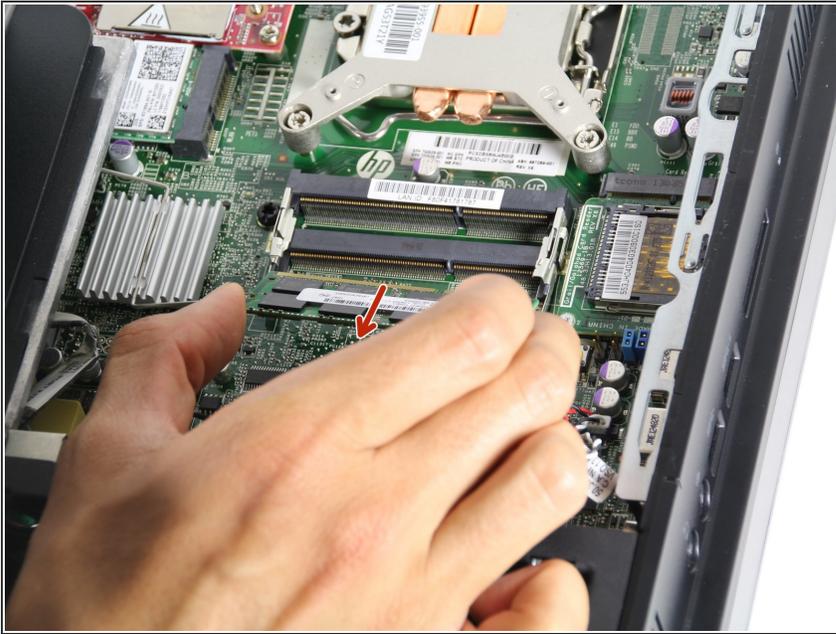

- Carefully remove RAM.

To reassemble your device, follow these instructions in reverse order.