



Lenovo Yoga 2 Pro Screen and Digitizer Replacement

In this guide we will walk you through replacing the screen and digitizer.

Written By: Thomas Simko



INTRODUCTION

In the Lenovo Yoga Pro 2, the LCD and the digitizer are "glued" together, meaning that you have to replace the whole screen and cannot replace just the glass.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-

Step 1 — Screen and Digitizer



- Open the laptop and remove the two screw covers on either side of the computer near the hinges using either the tip of a flathead screwdriver or a spudger.

Step 2

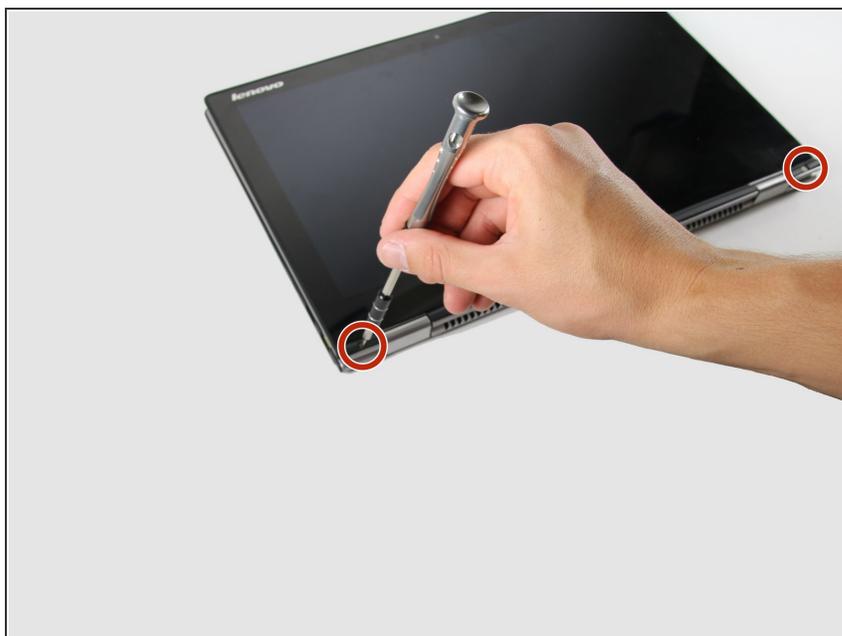

- Remove the revealed two 3/16" screws using a Phillips #00 screwdriver.

Step 3



- Lift the two plastic bezel pieces off using a spudger.
 - Using a prying tool such as a spudger, gently lift the long plastic bezel piece away from the screen.
- ⚠ Be certain to only pry the plastic piece off, not anything under it. There are fragile components beneath it.

Step 4



- Remove the three 1/8" screws using a Phillips #00 screwdriver.

Step 5



- Gently remove the circuit board and set it aside.

Step 6




- Remove the last 1/8" screw near the middle of the screen using a Phillips #00 screwdriver.

Step 7




- Slide the screen up away from the hinges and lift from the backplate.

Step 8

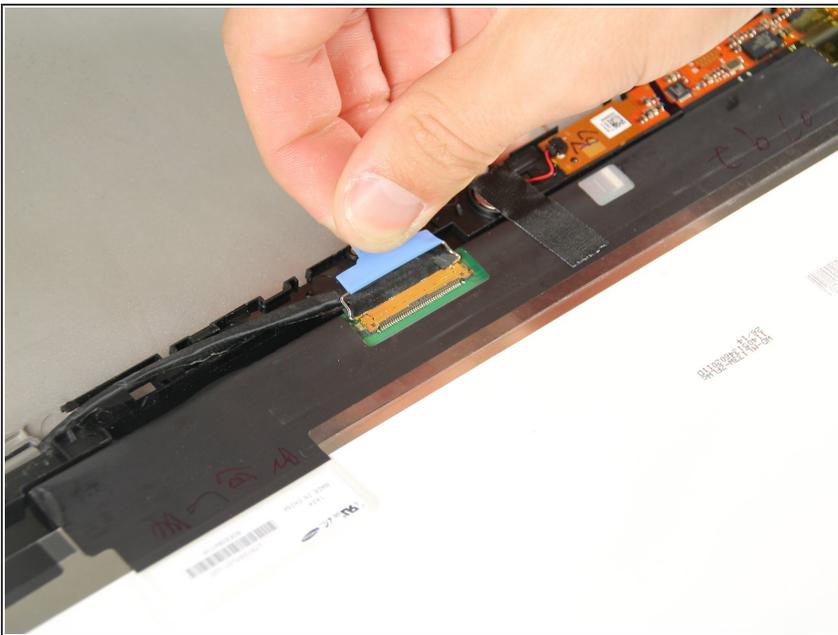


- Fold the screen over and disconnect the LCD screen cable by lifting up the blue tab and pulling.

Step 9

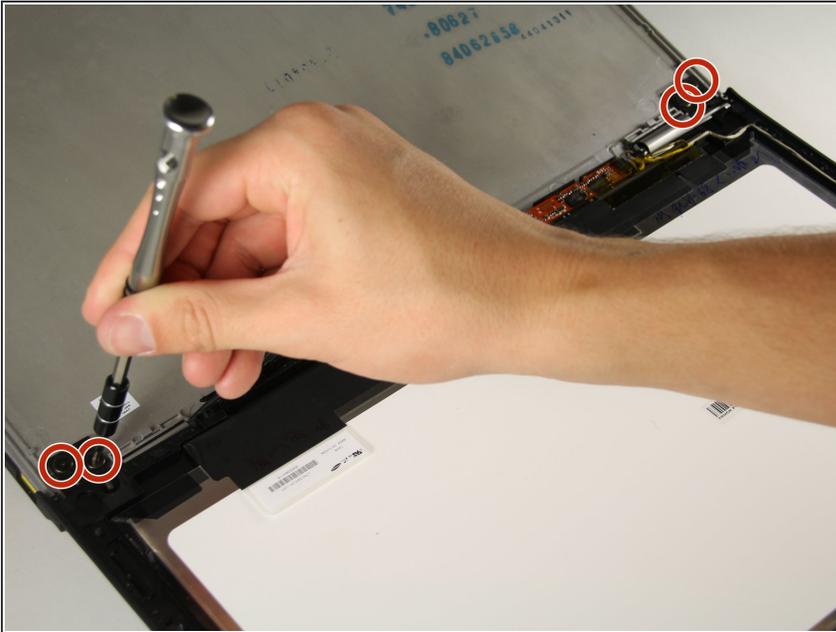

- Remove the four 1/8" screws using a Phillips #00 screwdriver from the hinge on either side of the laptop.

Step 10

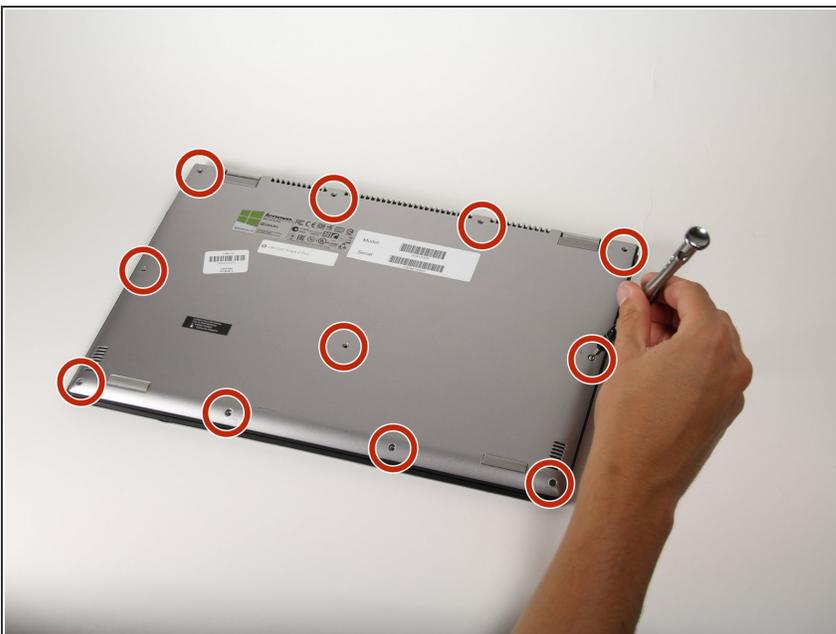


- Using a Torx T5 screwdriver, remove the eleven 1/4" screws from the back of the laptop.

Step 11




- Gently lift off the back cover.

Step 12

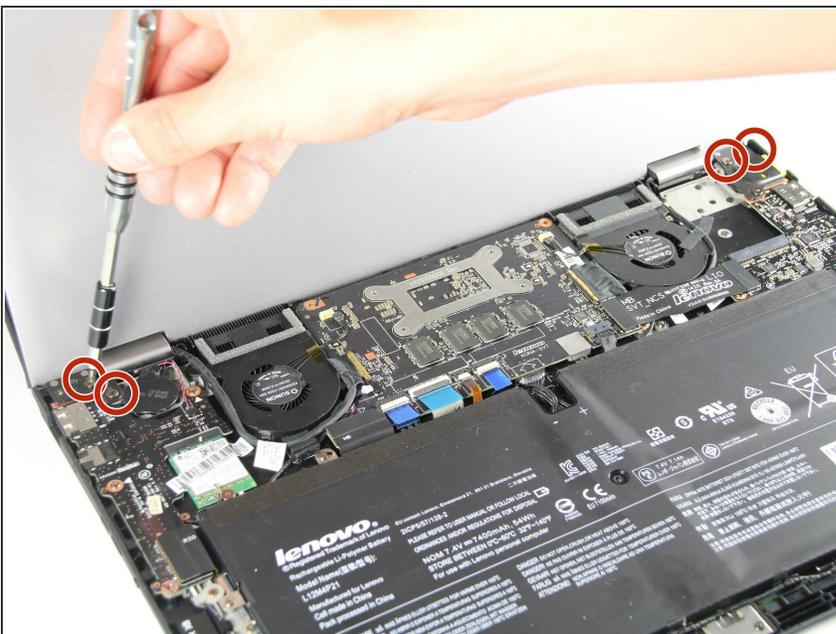

- Remove the four 3/16" screws from the top of the laptop near the hinges using a Phillips #00 screwdriver.

Step 13

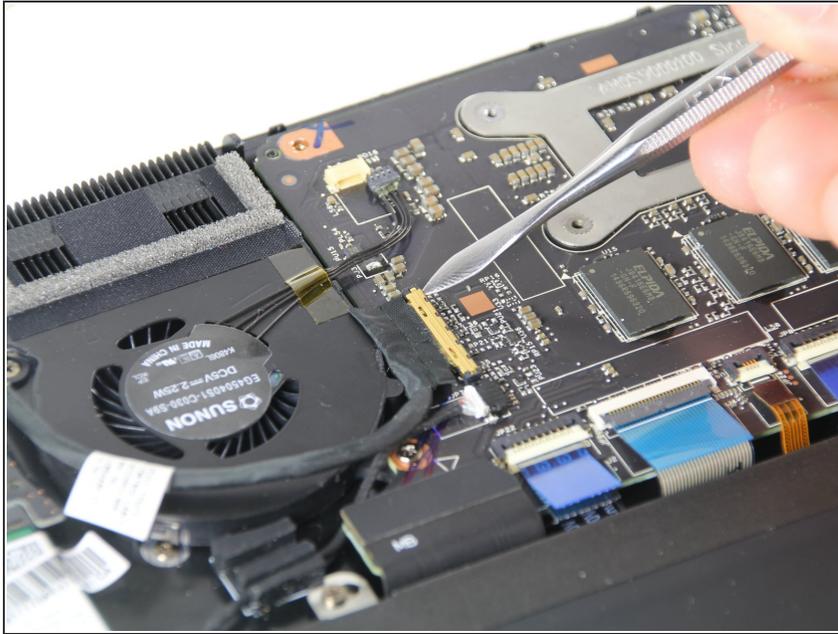

- Using a metal spudger, lift up the connector by the plastic near the top.
- ⚠ The connector lifts out of the computer, do not pull it to the sides.

Step 14



- Carefully remove the hinges and remove the screen.

To reassemble your device, follow these instructions in reverse order.