




# Asus MeMO Pad 7 ME170C Speaker Replacement

The speaker is where sound comes out. When...

Written By: Tatiana Schneider

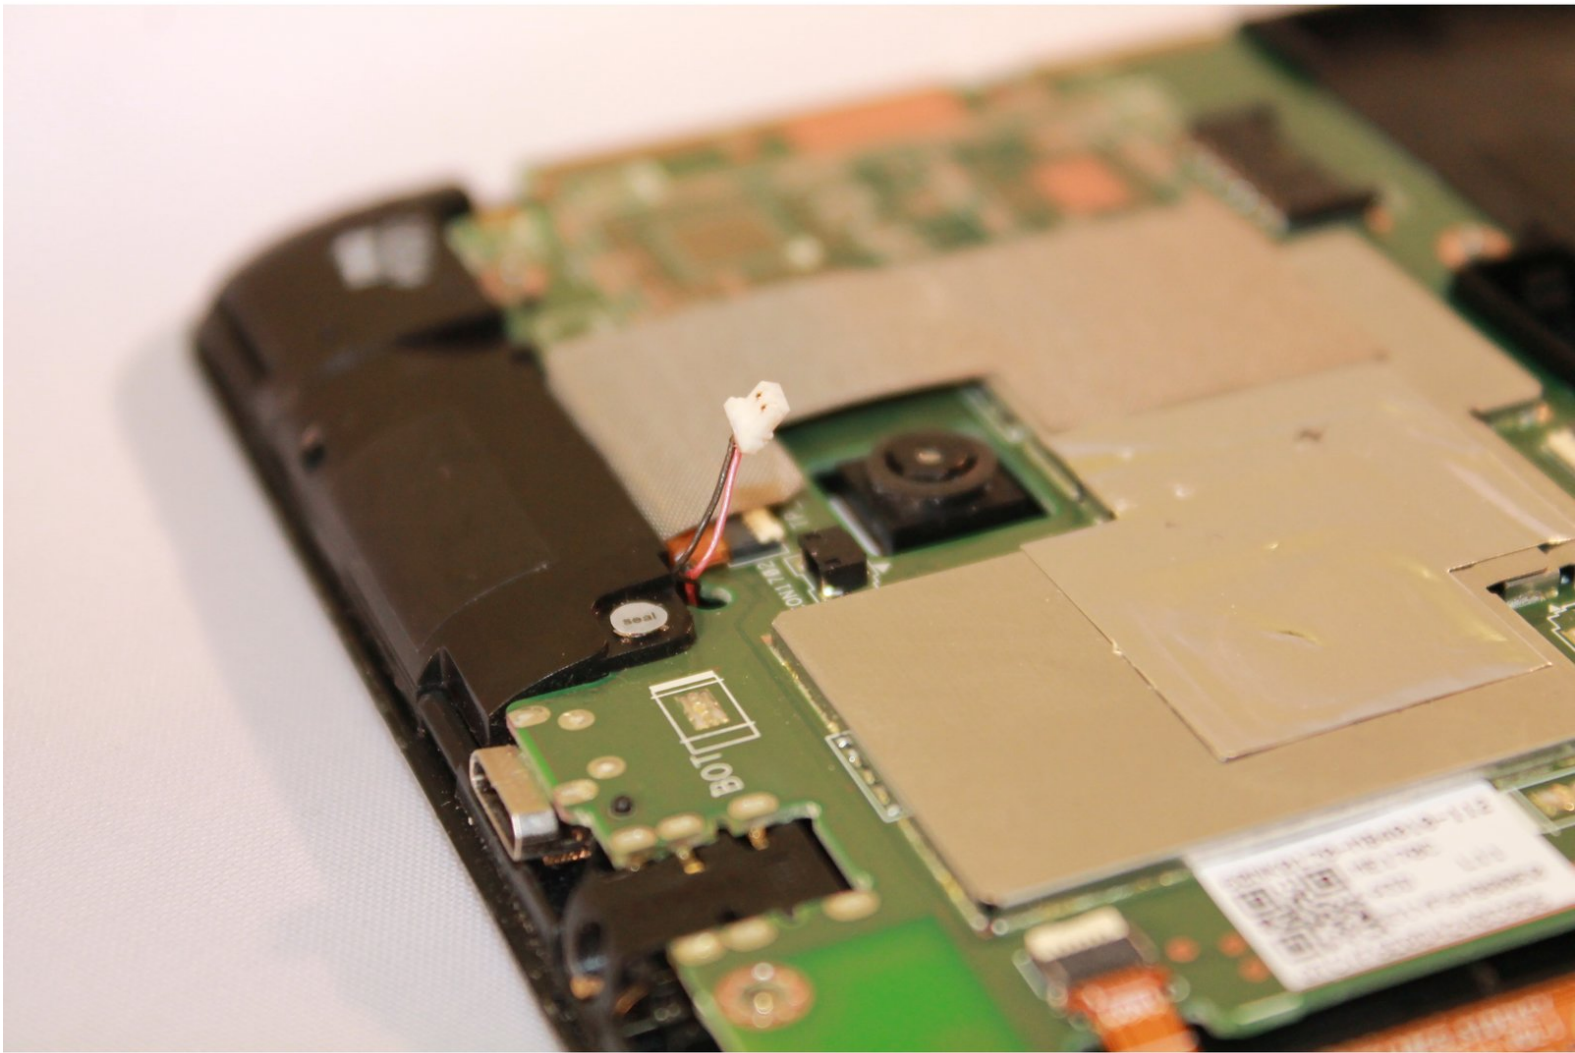

## INTRODUCTION

The speaker is where sound comes out. When videos or music are played too loudly, it can cause the speaker to blow. This is a component of the Memo Pad that needs to be replaced when this problem occurs.



### TOOLS:

- [Jimmy](#) (1)
  - [iFixit Opening Tool](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Speaker



- ✦ Before beginning to disassemble the device, power it off.
- ⓘ Make sure to be gentle with the device. Excessive force can result in a damaged screen.
- Using the Jimmy tool, gently wedge it into the seam of the device at the side.
- Pry the Jimmy tool gently all around the seam. Use up and down motions until the back panel is detached.



## Step 2



- From the top of the tablet, locate the white cable connector.
- ⓘ It is inserted in a black port on the motherboard.
- Use the blue plastic opening tool to push the white cable connector out of the port.
- ⓘ Push the cable in a sideways motion towards the top of the device.



## Step 3

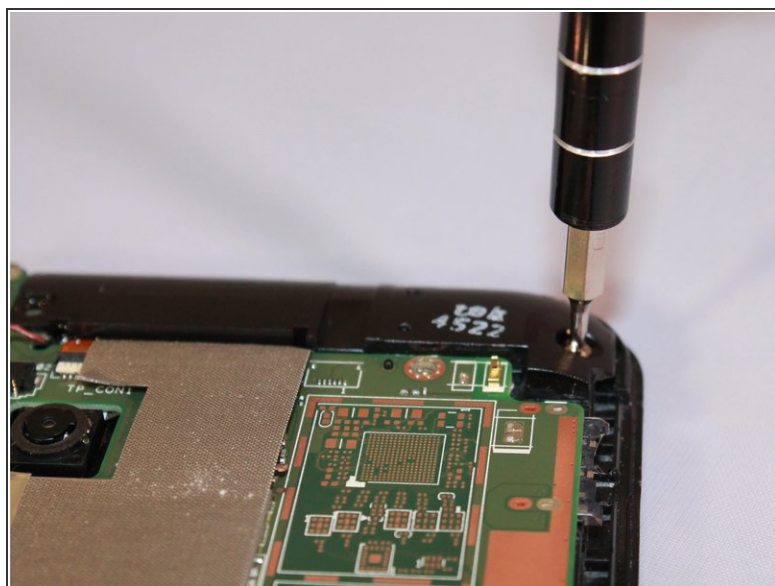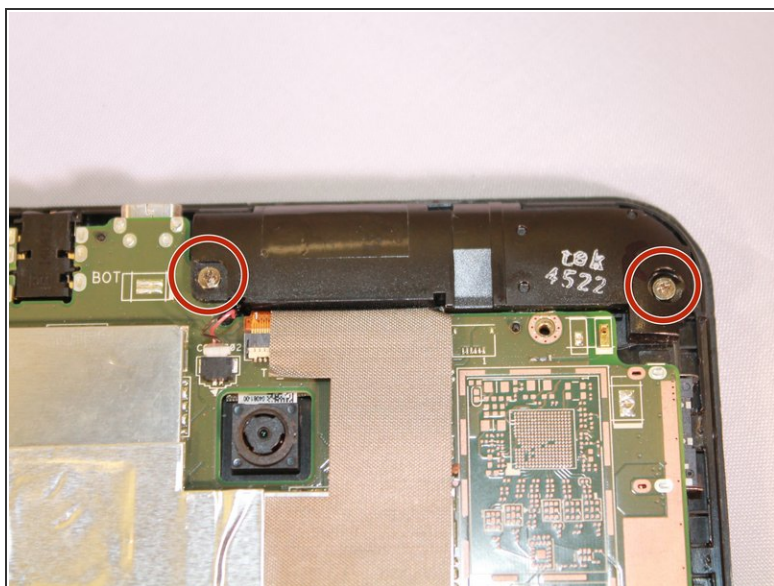

- Use the Phillips #000 screwdriver to remove the seven screws.
- There should be two silver and five black screws for a total of seven screws.

## Step 4



- Use the slender, metal spudger tool to gently lift up the edge of the speaker to remove the device.

To reassemble your device, follow these instructions in reverse order.