



Garmin Nuvi 2797LMT Speaker Replacement

Replacing the speaker will help you listen to the directions more clearly. You will no longer be frustrated with your GPS.

Written By: Wanda Martinez



INTRODUCTION

This guide will teach you step by step how to replace your speaker.




TOOLS:

- [T6 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-


Step 1 — Speaker



-  Before you begin make sure to turn off your GPS.
- Using your T-6 Torx Screwdriver, unscrew the ten 2.38 mm torx T-6 screws from the back of your GPS.

Step 2



- Using the biggest plastic opening tool, pry open the GPS from the sides. You should now be able to see everything inside the GPS.
-  Be careful when opening the GPS because of the ribbon attached to the screen. It can tear easily.

Step 3



- Locate the speaker's wire connector plugged into the motherboard. Now delicately detach the speaker connector by pulling directly up.

Step 4



- Now using the nylon or metal spudger, carefully pry the glue away from the sides of the speaker.
- ⚠ The speaker has been attached with strong glue so you will need to use a little bit of force when prying it out. Also be careful while using the nylon or metal spudger so you don't get hurt and the device doesn't get damaged.

Step 5



- Now using the plastic opening tool, pry the speaker up from one of the sides. Your speaker will completely come out of the device.

To reassemble your device, follow these instructions in reverse order.