




# ASUS X44H-BBR4 Keyboard Replacement

Remove and replace the keyboard in your ASUS X44H-BBR4 laptop.

Written By: Kelly Merlo

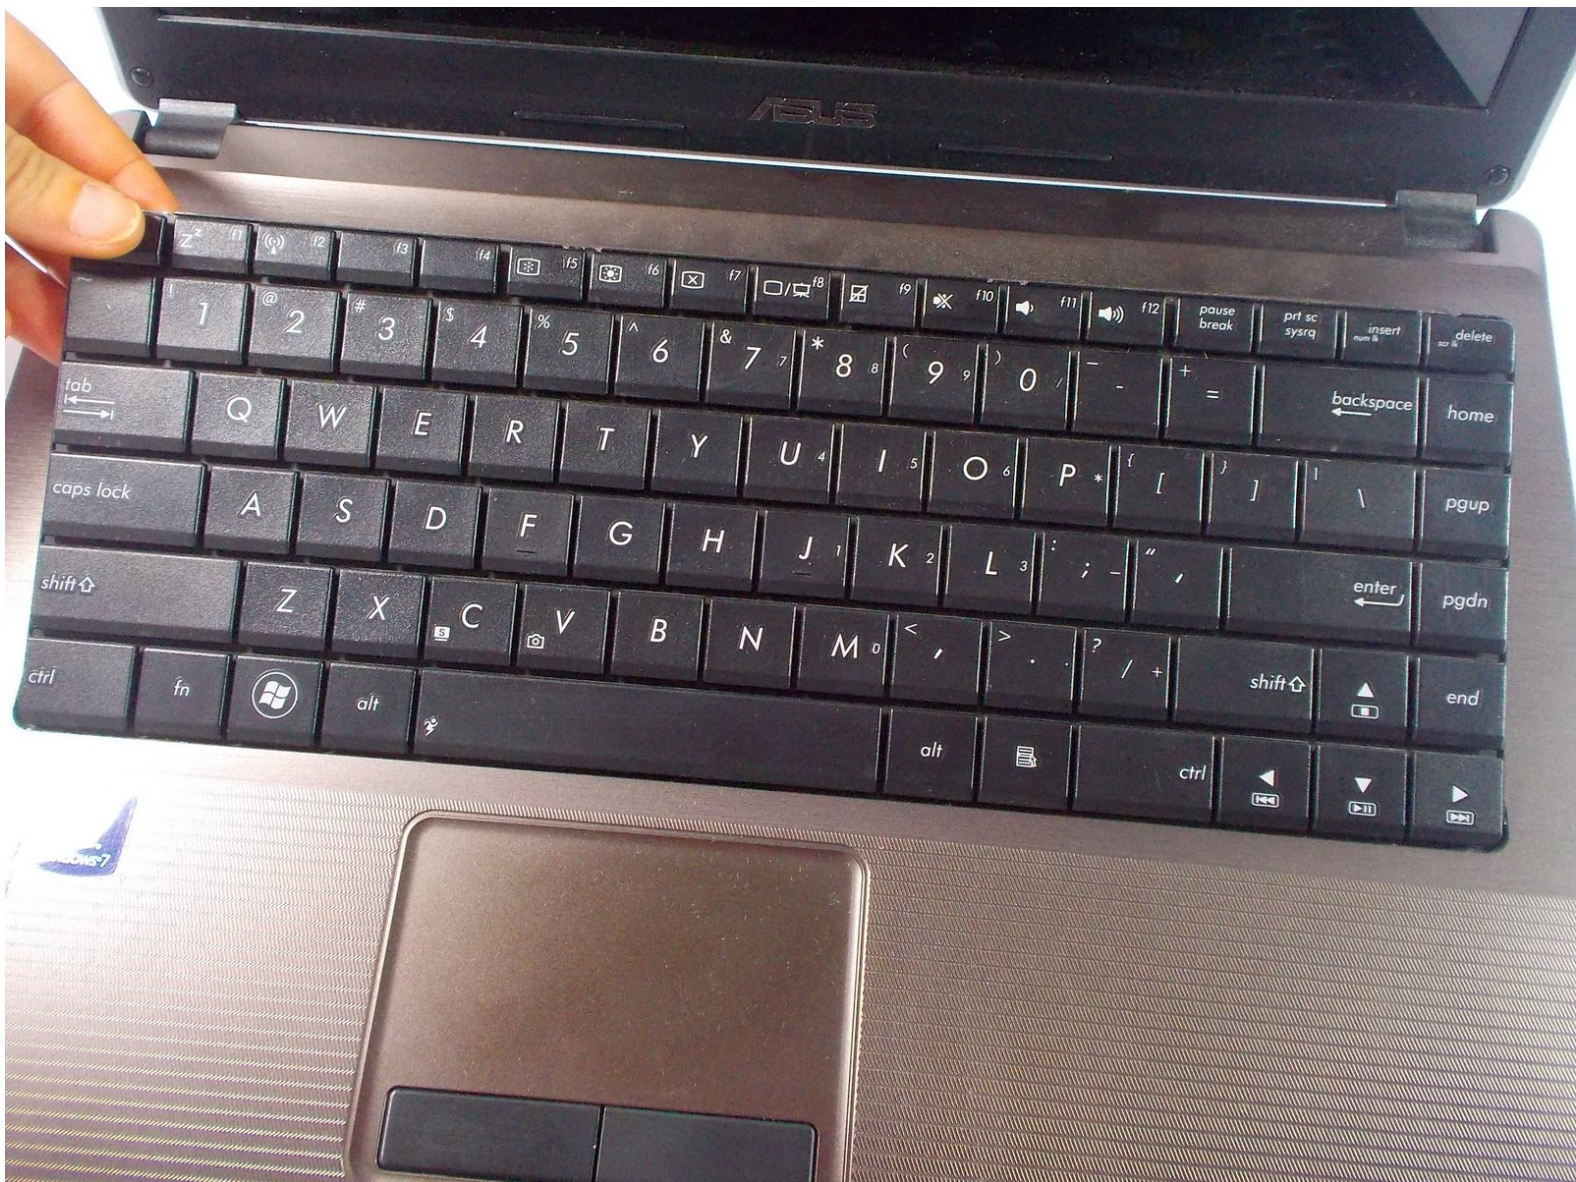

---

# INTRODUCTION

Use this guide to help you remove and replace your keyboard safely.

---



## TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
-



## Step 1 — Keyboard



- Open the laptop to show the keyboard.


## Step 2



- Look at the top row of the keyboard, you will see a space that has four latches holding the keyboard down.
- ⓘ The latches are located above the Esc key, the F5 key, between the F10 and F11 key and the Delete key.

## Step 3



 Don't pull too hard on the keys otherwise they may fall off.

- Push the latch away from the keyboard using the spudger point.
- While pushing the latches use a plastic opening tool and pull up on a key near it.
- Continue along the rest of the keyboard until it is released at all four latches.

## Step 4




- Push the keyboard away from the mouse track pad to unlock the bottom from the base.

 Do not pull too hard because there is a ribbon connecting to keyboard to the motherboard.






## Step 5

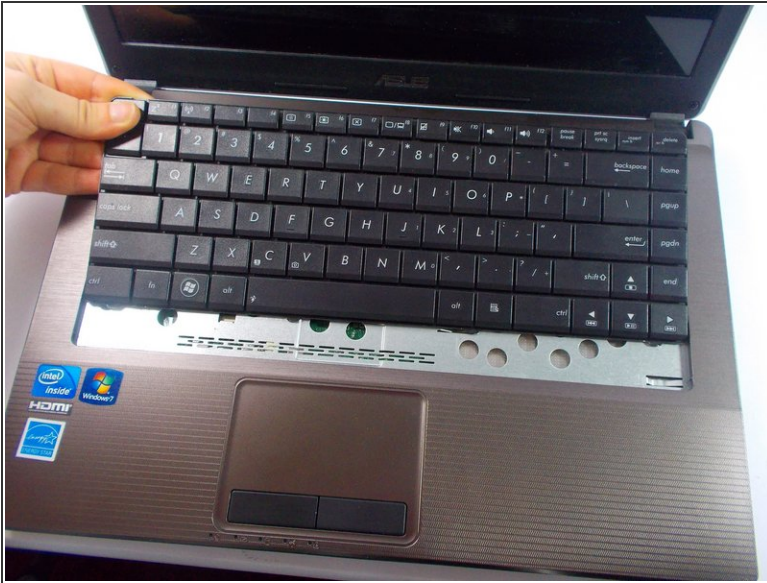


- Flip the keyboard over to reveal the back of it and what is underneath.

## Step 6

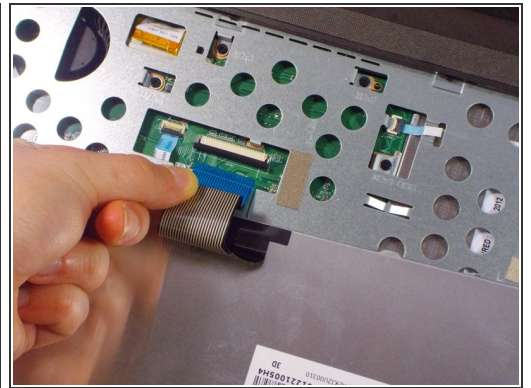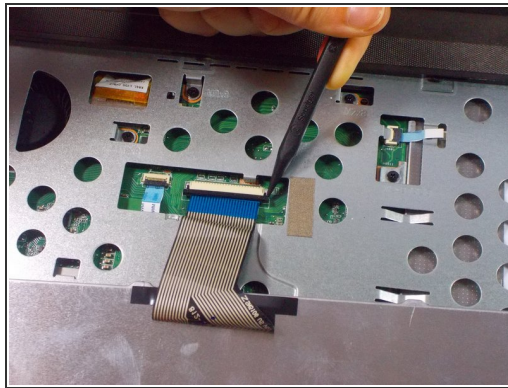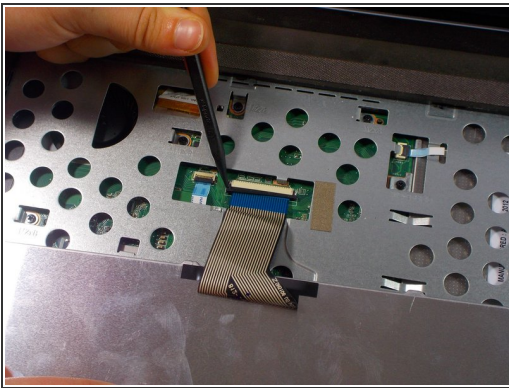

- Pull each end of the black ribbon cable piece towards the mouse track pad to unlock the ribbon connector piece.
- Gently pull out the ribbon cable from the connector piece.

## Step 7

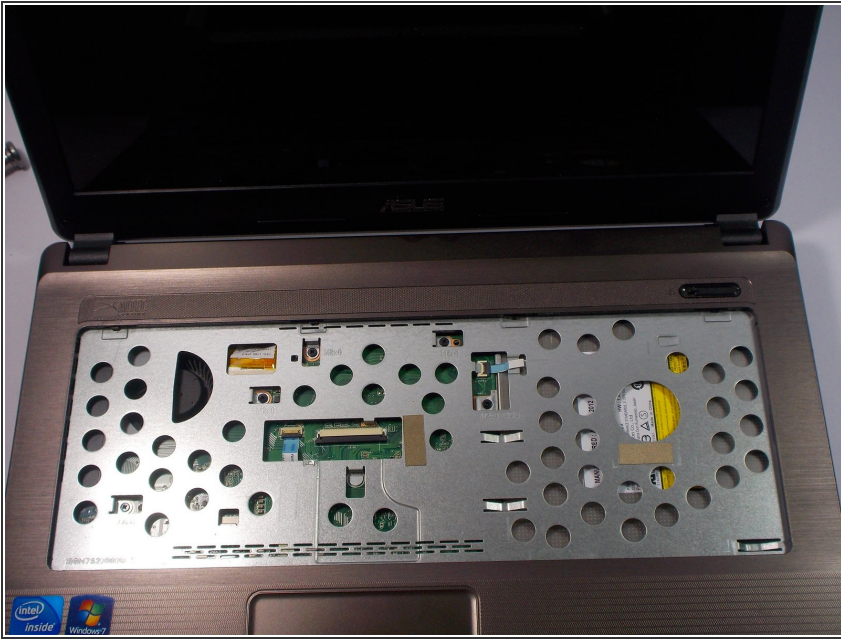

- Remove the keyboard completely.

To reassemble your device, follow these instructions in reverse order.