



Dell Inspiron 8600 RAM Replacement

If the RAM is not working, follow this guide.

Written By: Brian Murphy




INTRODUCTION

If the RAM is not working, follow this guide.


TOOLS:

Phillips #1 Screwdriver (1)


Step 1 — Battery

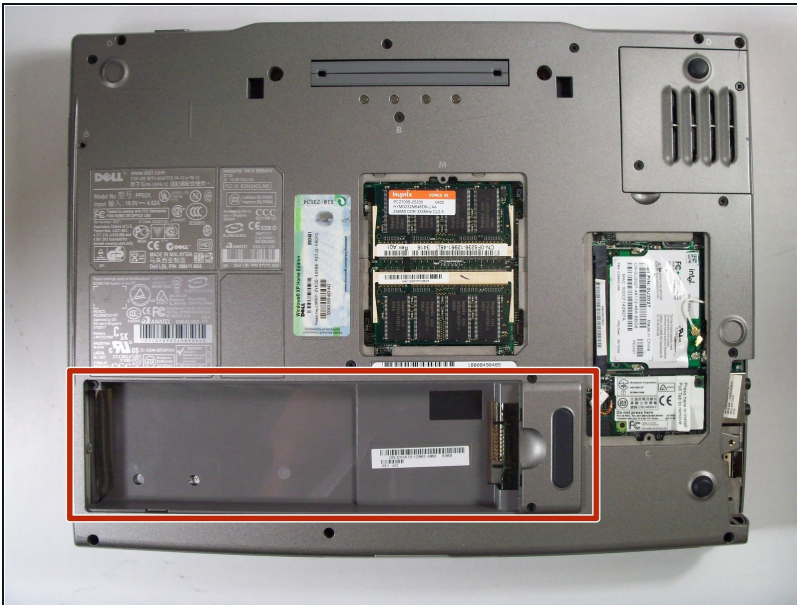

- Remove the battery from the bottom left of the laptop as shown.


 **Remove the battery before operating on the computer to avoid electrocution.**

Step 2 — RAM

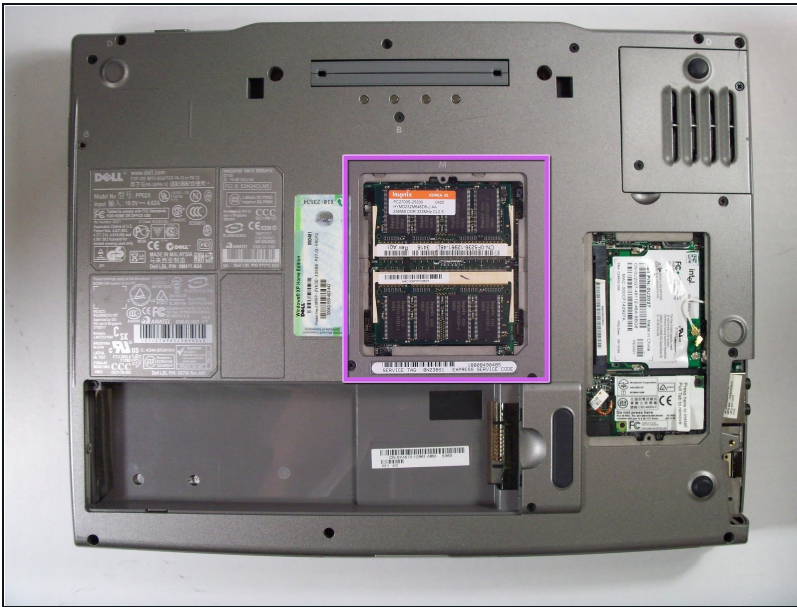

- Remove memory cover on bottom of laptop.
- ❗ To view the removal of the memory cover, follow the [Dell Inspiron 9100 Memory Replacement](#).

Step 3

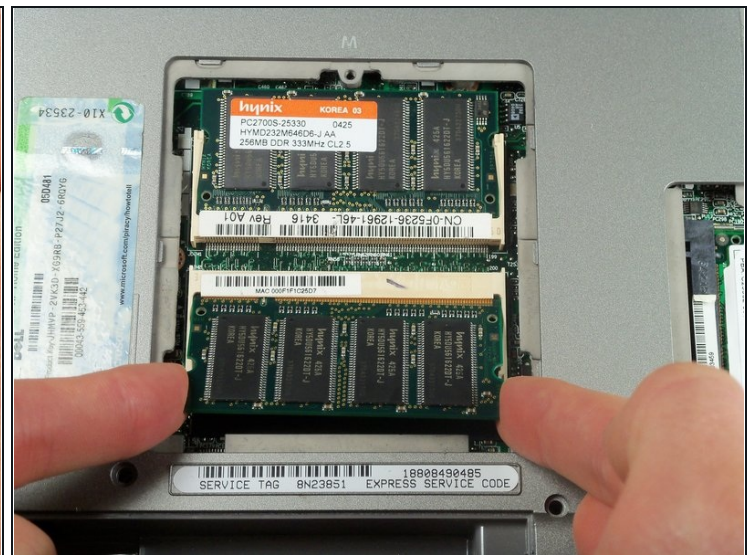

- Pull apart the white plastic tabs on either side of the RAM which will cause it to rise upwards.
- Gently remove the RAM, only touching the edges of the component.

To reassemble your device, follow these instructions in reverse order.