


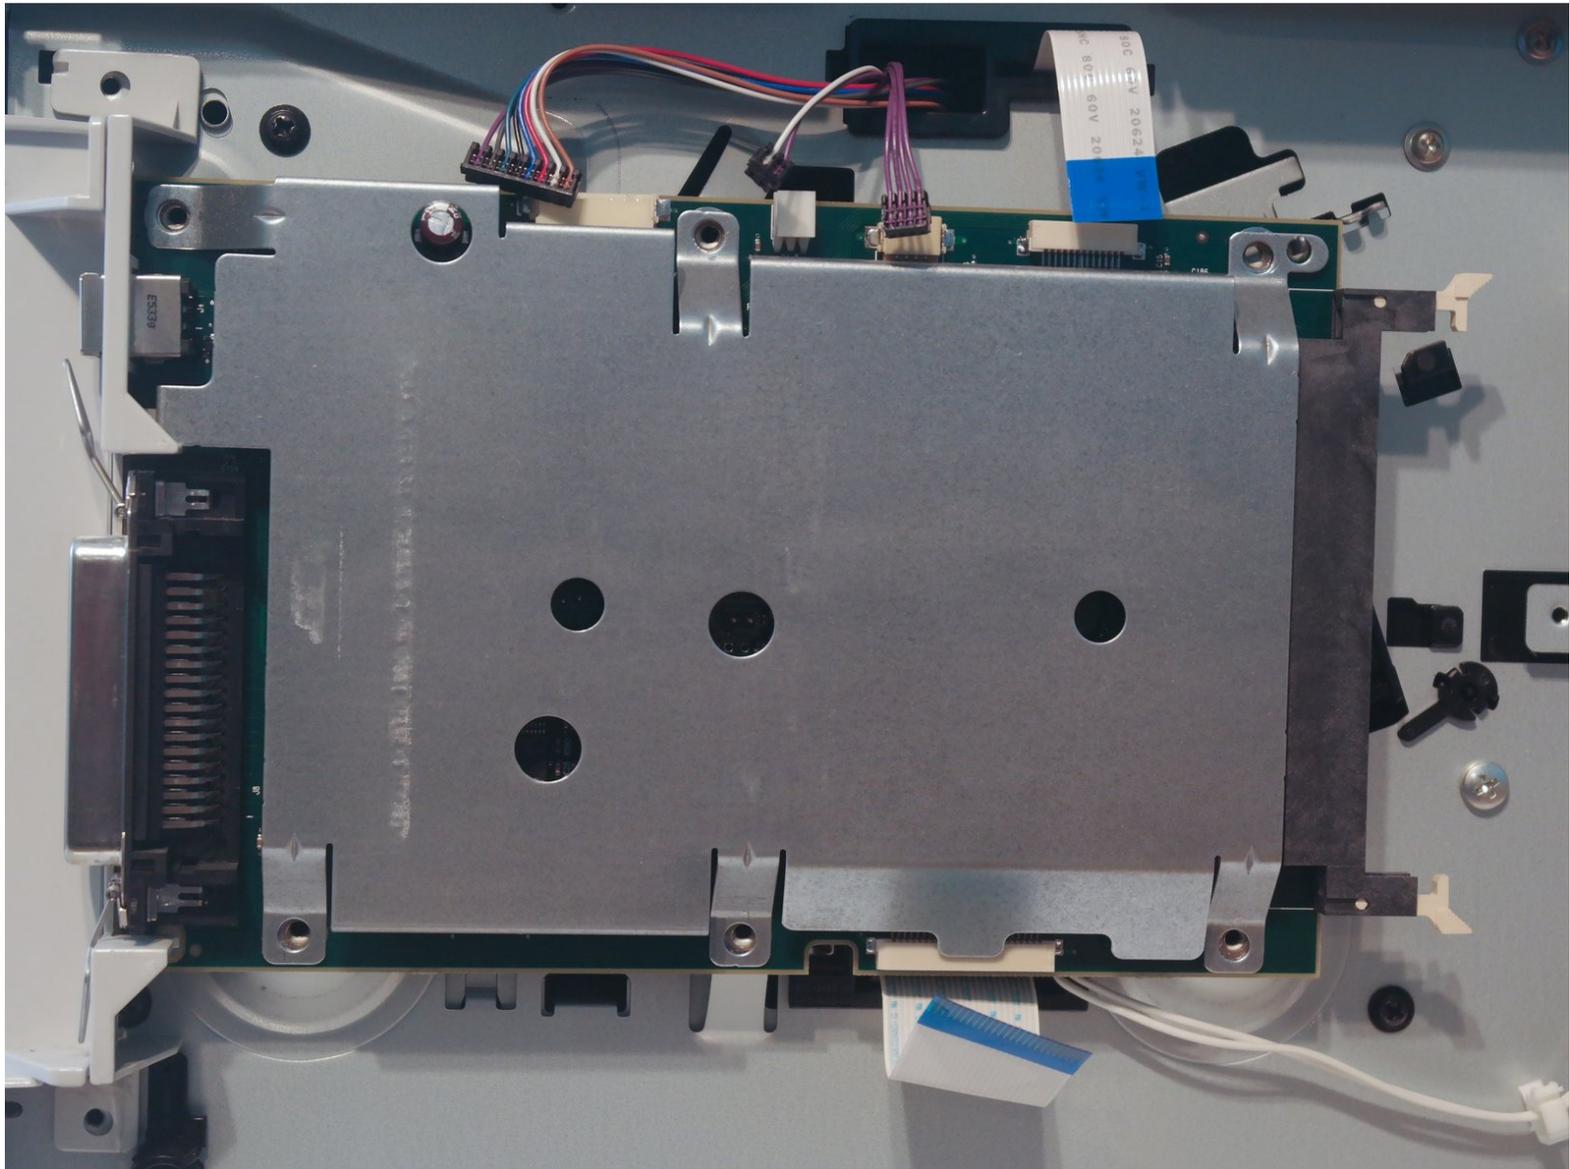

HP LaserJet 1160 or 1320 Formatter Replacement

Replace the formatter in an HP LaserJet 1160 or 1320.

Written By: jdp23



INTRODUCTION

Replace the formatter in an HP LaserJet 1160 or 1320.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)



PARTS:


- [HP LaserJet 1160 or 1320 Formatter](#) (1)

Step 1 — Left Side Cover



- Pull on the two tabs on the back of the printer to release the left side cover.
- Remove the cover by rotating it towards the front of the printer.

Step 2 — Formatter

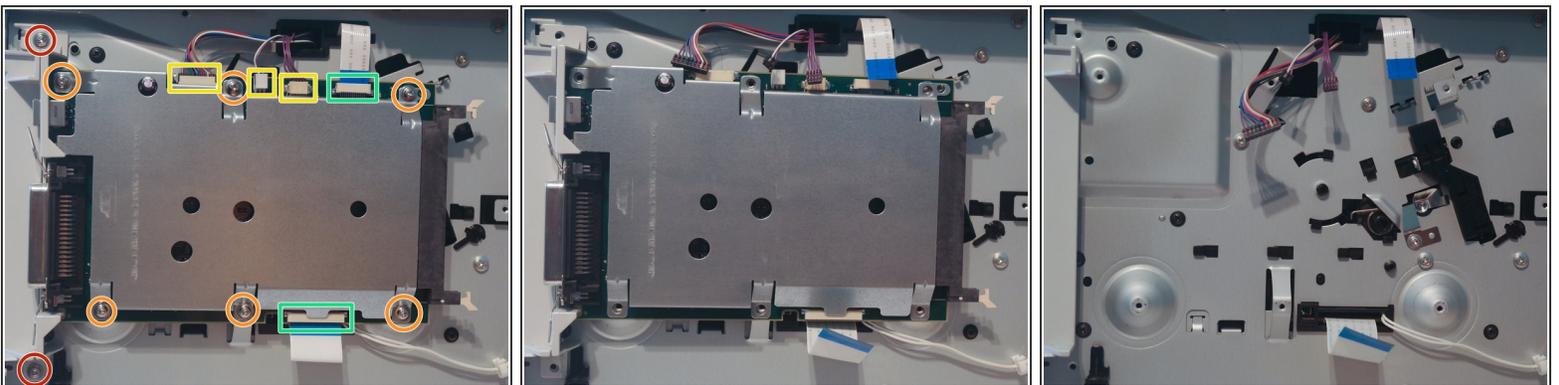

- Remove 2 screws on the I/O port cover.
- Remove 6 screws on the formatter.
- Disconnect 3 connectors from the formatter.
- Disconnect 2 flat flexible cables from the formatter.
- Remove the formatter from the printer.

⚠ Be careful not to fold, crease, or tear flat flexible cables.

i The I/O port cover will need to be transferred to the new formatter before installing it.

To reassemble your device, follow these instructions in reverse order.