




HP LaserJet 1160 or 1320 Pickup Roller Replacement

Written By: jdp23

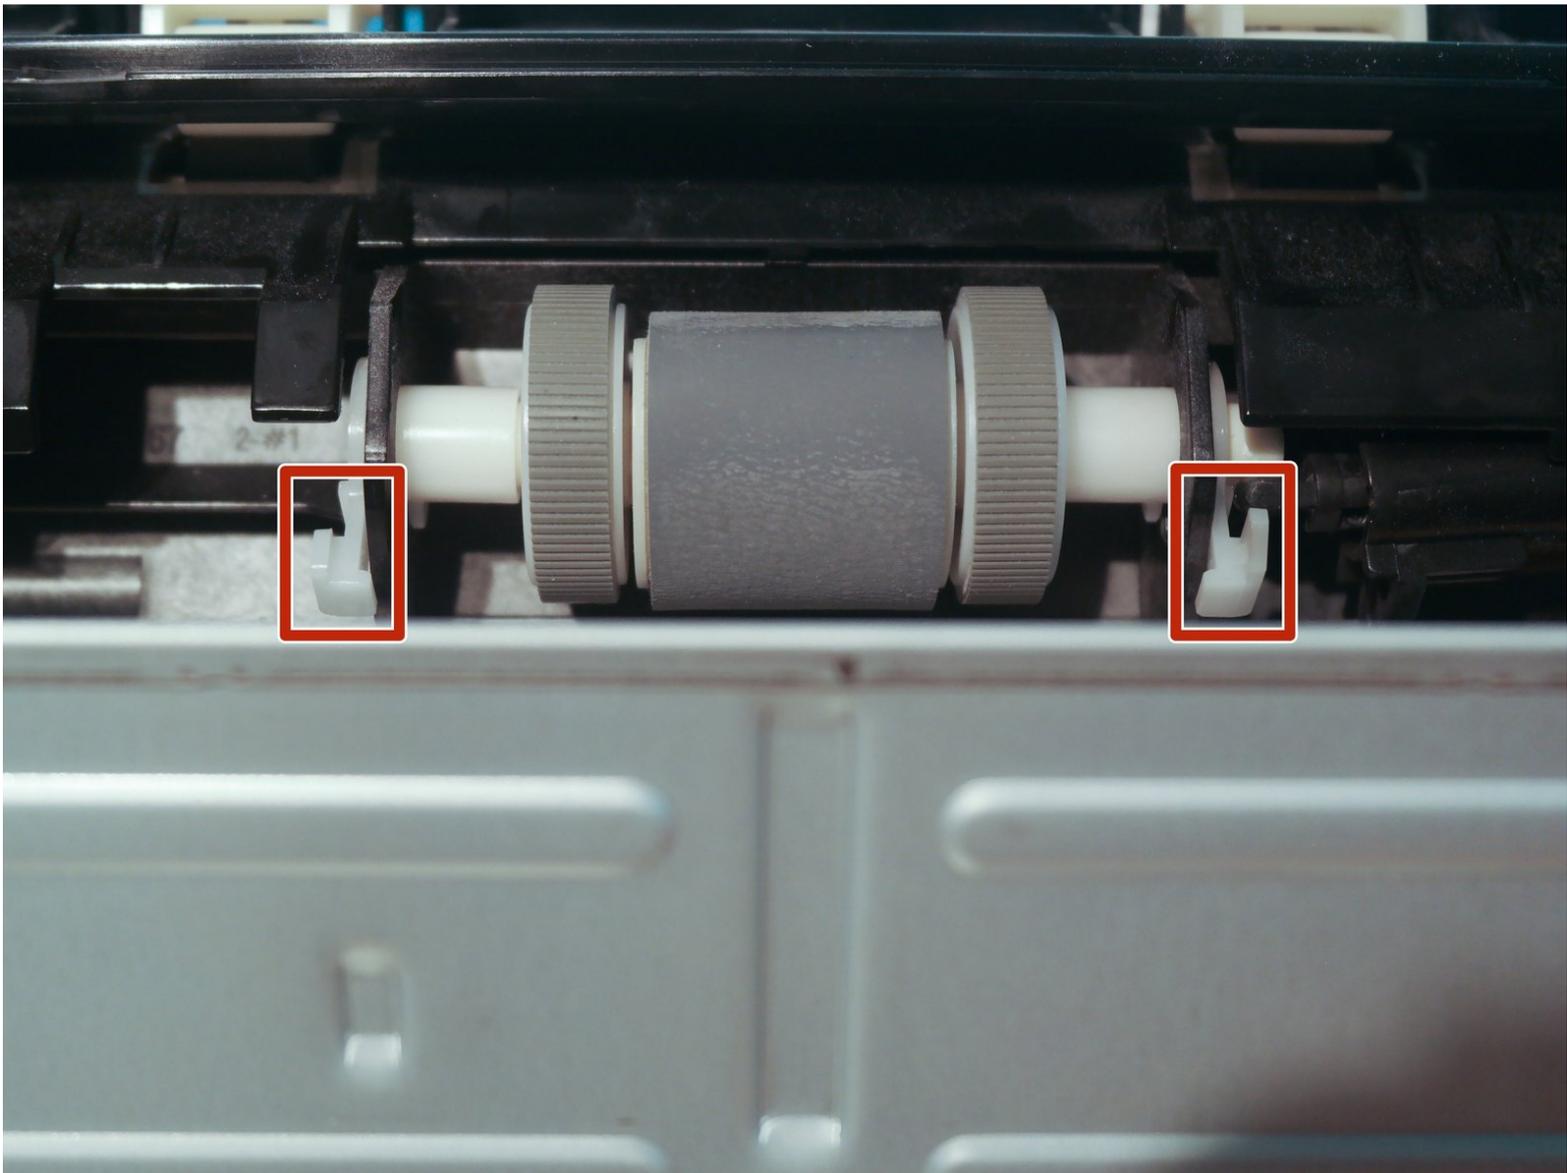

 **TOOLS:**

- [Metal Spudger Set \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)

 **PARTS:**

- [HP LaserJet 1160 or 1320 Pickup Roller \(1\)](#)

Step 1 — Left Side Cover



- Pull on the two tabs on the back of the printer to release the left side cover.
- Remove the cover by rotating it towards the front of the printer.

Step 2 — Right Side Cover




- With the printer turned so that the right side is facing upwards, use a metal spudger to disengage 3 tabs holding the right side cover in place.
- Lift the cover off of the printer.

Step 3 — Back Cover




- Remove 4 screws on the back of the printer.
- Remove the back cover.

Step 4 — Top Cover

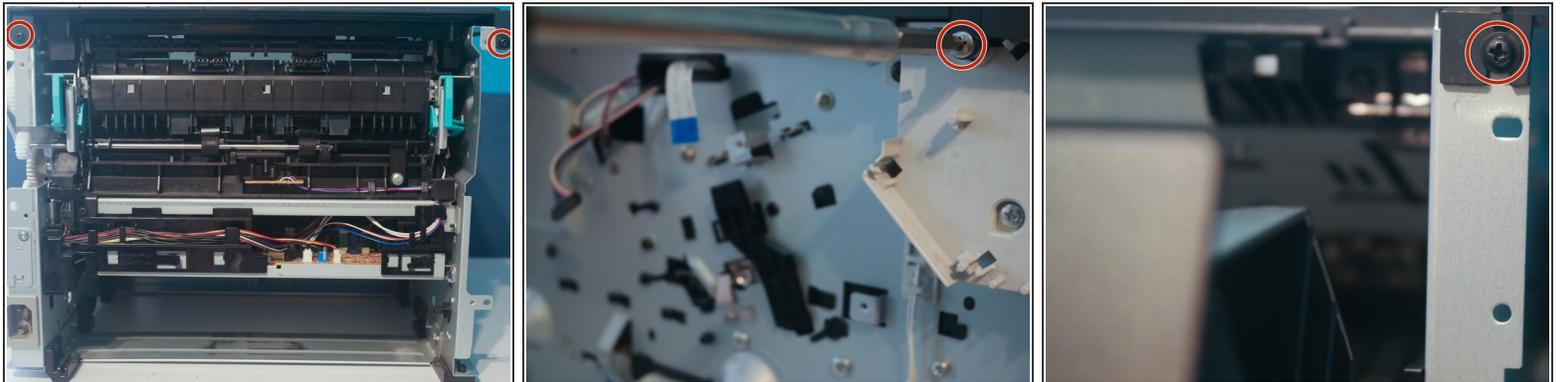



- Remove 2 screws on the back of the printer, one on the left, and one on the front.
- ⓘ The second image shows the formatter removed, but it is not necessary to remove the formatter to replace the top cover.

Step 5 — Top Cover

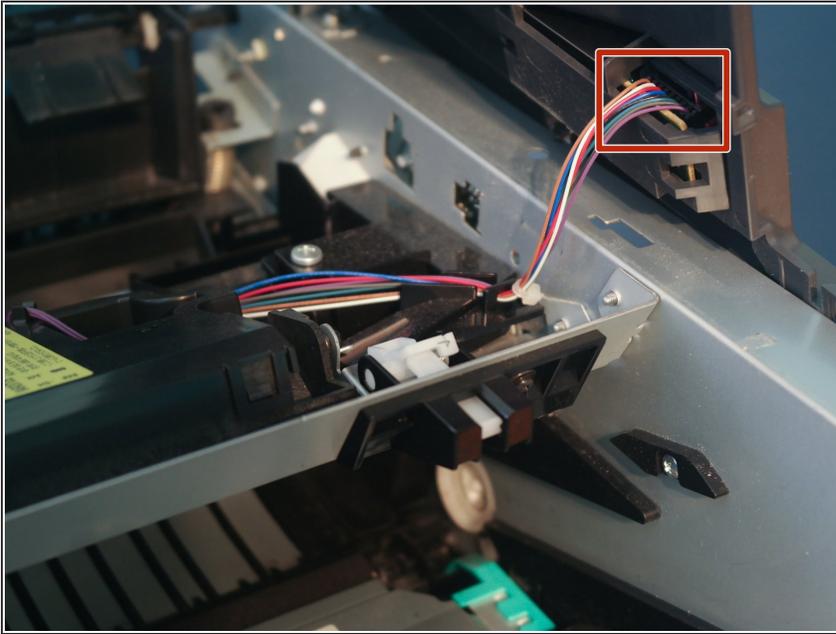


- Disconnect the control panel cable and remove the top cover.

Step 6 — Duplexer Tray

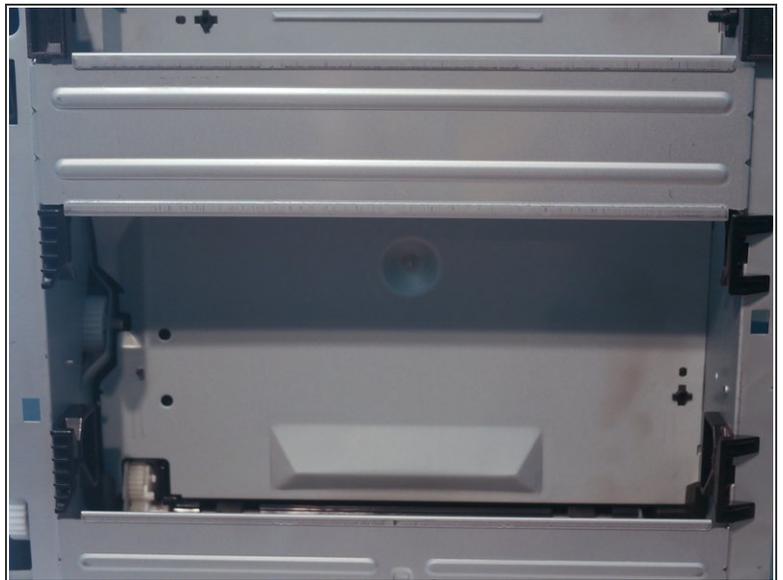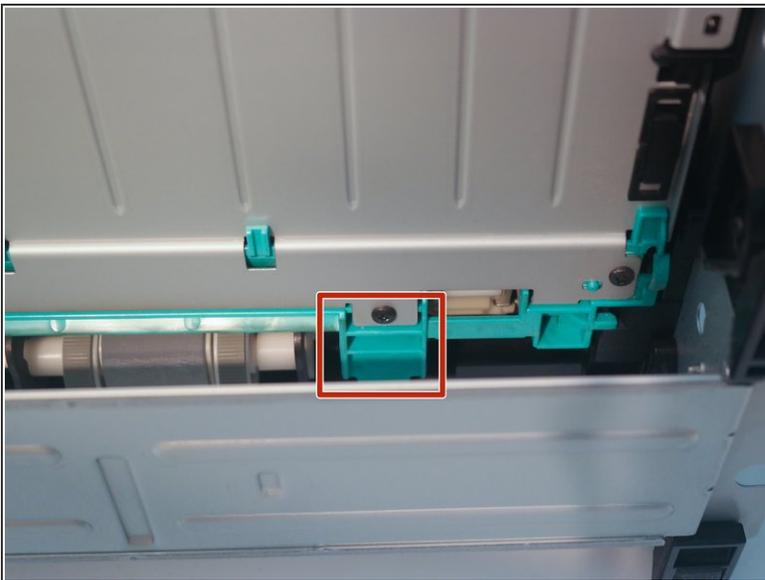


- Pull on the blue-green tab to release the duplexer tray.

Step 7 — Cartridge Door

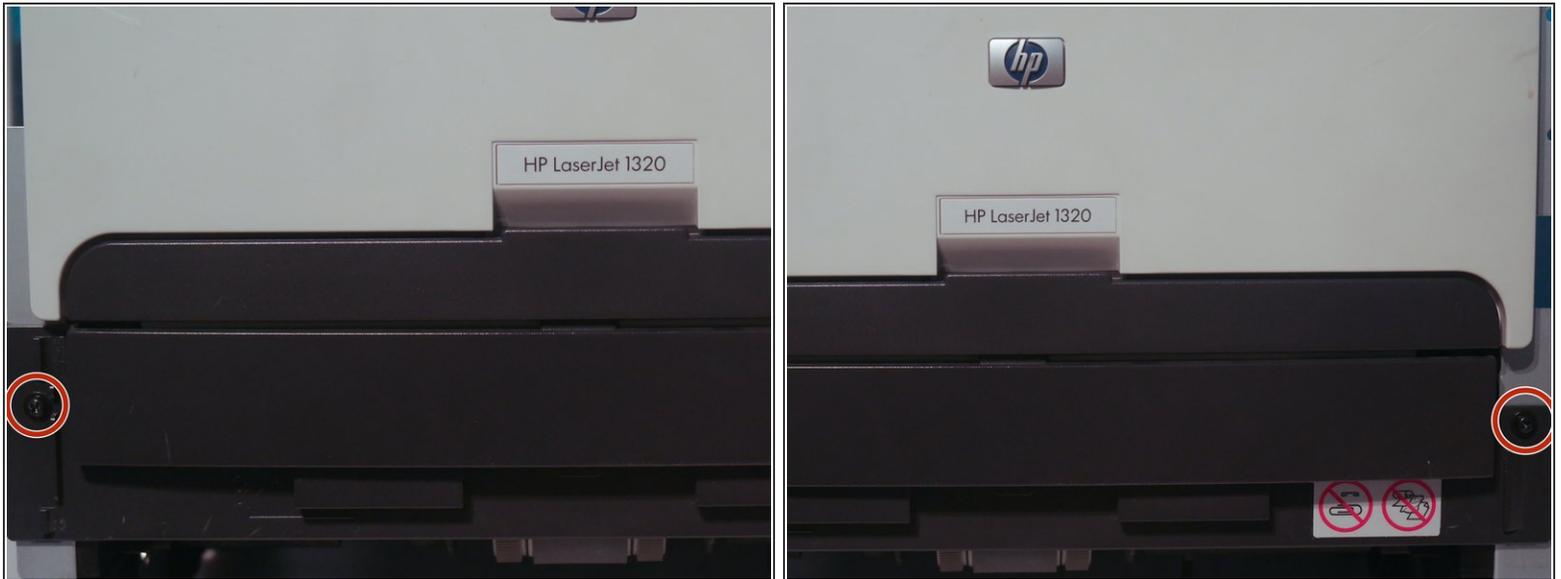

- Remove 2 screws from the front of the printer.
- Remove the cartridge door.

Step 8 — Pickup Roller

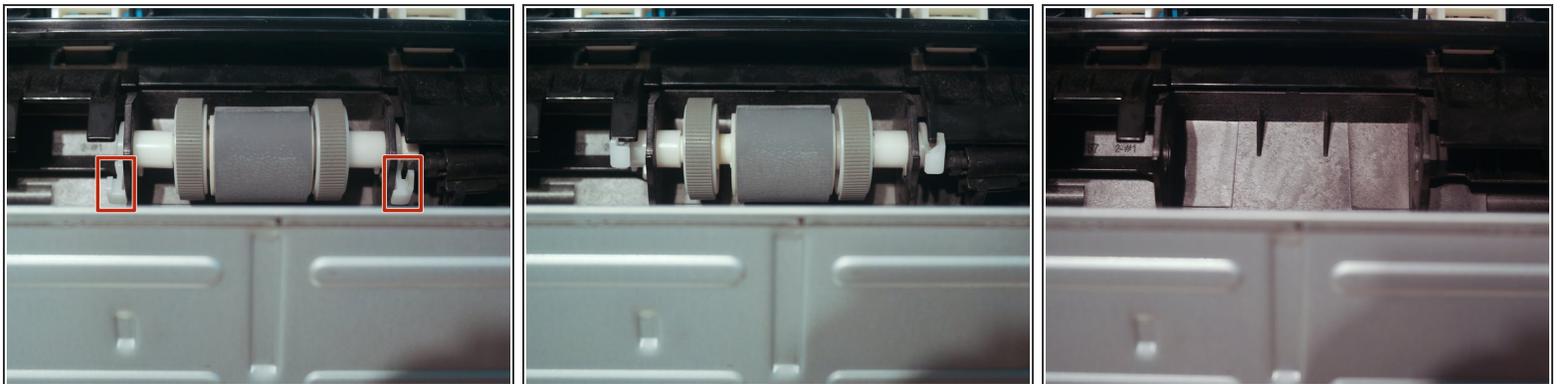

- Remove the pickup roller by rotating the white tabs upwards and pulling them outwards.

To reassemble your device, follow these instructions in reverse order.