




Astro A50 Astro A50 Speakers Replacement

This guide will lead you through the necessary steps to repair/replace the Astro A50's speaker(s) should it/they need to be.

Written By: Ramzi Bechara

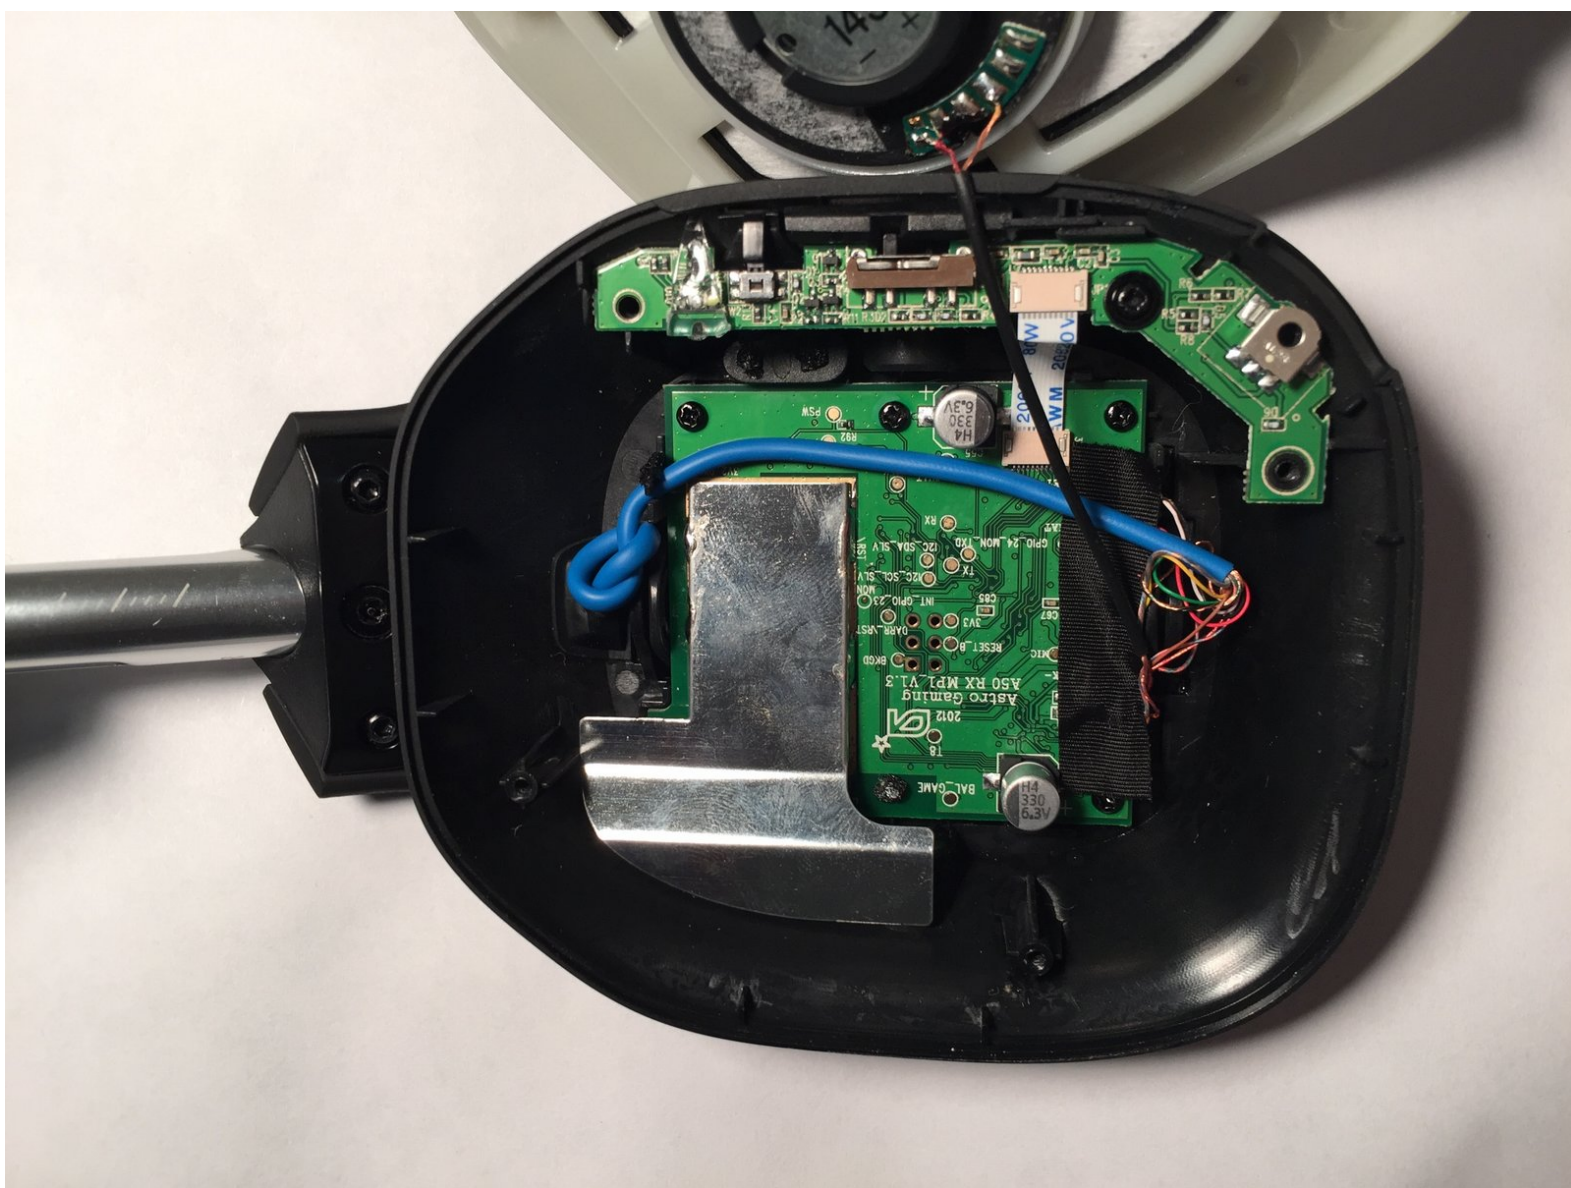

INTRODUCTION

A very common problem with the speaker is that the headset and the transmitter de-sync. To solve this, refer to the Astro A50 user manual and re-sync your transmitter and the headset. If it's still not working, the soldering on the mic port might have come off and you will need to re-solder the wire to the speaker. To do this follow these steps:



PARTS:

- [Astro A50 Wireless Headphone Earpad Cushions](#) (1)
-

Step 1 — Speakers



- Carefully remove the ear pad from the speaker that the microphone is attached to. Repeat on the other side.

Step 2




- Remove the four screws from each side of the headset.

Step 3



- After the screws are removed the black piece of the cover can now come off. Remove this piece.

Step 4

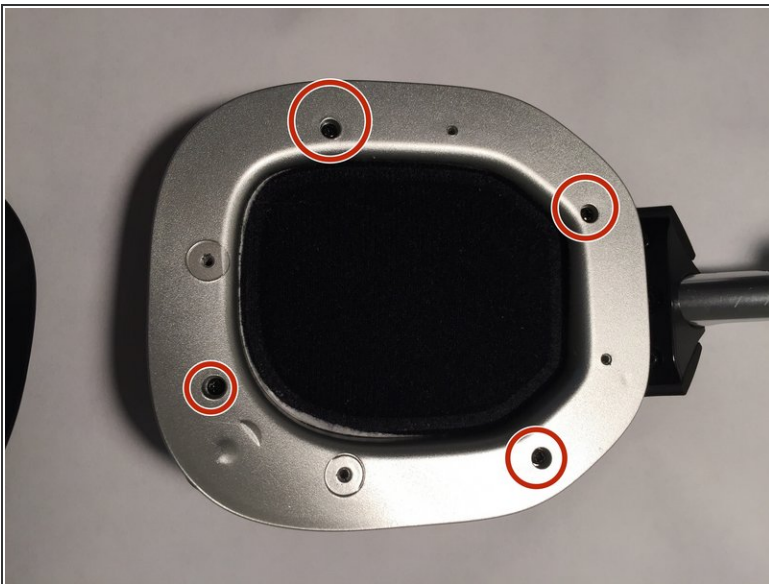


- Then you will see more screws around the now silver edge and a black cushioning pad in the middle. The number of screws depends on the speaker you are replacing, one side has 2 screws while the other has 4.

Step 5




- Remove the screws in the silver edge.

Step 6

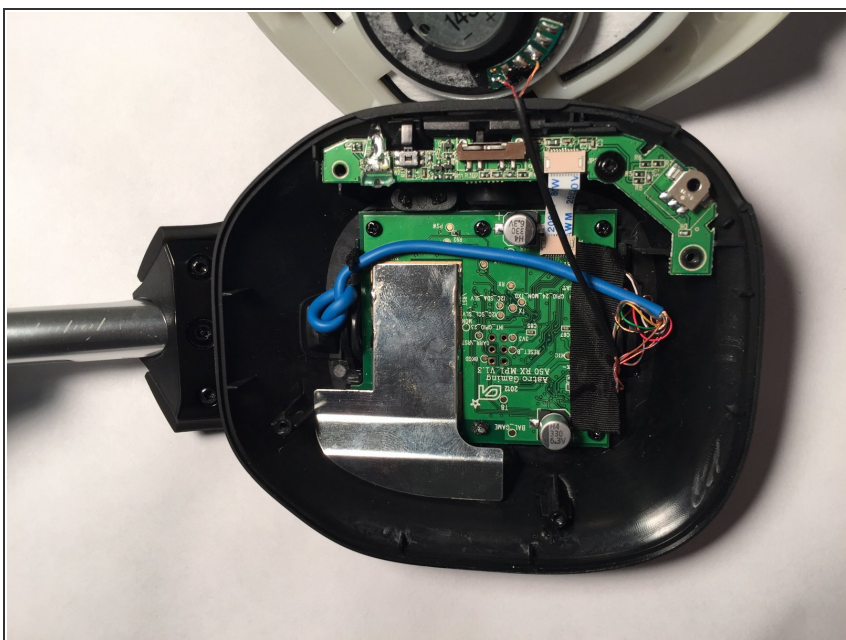



- Once the screws are removed, the speaker should come out now.
- Note: the speaker might still be connected to the headset through a wire so you must be gentle pulling about the headset.

Step 7

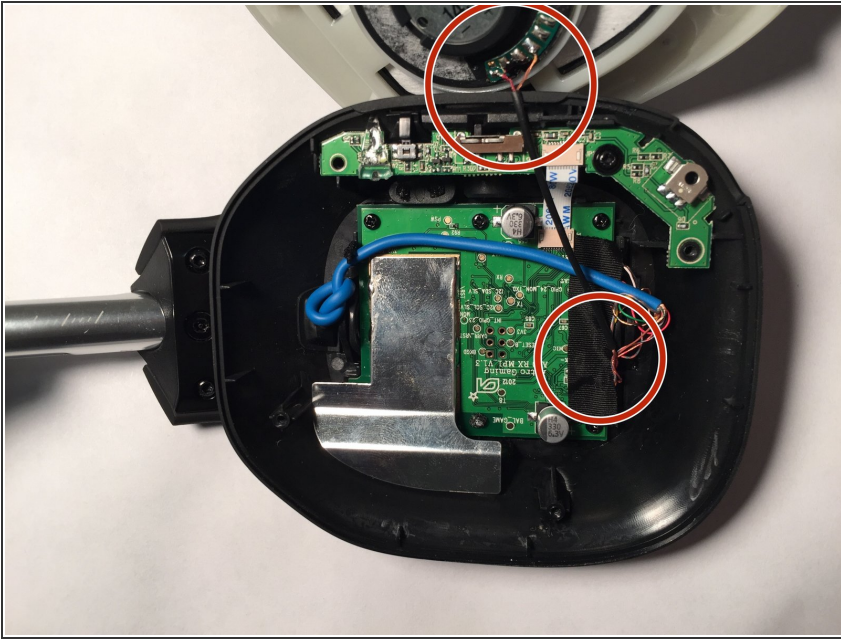

- After that take off the cover. If the speaker is still connected and no wires are visibly damaged, then the speaker(s) is not the problem with your device. Please refer back to the troubleshooting page and make sure that the Astro A50 has the newest firmware, etc. If the wire is not connected continue to the next step.

Step 8

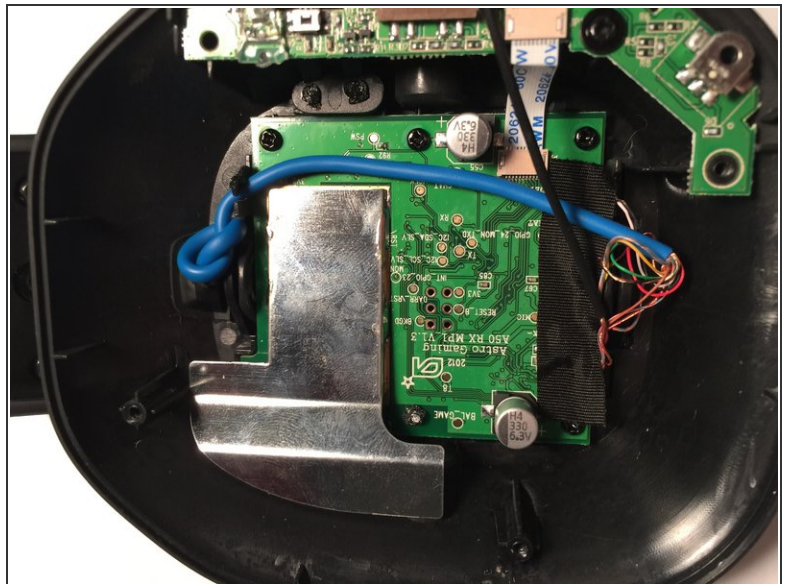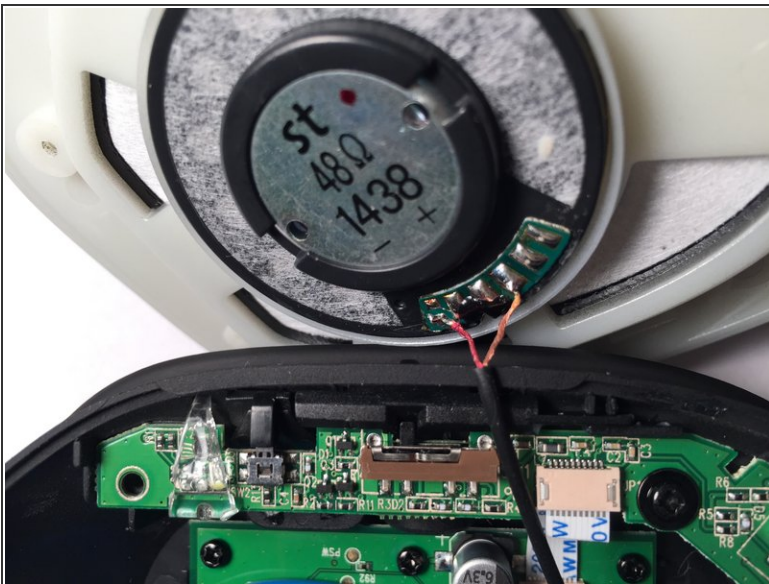

- To reconnect the wire you will need to solder the wire back to the mic port. If you need help soldering refer to the soldering guide [here](#).
- Note: soldering is very dangerous and should not be done without supervision if you have never done it before.

Step 9



- After that put the headset back together, check to verify that the speaker is working.

Step 10



- If there is still no sound or static, then the speaker might be “blown” and/or needs to be replaced completely. If so, please order a new speaker and follow the same steps to replace the whole speaker.

To reassemble your device, follow these instructions in reverse order.