



Nikon Coolpix P4 Battery Replacement

If you are having trouble replacing the battery...

Written By: Luke Baumann



INTRODUCTION


If you are having trouble replacing the battery for you Nikon Coolpix P4, this guide is for you! Understanding your digital camera can be complicated, in this guide, I will provide you a step by step tutorial on how you can replace your battery. It may seem intimidating, but the process should only take a few minutes and then you can get your camera working again!

Step 1 — Battery



- Flip the camera upside down (have the side with the buttons facing away from you)
- Look for the side with the triangle icon with three lines in it, this is the battery door. Add pressure and slide this door slightly until it clicks and pops open.

Step 2

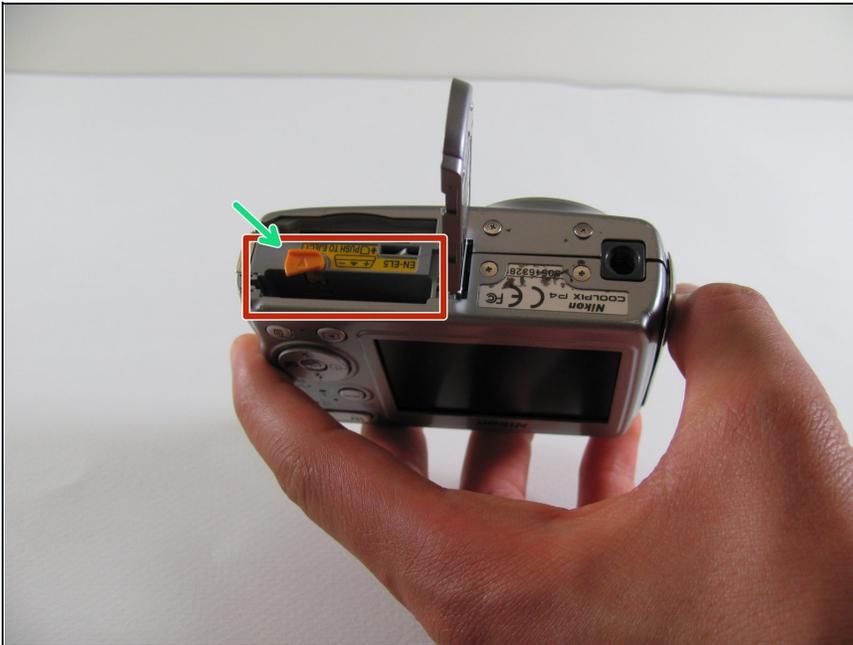

- Once the door clicks, you can open it to reveal the slots holding the memory card and the battery.
 - Focusing on the larger slot, this holds the battery. Push the orange tab away from the slot, this will eject the old battery if one was previously inside.
 - Once this slot is open, you can place the new battery inside.
- Make sure to close the orange tab to secure it in place!

To reassemble your device, follow these instructions in reverse order.