



Sony VAIO PCG-933A Fan Replacement

This repair guide shows how to replace and...

Written By: Sara Lillard



INTRODUCTION

This repair guide shows how to replace and clean out the fan.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Turn the laptop upside down so that the top is sitting on a flat surface.
- If you are looking at the bottom of the laptop the battery is located on the front right side of the laptop; the opposite side from the floppy disk drive.

Step 2




- As shown by the arrow, slide the plastic cover up and then pull out and downwards.
- You should now be able to pull the battery out.

Step 3 — Keyboard



- Remove the four 16 mm screws bordering the edge of the laptop using a Phillips #0 screwdriver.

Step 4

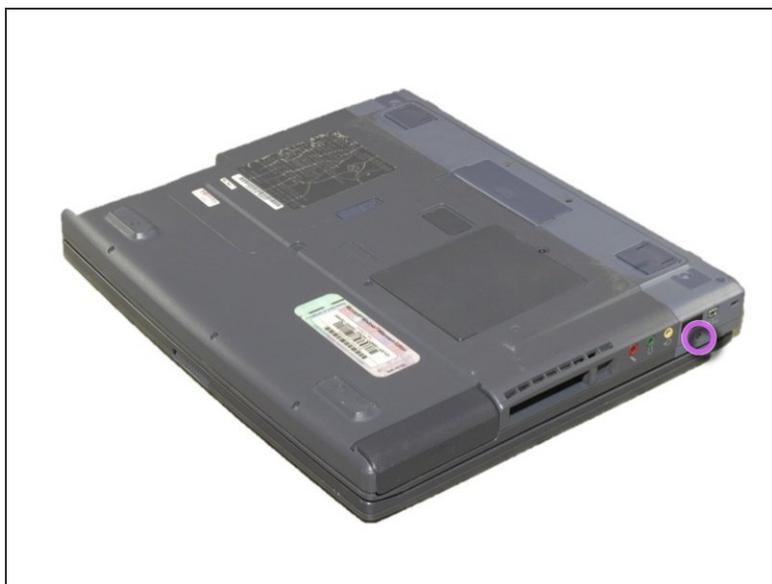

- Remove the 4mm screw on the right rear side of the laptop next to the audio ports using a Phillips #0 screwdriver.

 This will release the speaker grille.

Step 5



- Flip the computer so the key board is facing up.

Step 6




- Slide the blue speaker grille (located above the keyboard) to the right and gently pull upward. The grille will still be connected by a white electrical strip.
- Carefully pull out the white electrical strip. By doing this you will remove the speaker grille.

Step 7



- Remove the 4mm screw in the center using a Phillips screwdriver.
- Carefully and slowly pull the green strip straight up (away from the laptop) to disconnect it. Make sure not to pull too hard to avoid breaking.
- The keyboard can now be removed.

Step 8 — Fan

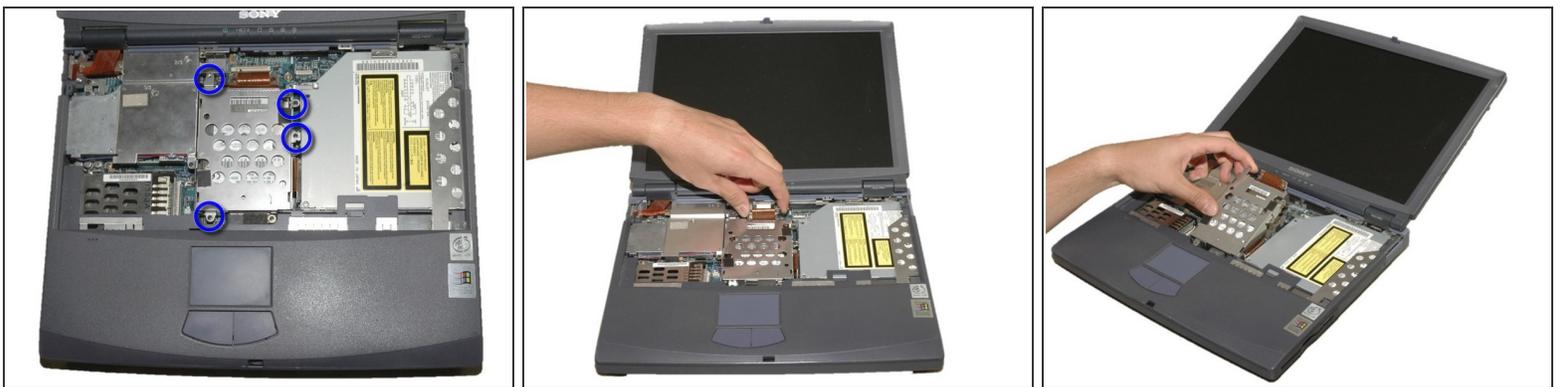

- Remove the four 4mm Phillips screws around the hard drive.

⚠ WARNING: DVD drive is now loose as well

- Carefully lift the hard drive cage out.
- Carefully disconnect the copper strip to pull out the hard drive.

Step 9





- With the hard drive removed, unscrew the four 6mm brass colored, Phillips screws under the hard drive cage.
- This will allow you to remove the hard drive mounting bracket.

Step 10




- Remove the three 6mm brass colored, Phillips screws that hold the fan cage in place.

Step 11

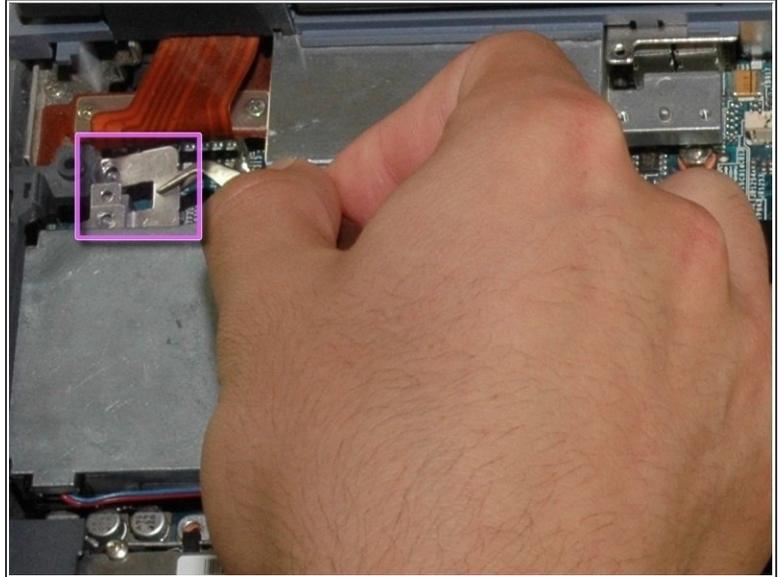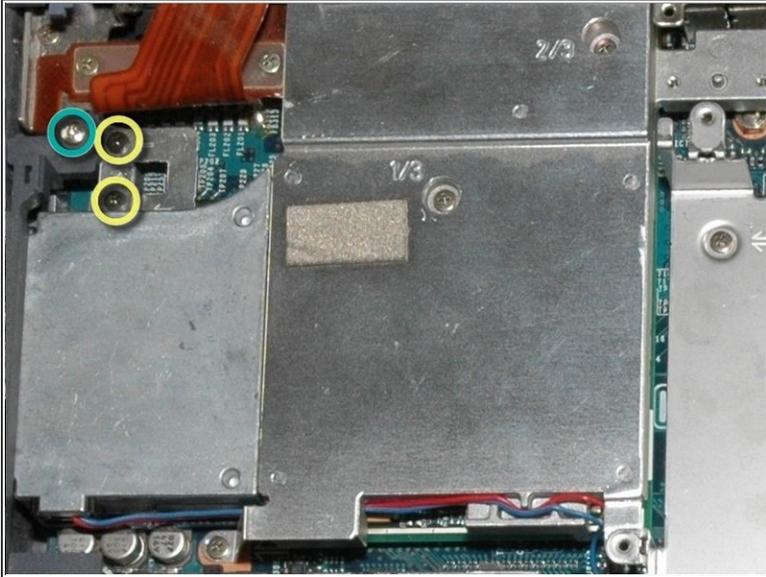

- Remove the two 4mm black, Phillips screws shown here.
- Remove the 18mm silver, Phillips screw shown here.
- Now remove the silver tab.

Step 12

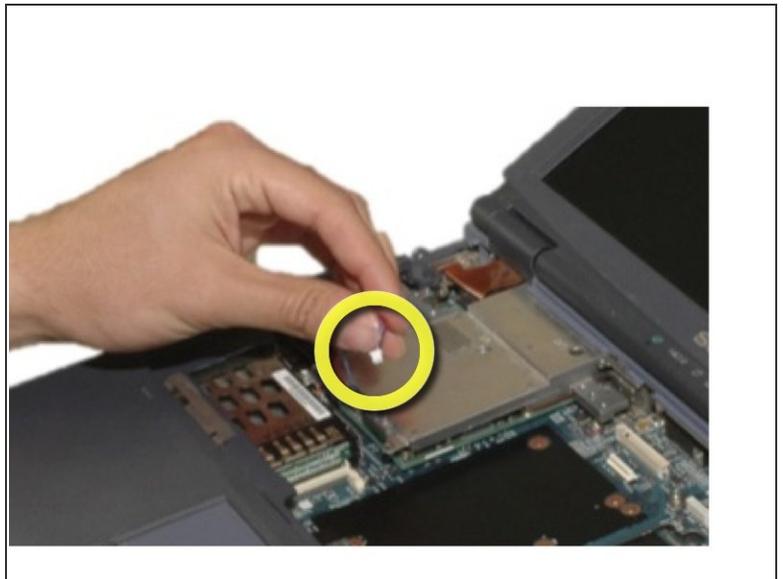

- Remove the blue and red fan power cords.

Step 13



- Carefully pull up and out on the metal heat sink and fan bracket.
- The fan can now be cleaned or replaced.

To reassemble your device, follow these instructions in reverse order.