




Panasonic DVD-RV31 Player Right Function Board Replacement

Use this guide to remove the right function...

Written By: Kevin

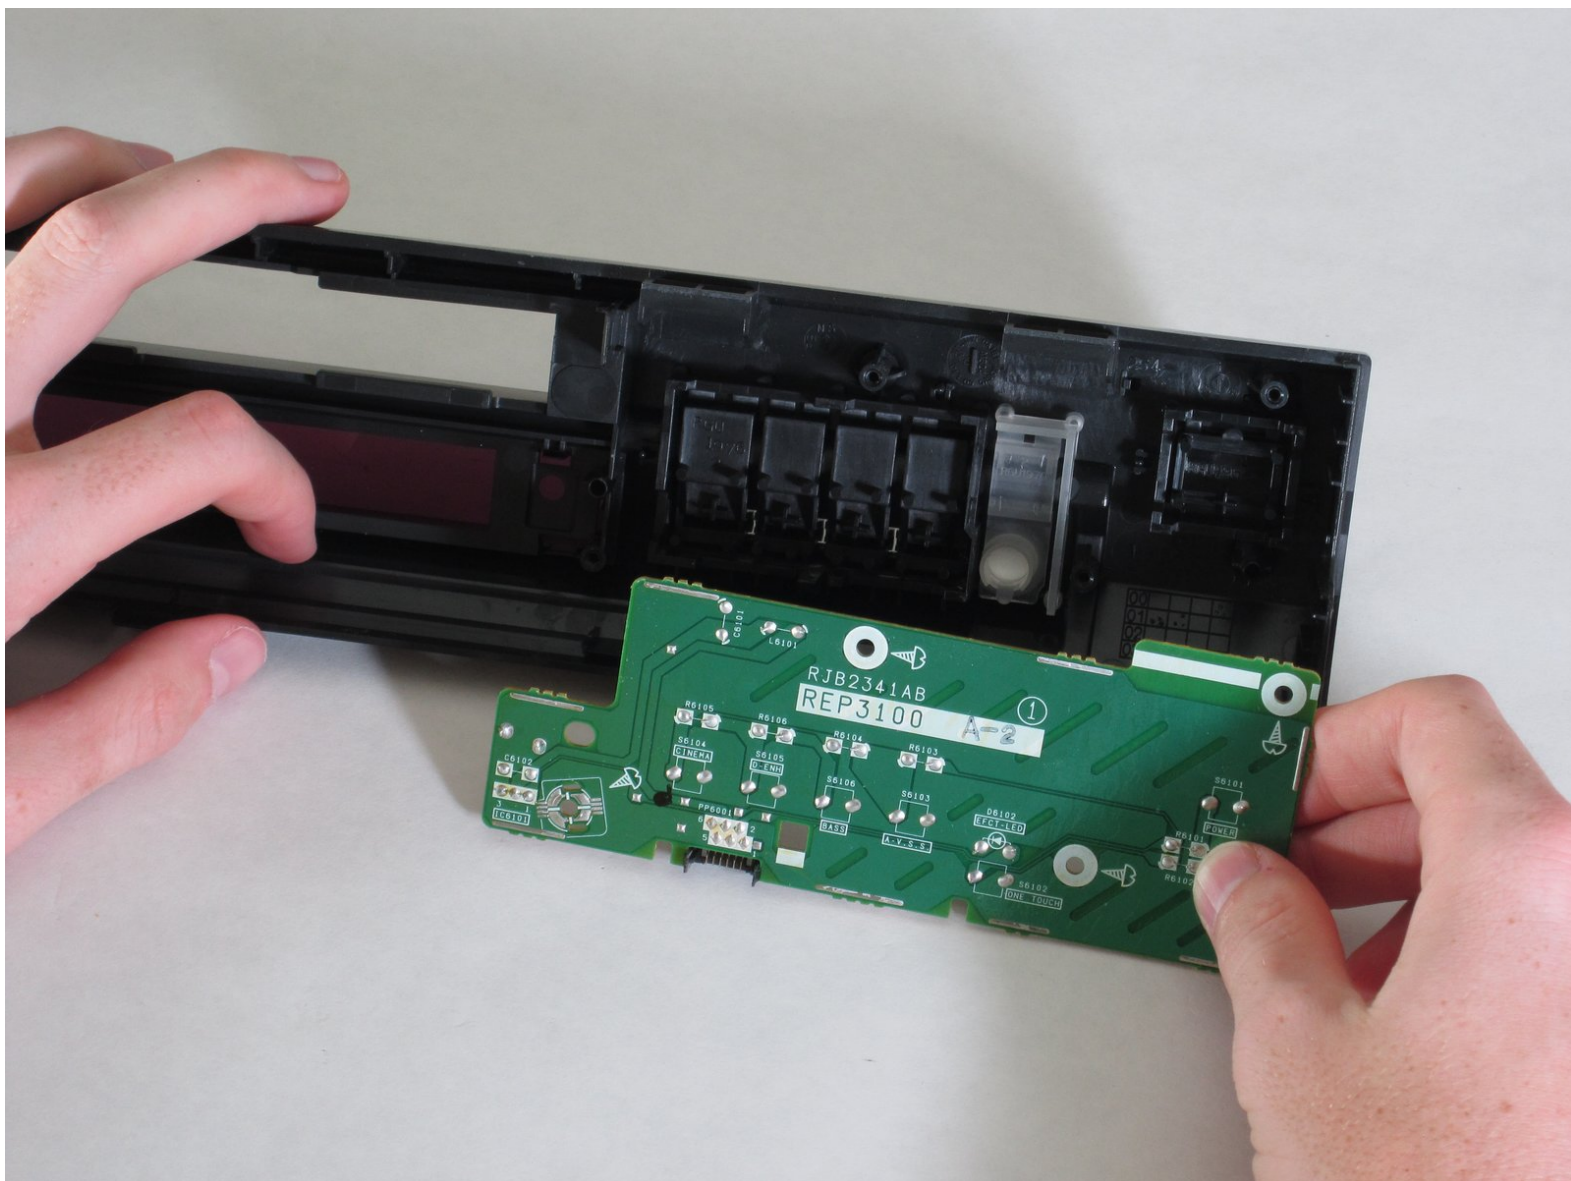

INTRODUCTION

Use this guide to remove the right function board from the front panel of the DVD player.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Disk Tray Cover



- Eject the disk tray from the DVD player before removing power supply.

Step 2



- Evenly lift upward on the disk tray front cover (not slanted, as pictured). This will allow for easier disassembly of the player.

Step 3 — Outer Case




- Remove the three screws running along the back edge of case cover.
- Remove the two screws from each side of the case cover.

Step 4




- Grab edges of the cover with your hands. Pull outward slightly, then straight up.

Step 5 — Front Panel

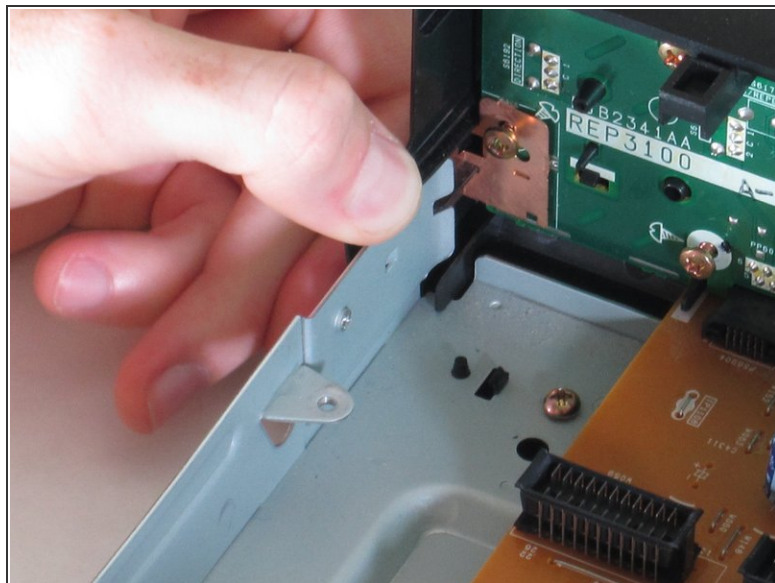


- Lift up the five tabs securing the front panel to the chassis. There are three on the bottom, and two on the inside edges of the panel. Panel should then lift off the player.

Step 6 — Right Function Board

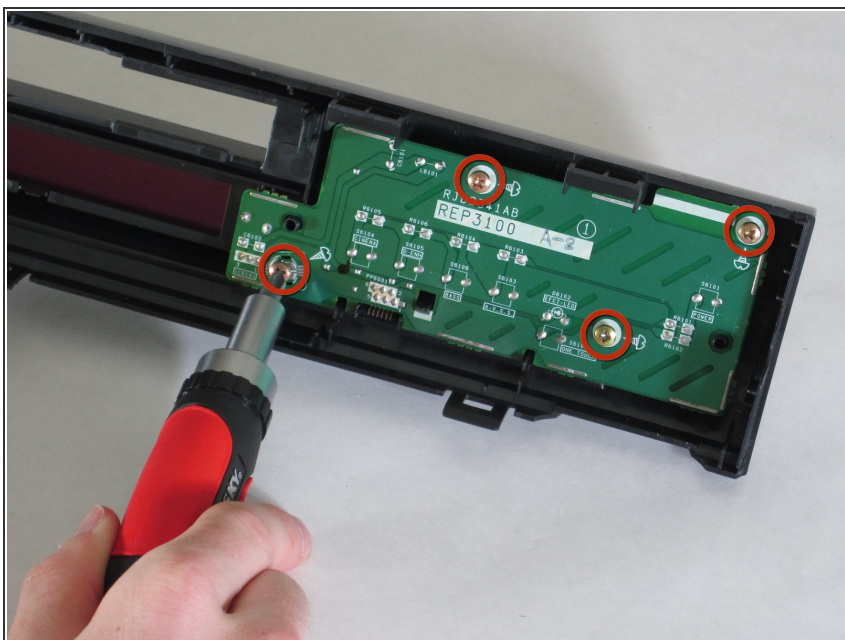

- Remove 4 screws as shown.

Step 7

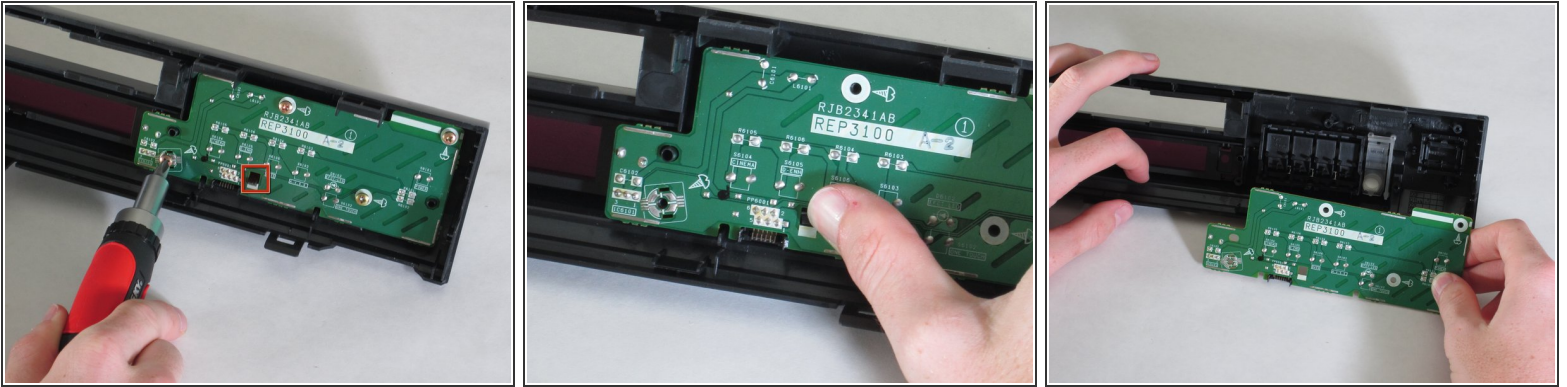

- Push in plastic retainer tab on board.
- Grasp edges of board and pull out.

To reassemble your device, follow these instructions in reverse order.