




Amazon Fire HD 10 Rear Facing Camera Replacement

You will need to use the screen replacement...

Written By: Jaie Hillery

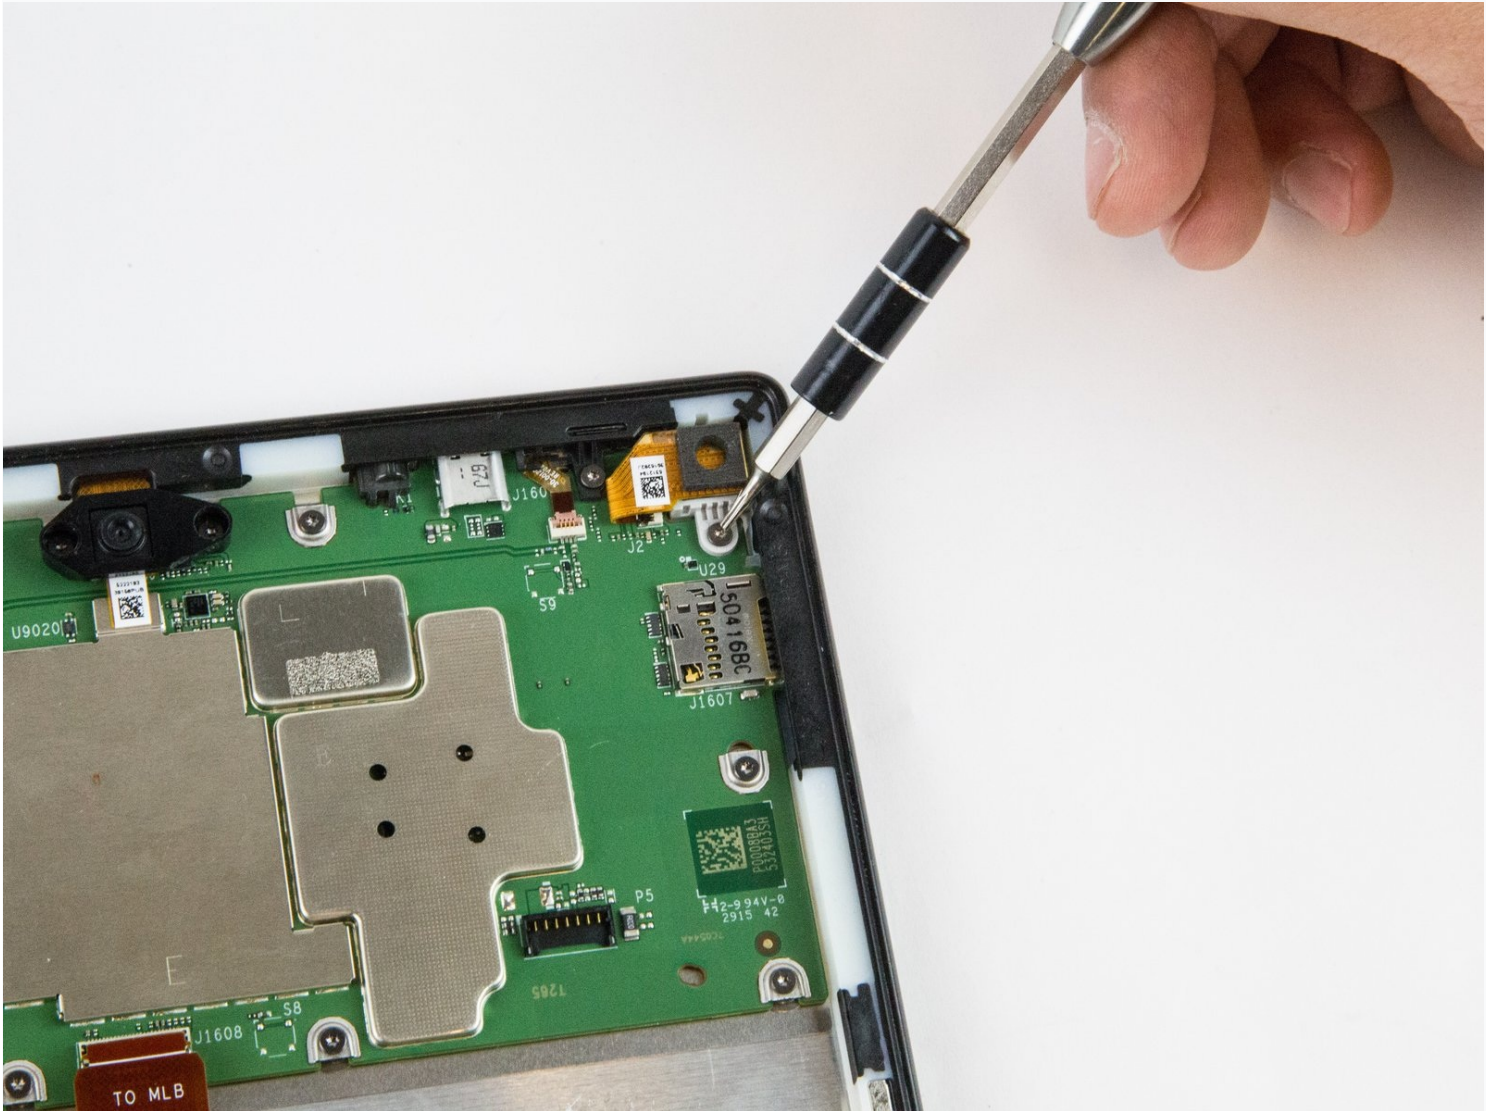

INTRODUCTION


You will need to use the screen replacement guide as a prerequisite.

TOOLS:

[iFixit Opening Tool](#) (1)

[T5 Torx Screwdriver](#) (1)


Step 1 — Screen

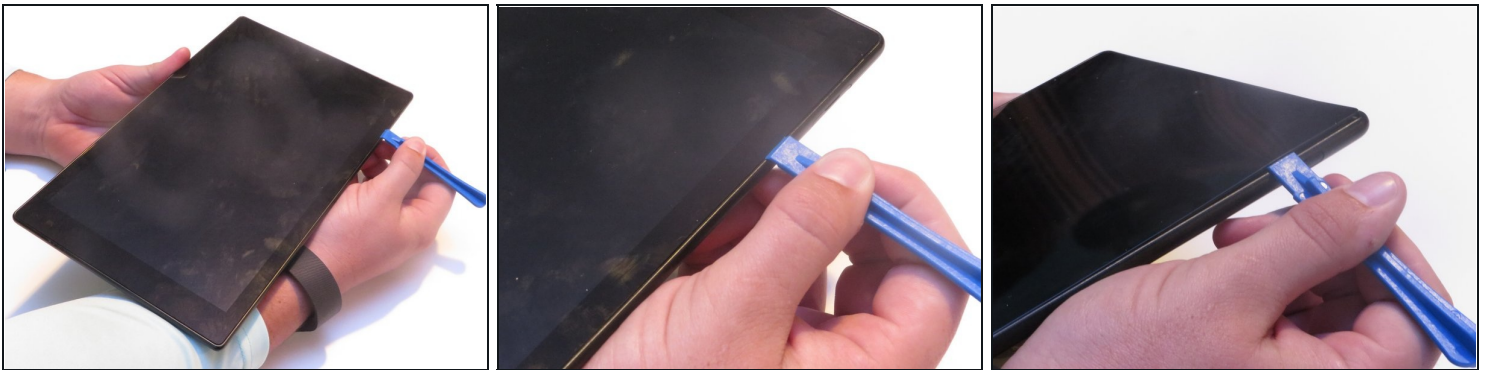

 **Avoid prying near bottom right hand side due to LCD Connector**

- Use a plastic opening tool to pry the screen up in the right hand corner.

Step 2

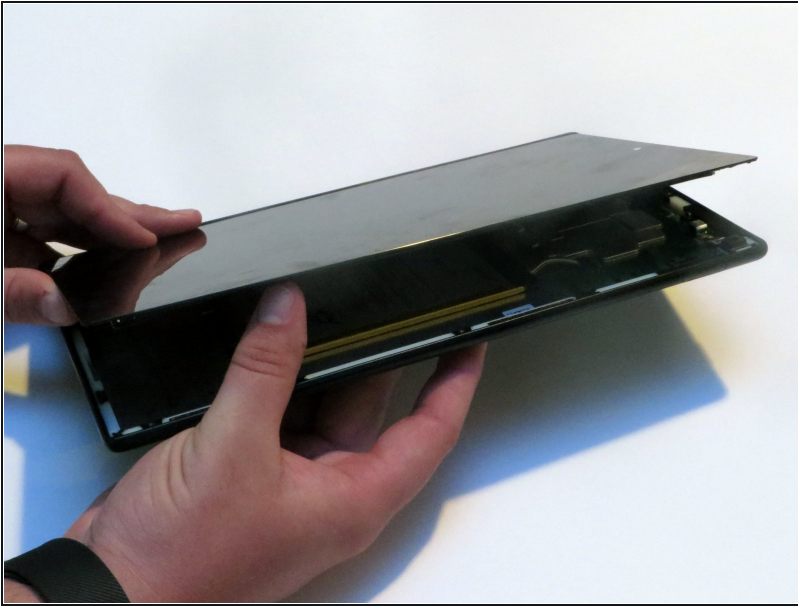

⚠ Do not completely remove the screen yet as there is a ZIF connector connected.

- Lift the screen and digitizer from the case.
- ⓘ You may need to use some force due to the glue.

Step 3



ⓘ Be mindful of the ZIF connector.



- Disconnect the ribbon connector from the digitizer side using your hands or the plastic opening tool.

Step 4




- Remove the screen and digitizer from the case completely.

Step 5 — Rear Facing Camera

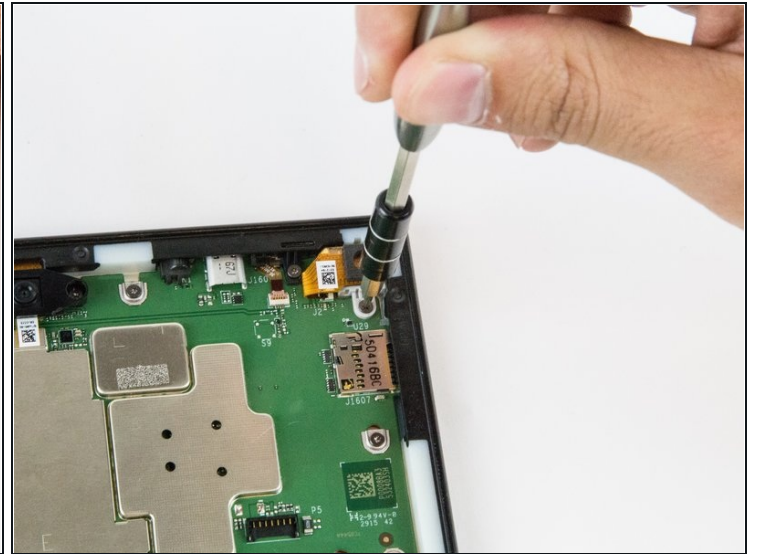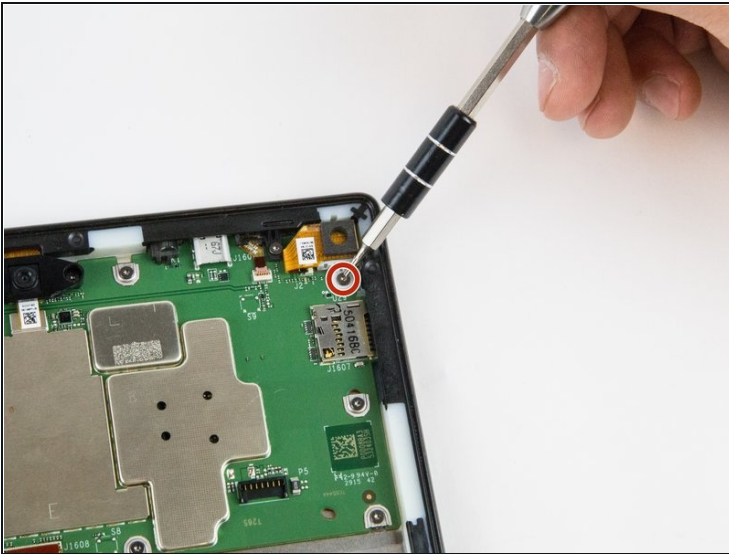


- Remove the single T5 Torx screw at the base of the camera.
- ☒ Once removed, place the screw aside in a safe location.

Step 6

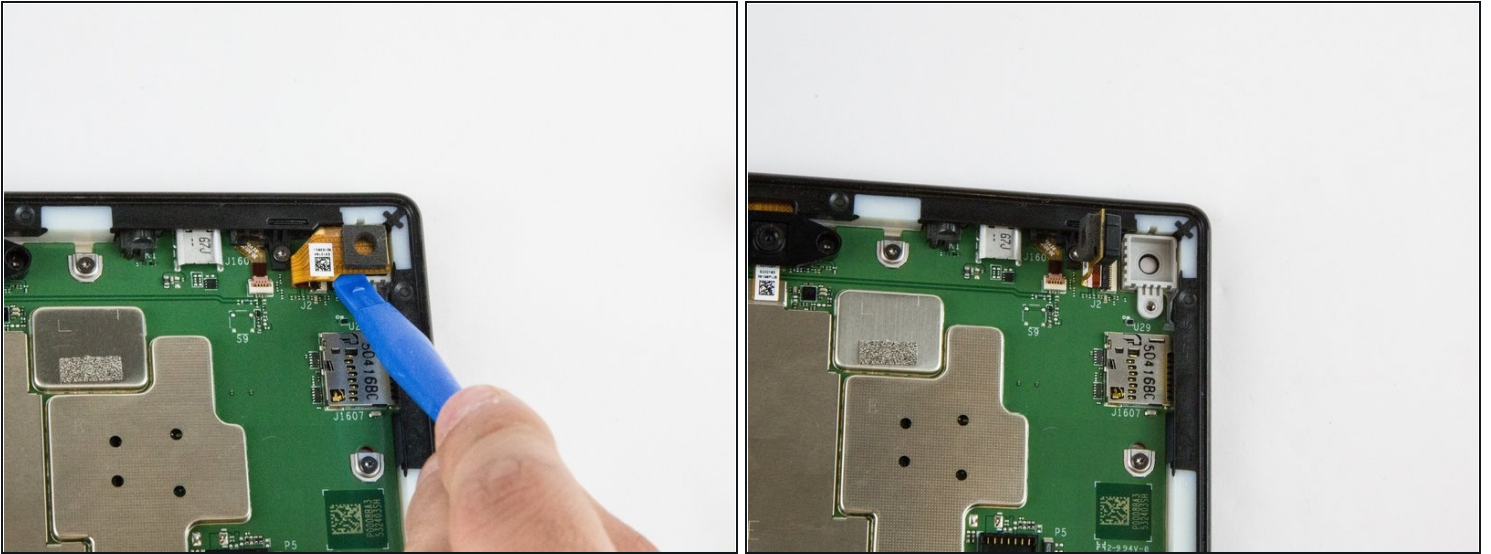

- Lift the camera from the case using the plastic opening tool.
- ⓘ The camera is still connected to the motherboard via the ZIF connector.

Step 7

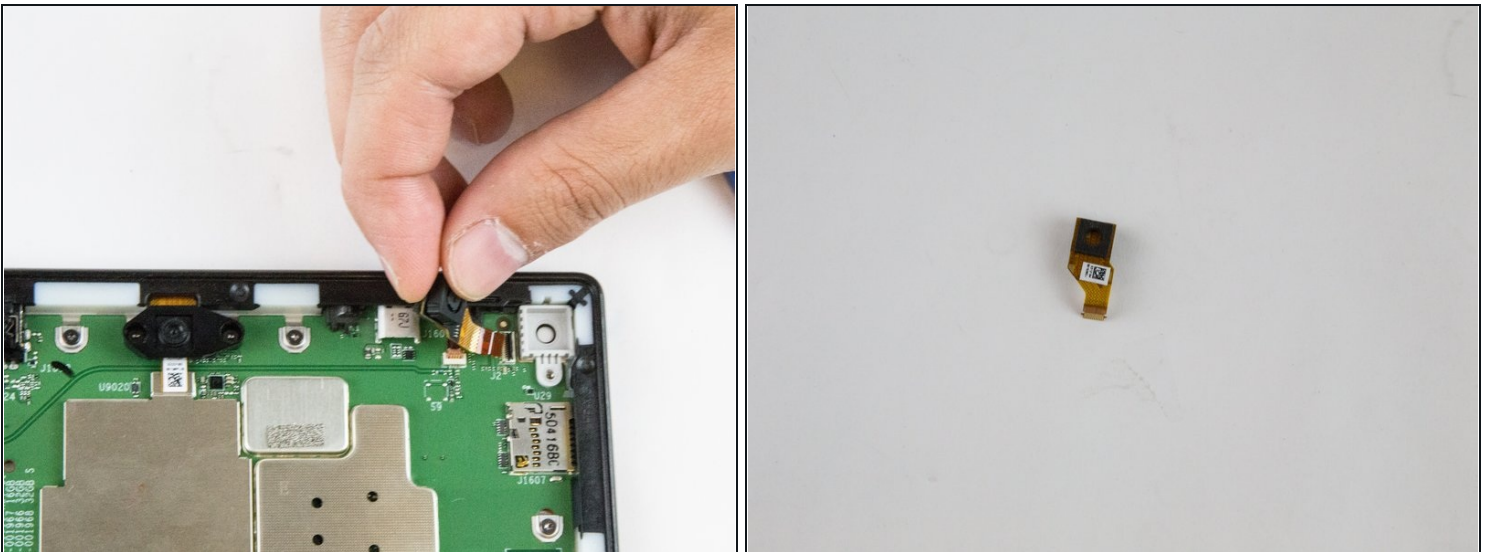

- Gently grab the camera and pull to remove.
- The camera is now free from the motherboard.

To reassemble your device, follow these instructions in reverse order.

