


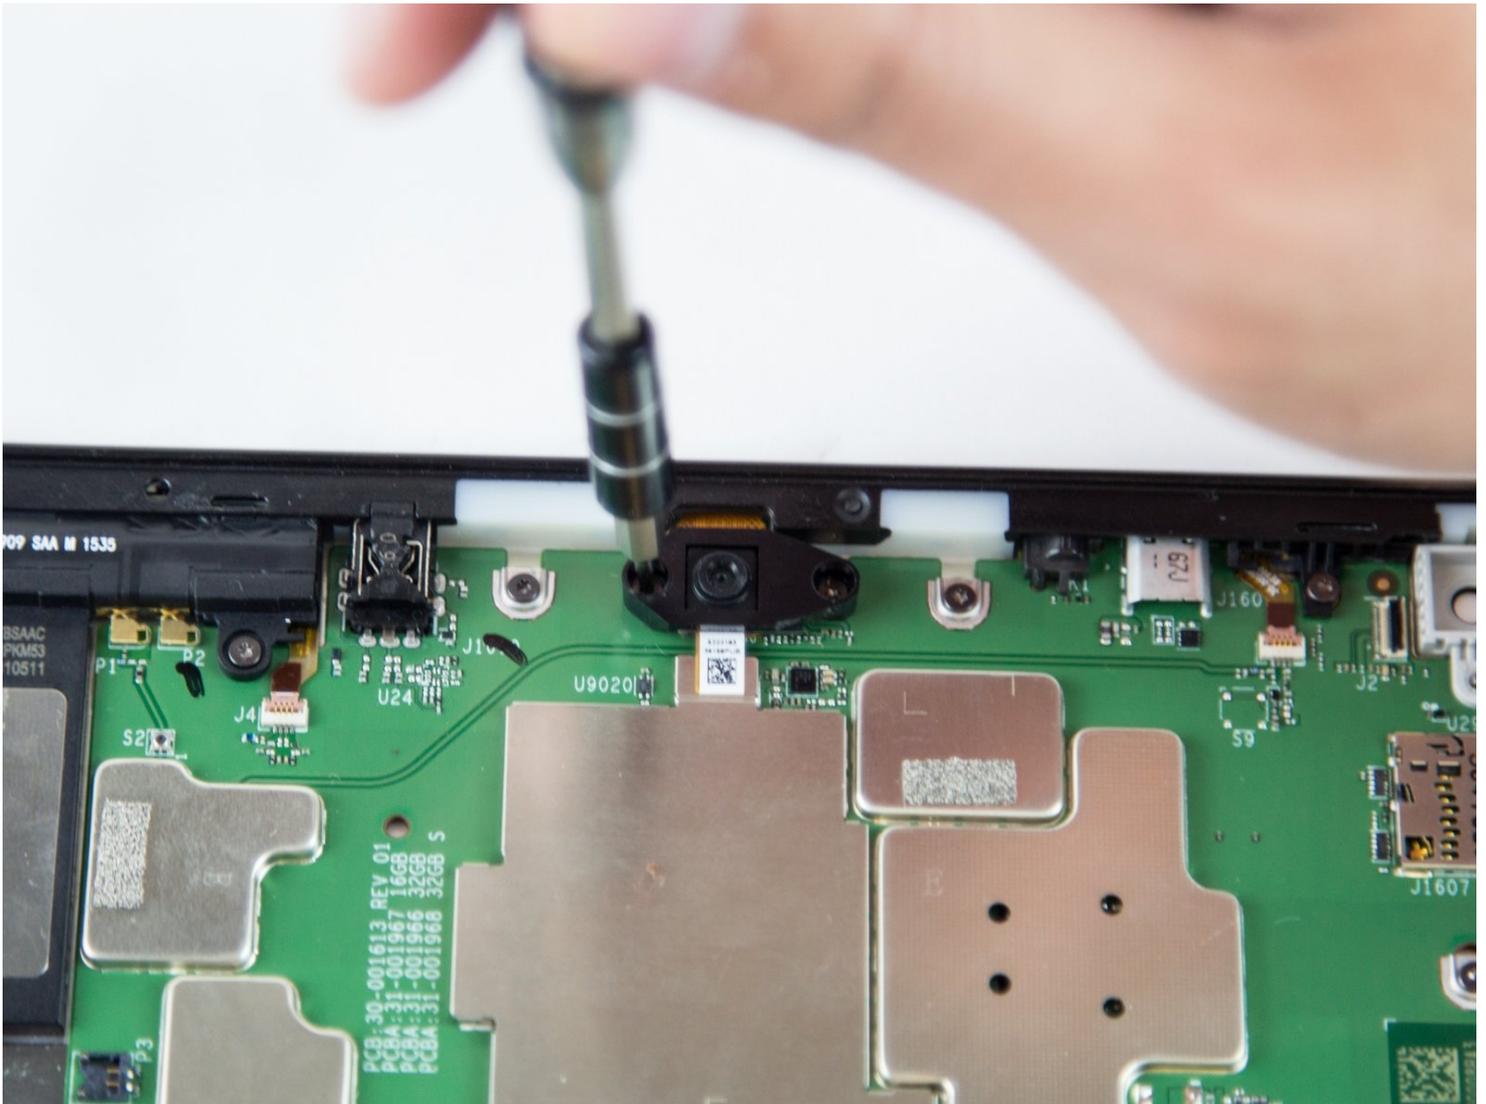

Amazon Fire HD 10 Front Facing Camera Replacement

You will need to use the screen replacement...

Written By: Jaie Hillery



INTRODUCTION


You will need to use the screen replacement guide as a prerequisite.

TOOLS:

iFixit Opening Tool (1)

T5 Torx Screwdriver (1)


Step 1 — Screen

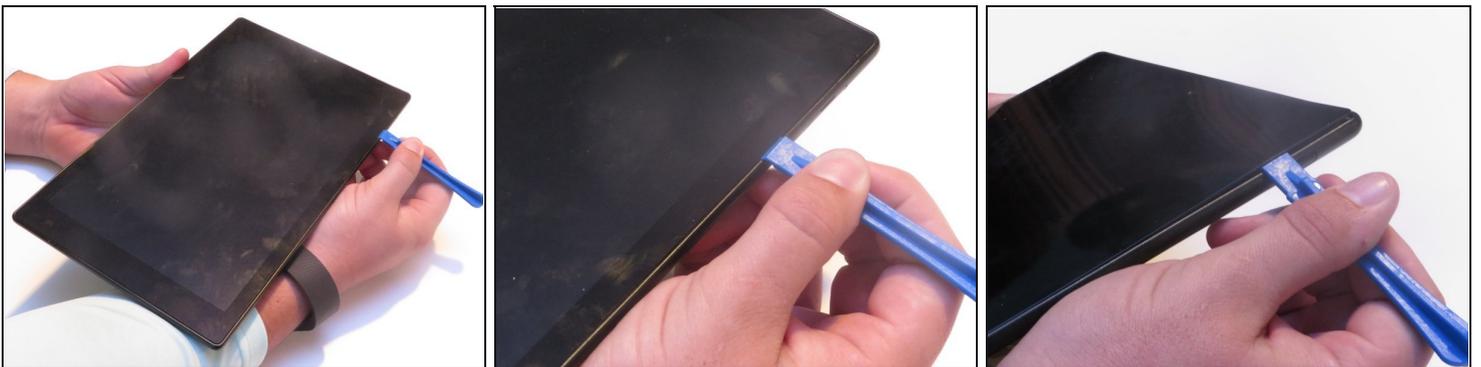

 **Avoid prying near bottom right hand side due to LCD Connector**

- Use a plastic opening tool to pry the screen up in the right hand corner.

Step 2

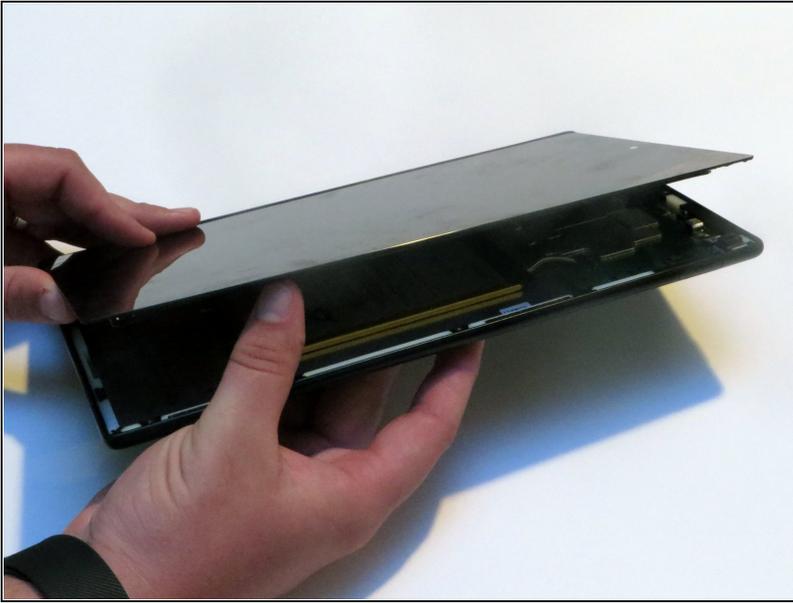

⚠ Do not completely remove the screen yet as there is a ZIF connector connected.

- Lift the screen and digitizer from the case.
- ⓘ You may need to use some force due to the glue.

Step 3



ⓘ Be mindful of the ZIF connector.




- Disconnect the ribbon connector from the digitizer side using your hands or the plastic opening tool.

Step 4





- Remove the screen and digitizer from the case completely.

Step 5 — Front Facing Camera

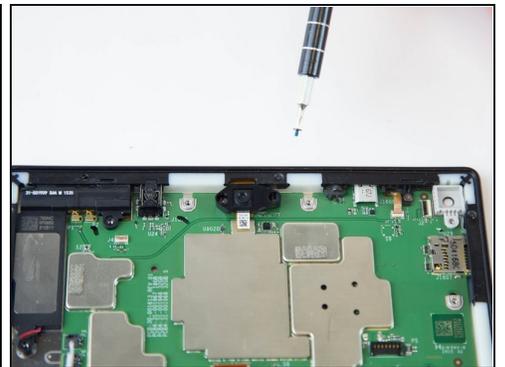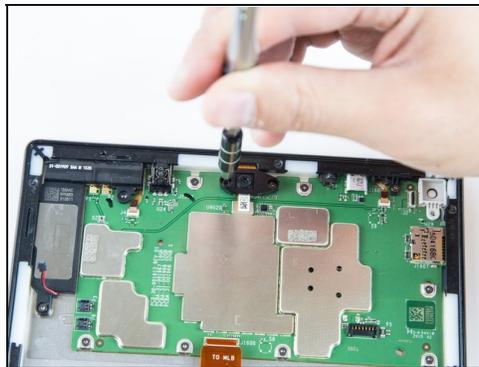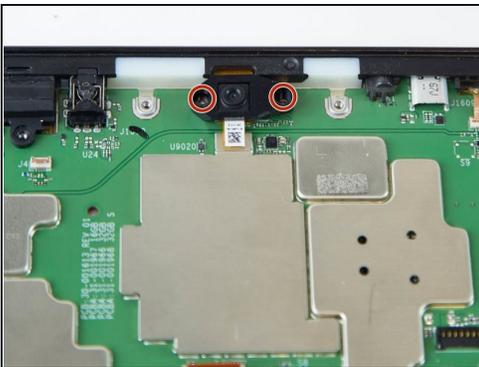



- Remove the two screws from front facing camera using the T5 Torx Screwdriver.
- ⓘ Make sure you place the screws in a safe location nearby.

Step 6

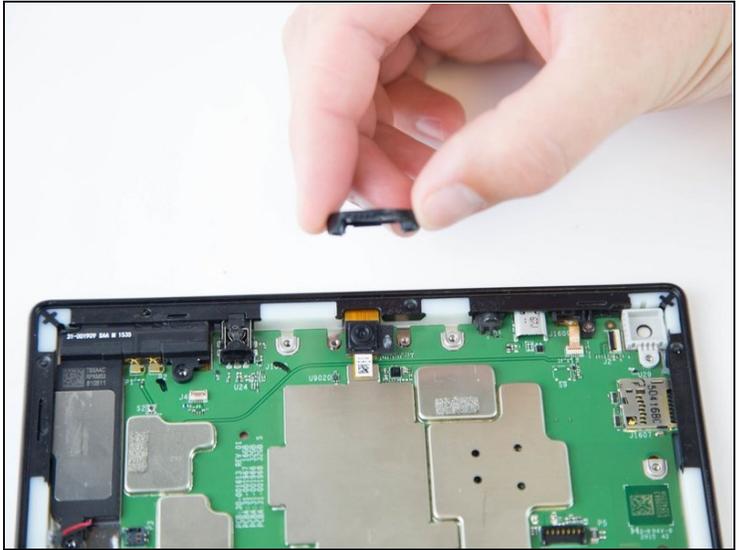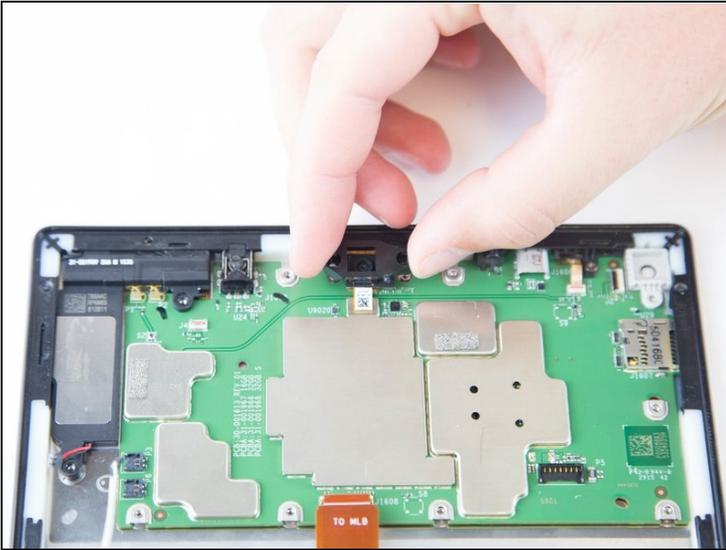

- Lift the black plastic cover once the screws are removed.
- Place aside for later reassembly.


Step 7

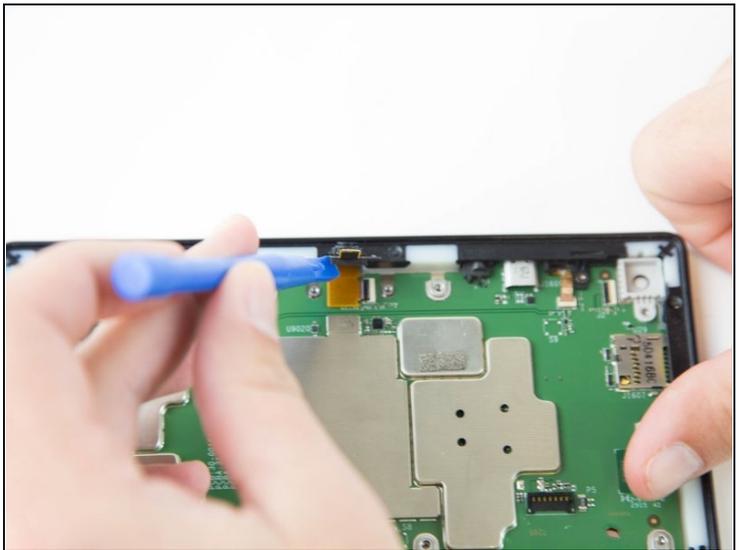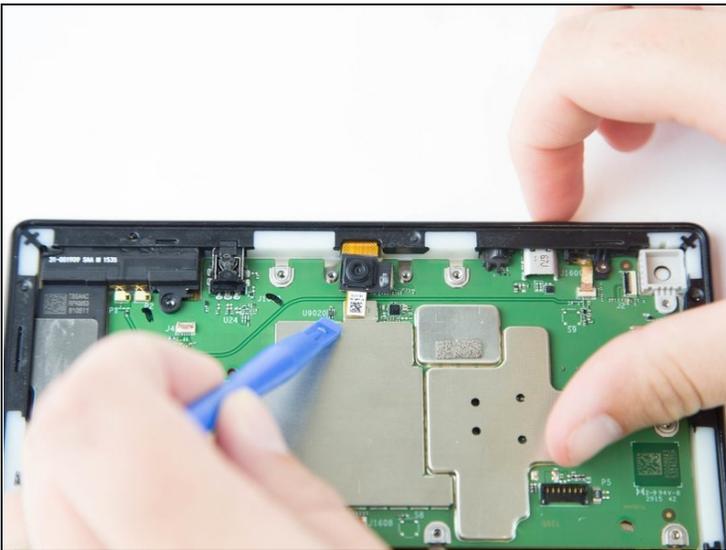

- Detach the connector using a plastic opening tool or spudger.

⚠ The camera is still connected to the motherboard.

Step 8

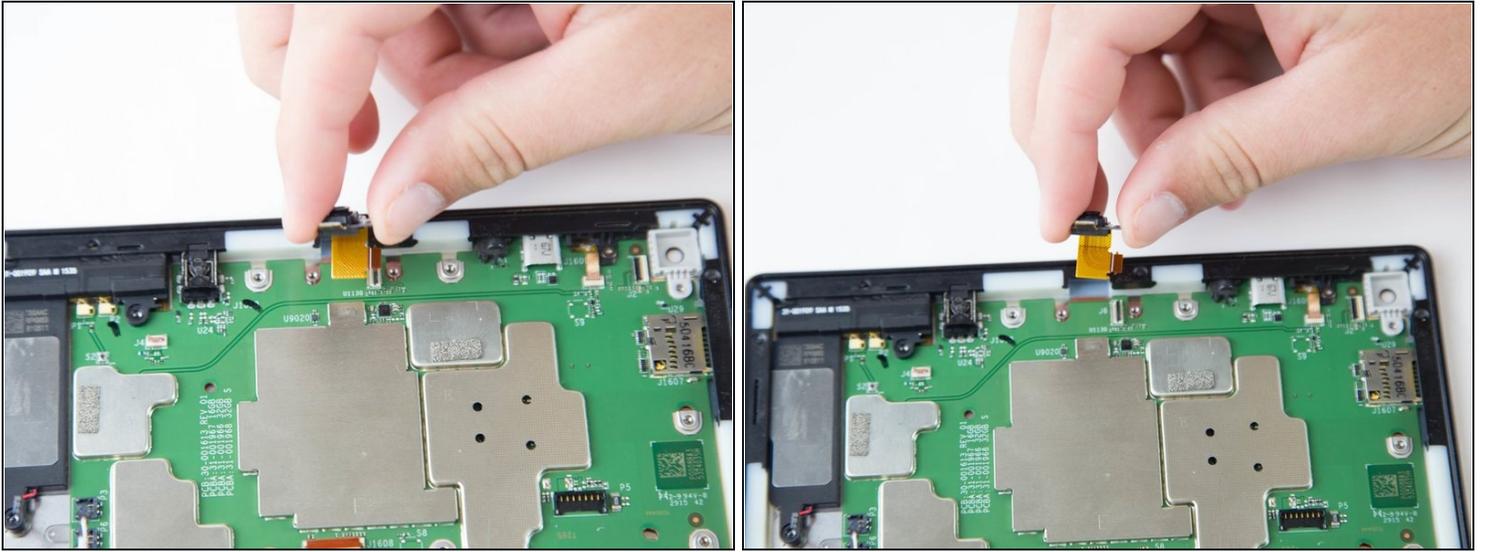

- Grip the camera and lift up to detach the ZIF connector from the motherboard.

To reassemble your device, follow these instructions in reverse order.