




Amazon Fire HD 10 Screen Replacement

Before you begin, make sure the device is off...

Written By: Jaie Hillery

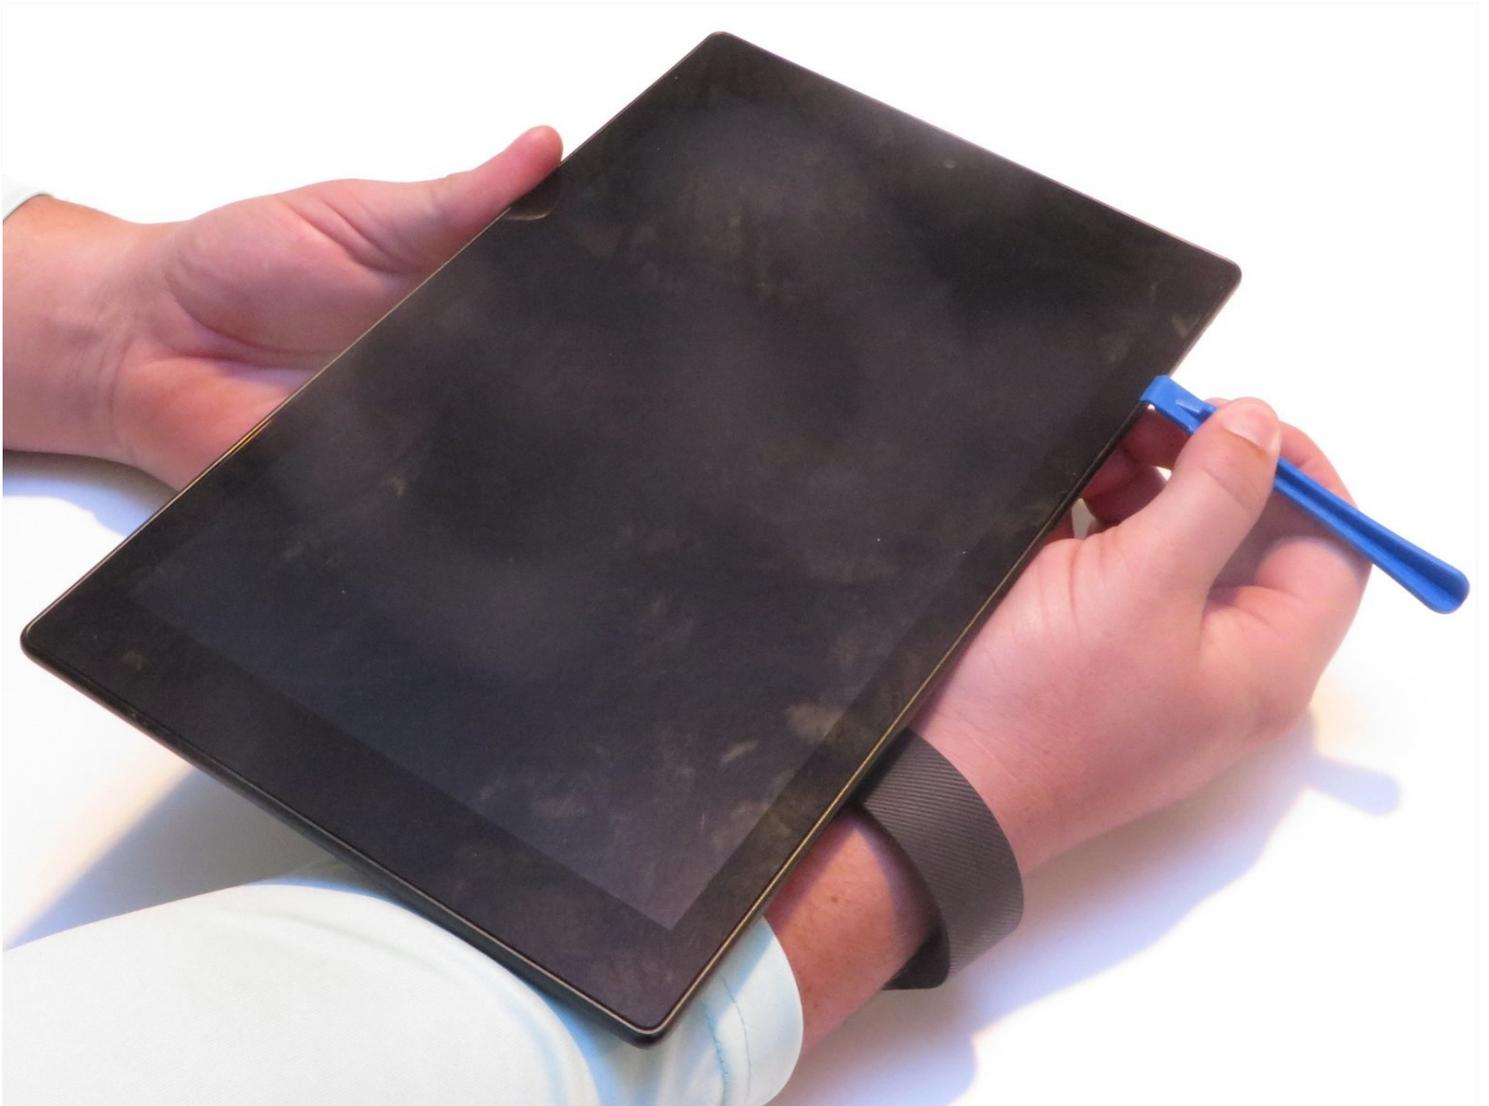

INTRODUCTION

Before you begin, make sure the device is off. The screen and digitizer will come off as one connected component.


TOOLS:

[iFixit Opening Tool](#) (1)

PARTS:

[Amazon Fire HD 10 \(5th Gen\) Screen](#)
(1)


Step 1 — Screen

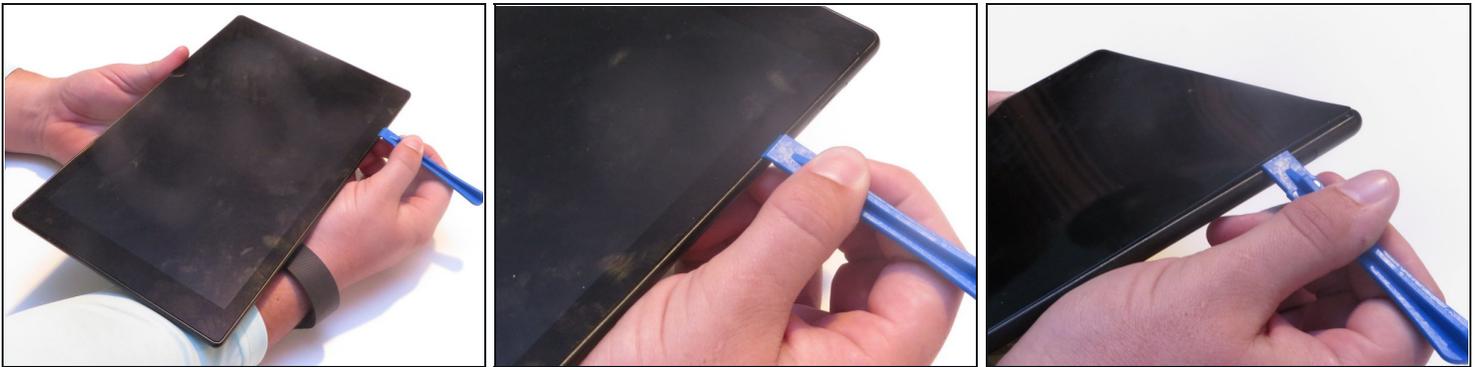

 **Avoid prying near bottom right hand side due to LCD Connector**

- Use a plastic opening tool to pry the screen up in the right hand corner.

Step 2

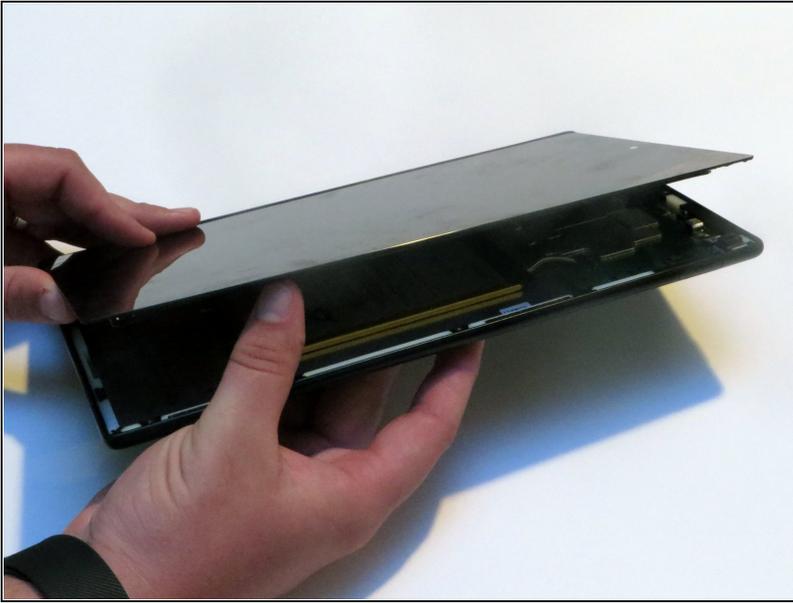

⚠ Do not completely remove the screen yet as there is a ZIF connector connected.

- Lift the screen and digitizer from the case.
- ⓘ You may need to use some force due to the glue.

Step 3



ⓘ Be mindful of the ZIF connector.

- Disconnect the ribbon connector from the digitizer side using your hands or the plastic opening tool.

Step 4



- Remove the screen and digitizer from the case completely.

To reassemble your device, follow these instructions in reverse order.