



# Dell Inspiron 5100 PP07L Screen Replacement

You will be able to access wires connecting...

Written By: May Chauvin



# INTRODUCTION

You will be able to access wires connecting your screen and replace it if needed.

---

## TOOLS:

Phillips #1 Screwdriver (1)

Spudger (1)

---

## Step 1 — Keyboard



- Remove battery
- Open screen so that it lies flat.

## Step 2




- Starting from the right side of the hinge cover, use the flat end of the spudger to pry up the hinge cover and gently remove it.

## Step 3



- Using a Phillips screwdriver remove the four M2 x 3-mm screws holding in the keyboard.

## Step 4

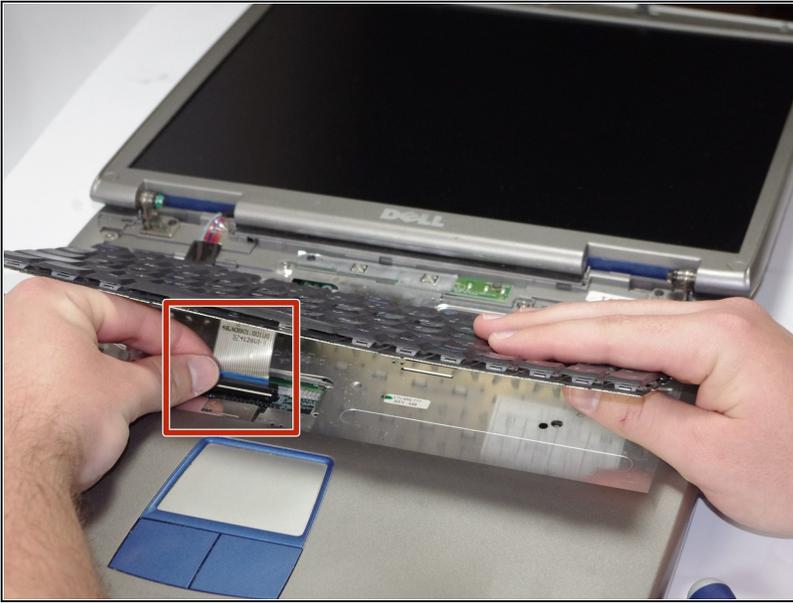


- Lift keyboard and detach the interface connector.
- ⓘ Take extra care when removing and handling the keyboard. The key caps on the keyboard are fragile and easily come off.

## Step 5 — Screen



- Using a Phillips screwdriver remove the two screws (5.8mm) located at the rear of the laptop.

## Step 6

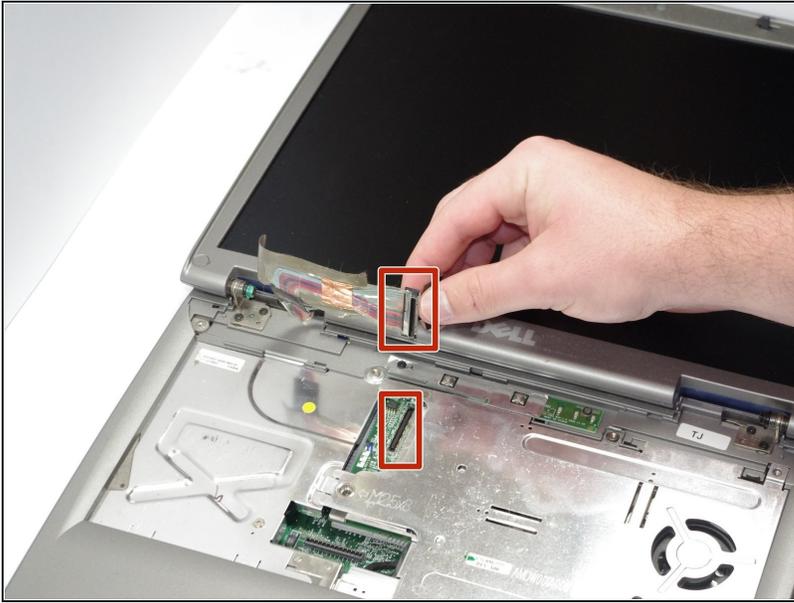

- Detach the screen connector.

## Step 7



- Using a Phillips screwdriver remove the four screws (5.8 mm) located at hinges of the screen.

## Step 8



- Lift and remove display screen.

---

To reassemble your device, follow these instructions in reverse order.