



Nikon Coolpix AW130 Front Panel Replacement

If the colored face of your Nikon Coolpix AW130 is bent or scratched, use this repair guide to replace the front face.

Written By: Lauren Stepp



INTRODUCTION

Removing the front face is necessary if the colored plate is damaged. This process is also a prerequisite for various other repairs.

TOOLS:

- [T4 Torx Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Battery



- Using your thumb and pointer finger, open the card/battery hatch by pressing the center button of the wheel and turning the entire wheel to the left.

☑ When reassembling, you must turn this wheel to the right until it clicks.

Step 2



- You should feel the door begin to loosen. Carefully pull the hatch open.

Step 3



- Push the yellow battery/charger compartment tab up using your thumb nail.

Step 4



- After pressing the yellow tab, the battery should loosen.
- Slowly pull the battery completely out.

Step 5 — Front Panel



- Using the T4 Torx Screwdriver, remove the 2, 4mm screws holding the N-Mark plate in place.
- Carefully pull the plate off of the face.

Step 6



- Using the metal spudger tool, pry the colored face from the camera body.

⚠ Avoid bending or scratching the front face.

To reassemble your device, follow these instructions in reverse order.