



# Nikon Coolpix AW130 Back Panel Replacement

If the LCD screen is cracked or the back wheel buttons are faulty, it is necessary to remove the back panel.

Written By: Lauren Stepp



---

## INTRODUCTION

This guide provides instruction for safely exposing the LCD screen and internal guts of the Nikon Coolpix AW130.

---

### TOOLS:

- [T5 Torx Screwdriver](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Battery



- Using your thumb and pointer finger, open the card/battery hatch by pressing the center button of the wheel and turning the entire wheel to the left.

☑ When reassembling, you must turn this wheel to the right until it clicks.

## Step 2



- You should feel the door begin to loosen. Carefully pull the hatch open.



### Step 3




- Push the yellow battery/charger compartment tab up using your thumb nail.

### Step 4



- After pressing the yellow tab, the battery should loosen.
- Slowly pull the battery completely out.

## Step 5 — Back Panel

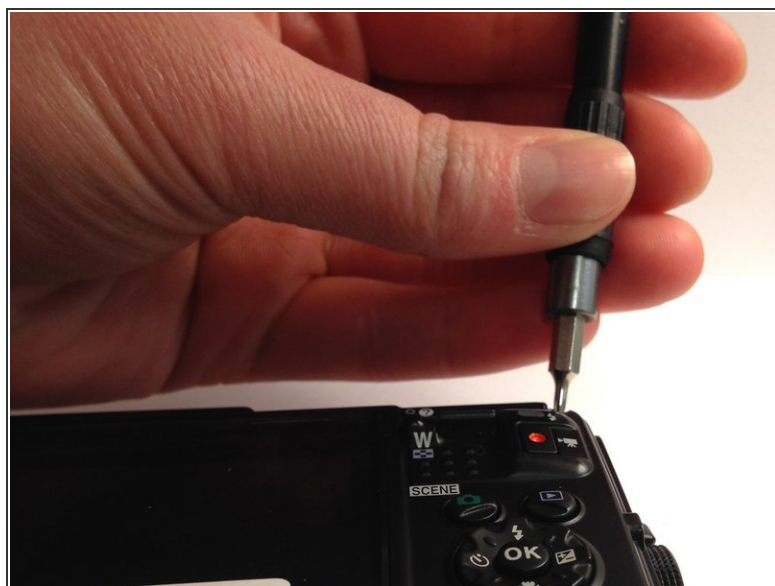

- Using the T5 Torx screwdriver, remove all four 4mm screws.

## Step 6



- Using a Phillips #000 screwdriver, remove the single 3mm screw found inside the battery/charging compartment.



## Step 7



- Remove the upper cover (connected by glue) and unscrew the single Philips screw.

## Step 8



- Remove two Philips screws from the bottom cover, lift gently the cover and remove the single Philips screw under it.

## Step 9



- Carefully remove the back cover from the camera body.

To reassemble your device, follow these instructions in reverse order.