



Black and Decker SS12C Battery Replacement

If you are having battery problems and need to...

Written By: Dalton Johnson



INTRODUCTION

If you are having battery problems and need to replace yours, this is the guide that will show you the simple steps to access and replace your Black and Decker drill battery.

TOOLS:

T10 Torx Security Bit Screwdriver (1)

Step 1 — Battery



- Detach the battery unit from the drill by pressing down on the battery release button and pulling the battery towards you.

Step 2




- Now that the battery component is detached, remove the 4 screws indicated [16mm].
- Remove each screw with the T10 Torx Security Bit Screwdriver by turning counterclockwise.

Step 3



- Now that the screws are detached, separate the two sides of the battery.

Step 4

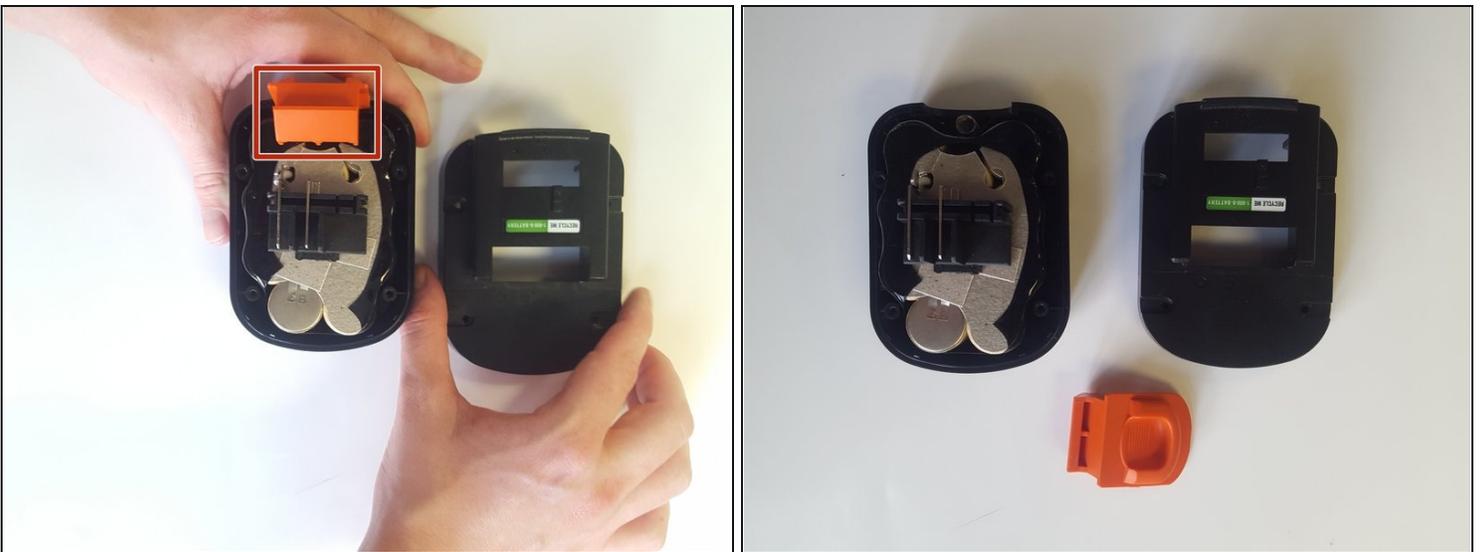

- Remove the highlighted, orange component and set aside.

Step 5



- Grip the battery pack and detach it from the casing by pulling it upward.

⚠ Spring may fall out during the process.

To reassemble your device, follow these instructions in reverse order.