



Samsung Impression Back Speaker Replacement

How to remove & replace the phone's back speaker.

Written By: Ross McKelvie



INTRODUCTION

How to remove & replace the phone's back speaker.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Orient the phone with the screen facing down.
- Using your thumb, slide the back panel away from the camera to expose the battery.

Step 2




- Insert the tip of the spudger on the left side of the battery, opposite the direction of the white arrow.
- Pry the battery free. It will pivot in the direction of the white arrow.

Step 3 — Back Cover



- Remove the six 3.5 mm screws using a Phillips #000 screwdriver. Make sure to unscrew in a counterclockwise direction.

Step 4

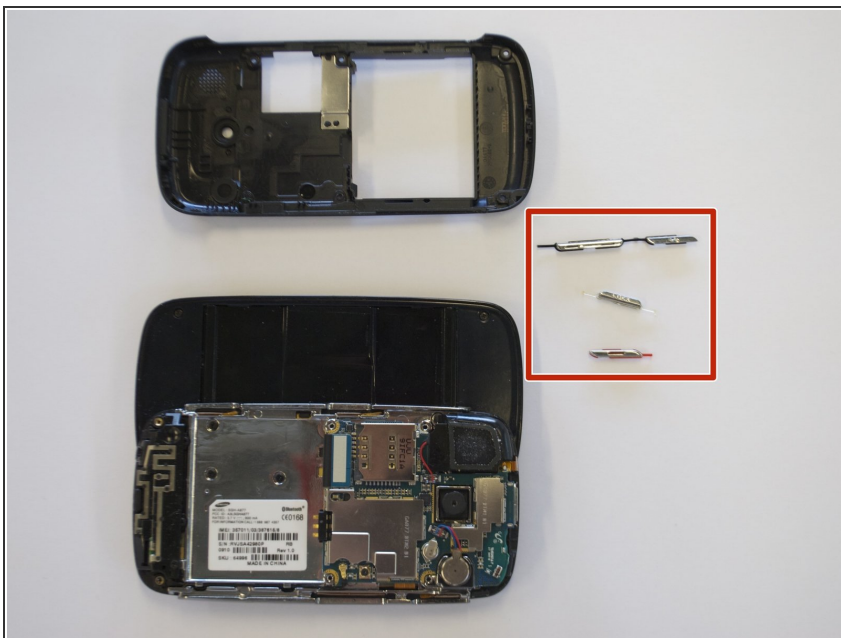

- Remove the back cover by gently prying around the top and bottom edges with the spudger.
 - ⓘ It may help to slide the touchscreen upwards when removing the back panel.
- The side buttons will become loose and will fall out, so put these in a safe place.

Step 5 — Back Speaker



- Remove the back speaker by carefully prying it upwards with the spudger.
- The speaker will still be attached to the circuit board by a wire and a small piece of clear plastic.
- Disconnect the speaker by lifting the clear plastic piece at the end of the wire.

To reassemble your device, follow these instructions in reverse order.