




Kodak S100 EF Back Cover Replacement

This will guide in removing the back cover to get inside the Kodak S100 EF.

Written By: Michelle

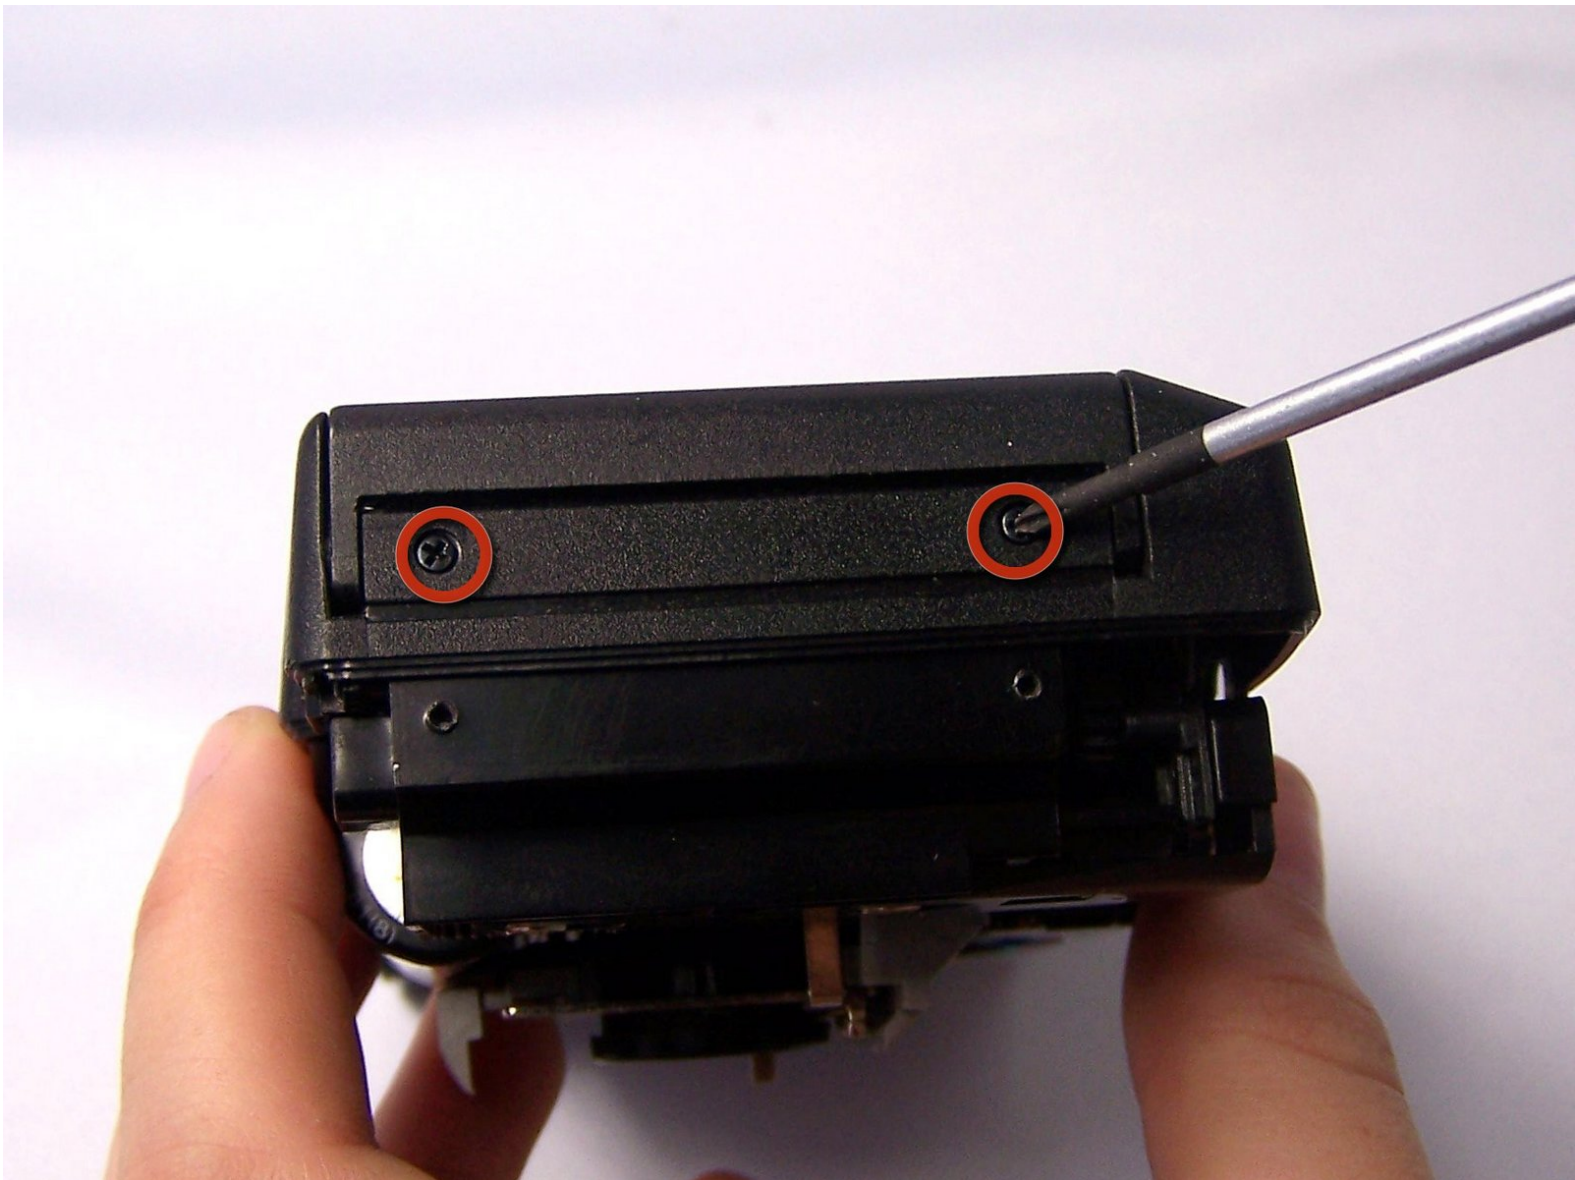

INTRODUCTION



Use this guide to replace the back cover.



TOOLS:

- [64 Bit Driver Kit](#) (1)
-

Step 1 — Back Cover

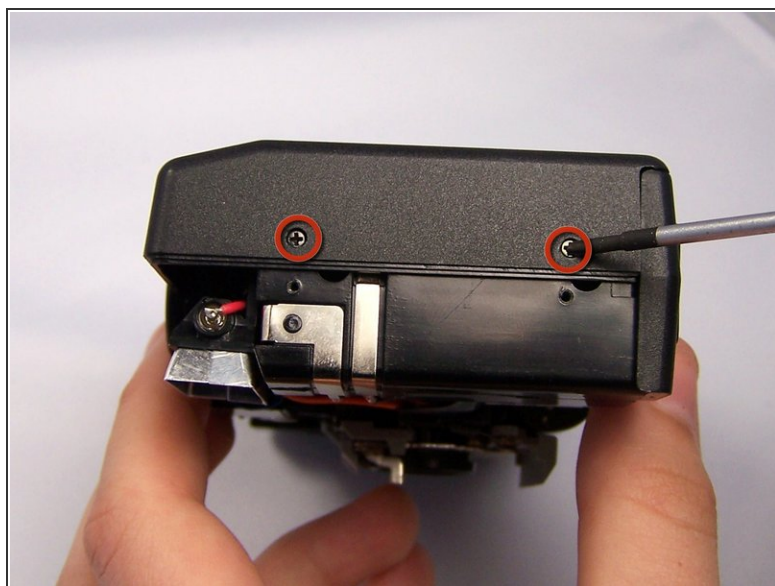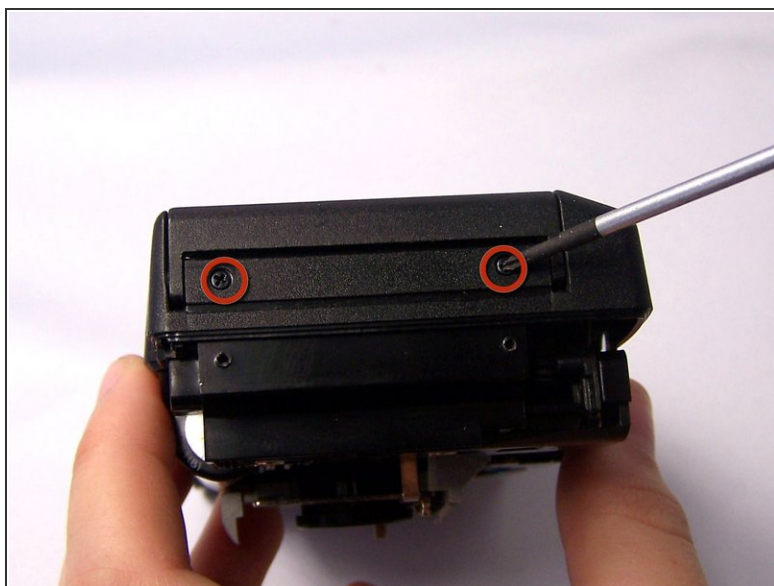

- Remove the two 6.2mm Phillips screws on both sides of camera's back cover.

Step 2



- ⓘ Turn camera so the bottom is facing up and the front is facing away.
- Remove the two 6.2mm Phillips screws on the bottom back cover of the camera.
- Back cover is now unscrewed and can be removed.

Step 3



- ① Have the back of the camera facing up.
- Unscrew the 6.2mm Phillips screw next to the viewfinder.
- The back cover is now unscrewed. Lift up and pull the cover off evenly.

To reassemble your device, follow these instructions in reverse order.