

Removing Minolta X-370 Film Winding Lever

This is a very simple task, only requiring a...

Written By: Nick



INTRODUCTION

This is a very simple task, only requiring a screwdriver.



TOOLS:

Phillips #00 Screwdriver (1)

Step 1 — Film Winding Lever



- Lift up the winding lever and rotate it clockwise to open the back film compartment.

Step 2



- Lift up the winding handle and remove one 3.85mm screw.
- Remove the film winding handle.

Step 3



- Pull the film winder down until it comes free.

⚠ Do not close the film compartment. The compartment will not open without the film winding lever installed properly.

To reassemble your device, follow these instructions in reverse order.